


USE AND CARE GUIDE

4-LIGHT SEMI-FLUSHMOUNT / PENDANT

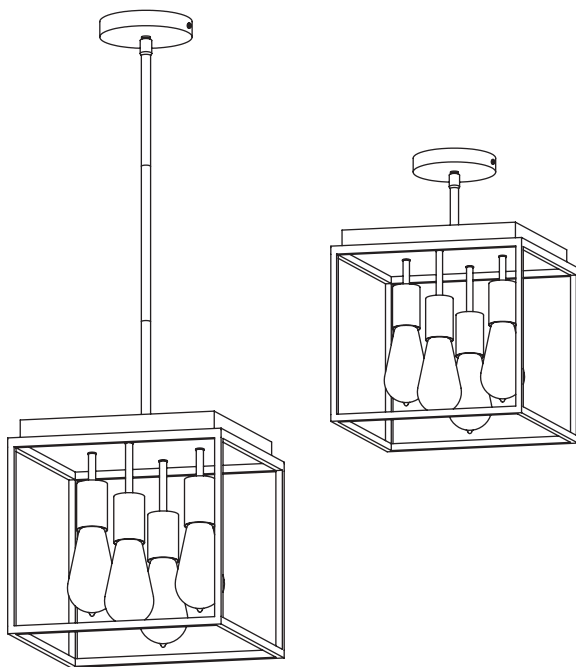

Questions, problems, missing parts? Before returning to the store,
call Home Decorators Collection Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-986-3460

WWW.HOMEDEPOT.COM/HOMEDECORATORS

THANK YOU

We appreciate the trust and confidence you have placed in Home Decorators Collection through the purchase of this 4-light semi-flushmount / pendant. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Home Decorators Collection!

Table of Contents

Table of Contents.....	2	Hardware Included.....	3
Safety Information.....	2	Package Contents.....	4
Warranty.....	2	Installation.....	5
Pre-Installation.....	3	For Pendant.....	5
Planning Installation.....	3	For Semi-Flushmount.....	7
Tools Required.....	3	Care and Cleaning	9
		Troubleshooting.....	9

Safety Information

- ❑ Read all instructions before assembling and installing.
- ❑ Consult a qualified electrician for installation of this fixture.
- ❑ If you have any non-electrical questions about this fixture, please contact our Customer Service Team at 1-800-986-3460 or visit www.homedepot.com/homedecorators.
- ❑ Please reference your SKU 1001 xxx xxx or UPC 773546xxxxx.
- ❑ Keep your receipt and these instructions for proof of purchase.



DANGER: Risk of electrical shock. Disconnect power before installation.



IMPORTANT: Inspect the wire insulation for any cuts, abrasions, or exposed copper that have occurred during shipping. If there is a defect in the wire, do not continue the installation process. Please call our Customer Service Team at 1-800-986-3460.

Warranty

LIMITED WARRANTY

WHAT IS COVERED

The manufacturer warrants this lighting fixture to be free from defects in materials and workmanship for a period of five (5) years from date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modification, alteration, neglect, or mishandling.

WHAT IS NOT COVERED

This warranty shall not apply to any product that is found to have been improperly installed, set-up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear. The manufacturer does not warrant and specially disclaims any warranty, whether express or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to any labor/expense costs involved in the replacement or repair of said product.

Contact Customer Care at 1-800-986-3460 or visit www.homedepot.com/homedecorators.

Pre-Installation


PLANNING INSTALLATION

Read all instructions before assembly and installation. To avoid damaging this product, assemble it on a soft, non-abrasive surface, such as carpet or cardboard. Inspect each part for defects that may have occurred during shipping. Keep your receipt and these instructions for proof of purchase.


TOOLS REQUIRED



Safety goggles

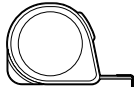


Measuring tape

 

Phillips screwdriver



 Flathead screwdriver



Wire strippers



Wire cutters



Ladder



Electrical tape

HARDWARE INCLUDED



NOTE: Hardware not shown to actual size.



— AA



— BB



— CC



— DD



— EE



— FF




— GG

Part	Description	Quantity
AA	Wire nut	3
BB	Crossbar	1
CC	Outlet box screw	2
DD	Mounting screw	2
EE	Green ground screw	1
FF	ST64 60W Edison bulb	4
GG	Short rod	1

Pre-Installation (continued)

PACKAGE CONTENTS

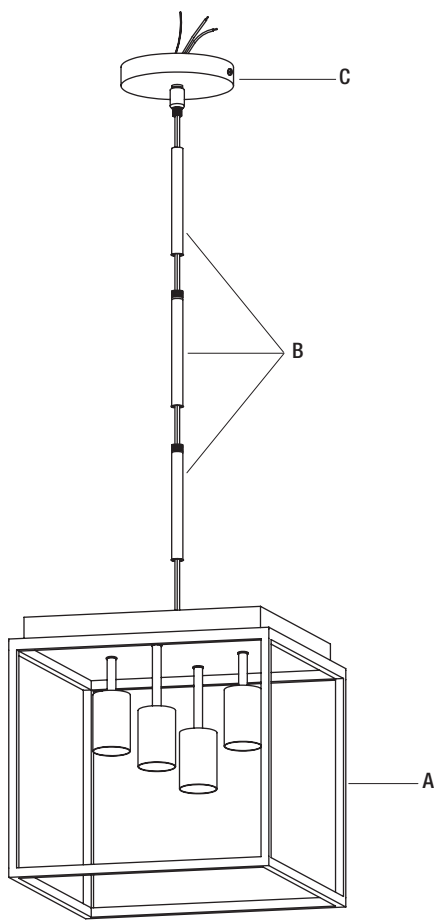


Part	Description	Quantity
A	Fixture body	1
B	Long rod	3
C	Canopy	1

Installation-For Pendant

1 Removing the crossbar

- Unlock the mounting screws (DD) from the crossbar (BB) and remove the crossbar (BB) from the canopy (C).

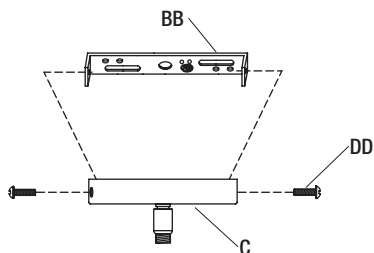


2 Installing the crossbar




WARNING: Turn the power off at the main fuse box before installation.

- Attach the crossbar (BB) to the junction box (not included) with the two outlet box screws (CC) provided.

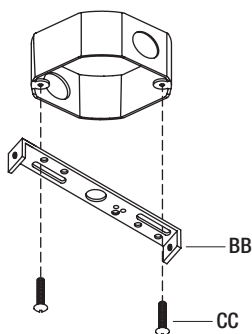

3 Installing the fixture body

- Thread the fixture wire up through a long rod (B), then tighten to the fixture body (A). Determine the desired length of the item, adding the other long rod (B) as needed.
- Thread the fixture wire from the long rod (B) up through the canopy (C), then attach the canopy (C) to the assembly until tight.

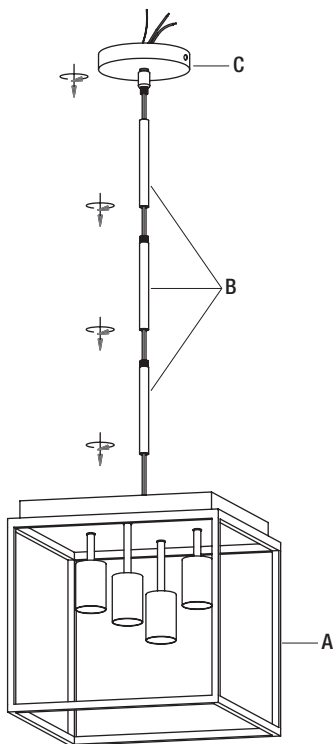


Installation-For Pendant (continued)

4 Making the electrical connections and locking the canopy




NOTE: Always use wire nuts (AA) or marrettes (included) to connect wires and push all excess wires and connections back into the junction box.

- Connect the ground wire from the branch circuit to the green ground screw (EE) on the crossbar (BB) and add 6 in. for the ground connection.
- Connect the fixture wires as follows:

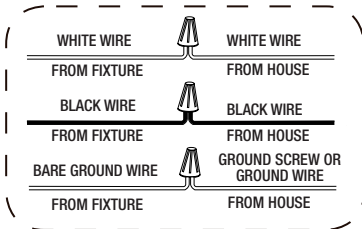

- Attach the canopy (C) to the crossbar (BB), and secure it with the mounting screws (DD).

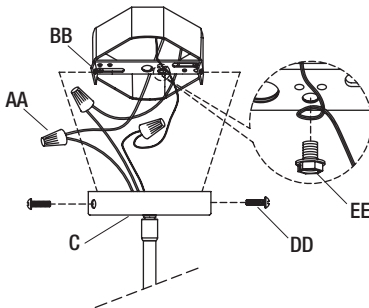


5 Installing the bulbs



CAUTION: Oil from fingers will decrease the life of the 60W max ST64 Edison bulb (included).


- With a tissue or glove (not included), install 60W max ST64 Edison bulbs (FF) into each socket of the fixture body (A).

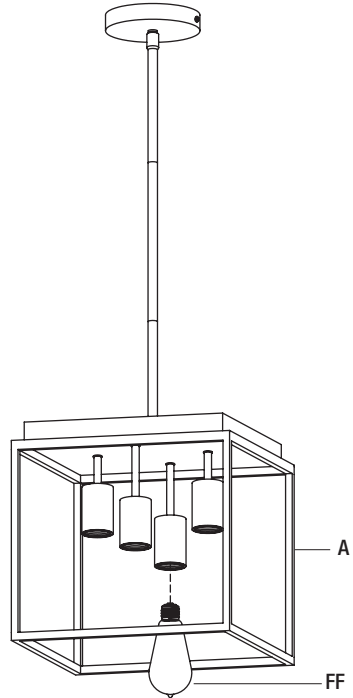

Installation-For Semi-Flushmount

1 Removing the crossbar

- Unlock the mounting screws (DD) from the crossbar (BB) and remove the crossbar (BB) from the canopy (C).

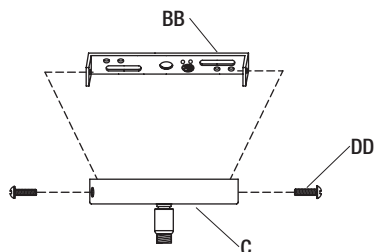


2 Installing the crossbar




WARNING: Turn the power off at the main fuse box before installation.

- Attach the crossbar (BB) to the junction box (not included) with the two outlet box screws (CC) provided.

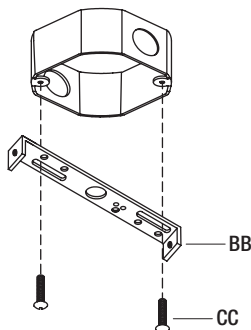


3 Installing the fixture body

- Thread the fixture wire up through the short rod (GG), then tighten to the fixture body (A).
- Thread the fixture wire from the short rod (GG) up through the canopy (C), then attach the canopy (C) to the assembly until tight.

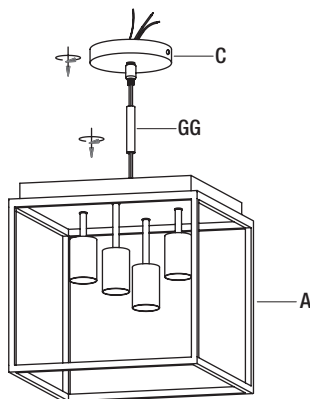

4 Cutting the fixture wire

- Pull out the fixture wire from the canopy (C).
- Keep the length of the fixture wire at least 6 in. from the center of the canopy (C) and cut the fixture wire. Then use the wire strippers (not included) to separate approximately 1/2 in. of the insulated wire.

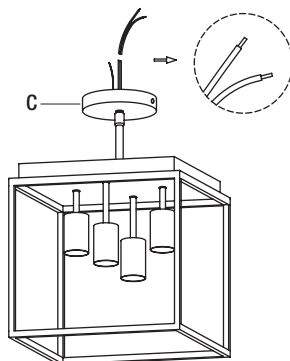


Installation-For Semi-Flushmount (continued)


5 Making the electrical connections and locking the canopy

 **NOTE:** Always use wire nuts (AA) or marrettes (included) to connect wires and push all excess wires and connections back into the junction box.

- Connect the ground wire from the branch circuit to the green ground screw (EE) on the crossbar (BB) and add 6 in. for the ground connection.
- Connect the fixture wires as follows:

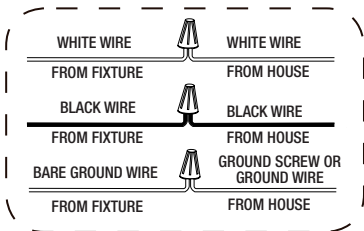

- Attach the canopy (C) to the crossbar (BB), and secure it with the mounting screws (DD).

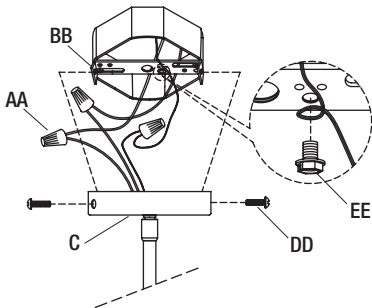


6 Installing the bulbs



CAUTION: Oil from fingers will decrease the life of the 60W max ST64 Edison bulb (included).

- With a tissue or glove (not included), install 60W max ST64 Edison bulbs (FF) into each socket of the fixture body (A).

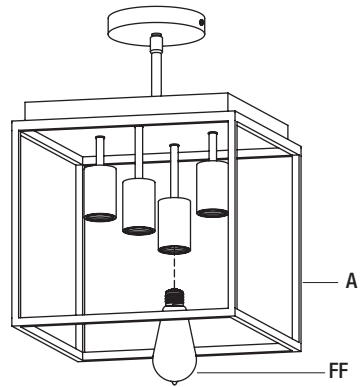

Care and Cleaning

- ☐

Clean the light fixture carefully with a soft, dry cloth. Do not use any cleaner with chemicals, solvents, or harsh abrasives.

Troubleshooting

Problem	Possible Cause	Solution
<input type="checkbox"/> The bulb will not light.	<input type="checkbox"/> The bulb is burned out.	<input type="checkbox"/> Replace the light bulb.
	<input type="checkbox"/> The power is off.	<input type="checkbox"/> Ensure that the power supply is turned on.
	<input type="checkbox"/> The circuit breaker is off.	<input type="checkbox"/> Ensure that the circuit breaker is set to the ON position.
<input type="checkbox"/> The fuse blows or the circuit breaker trips when the light is turned on.	<input type="checkbox"/> There are too many items on one circuit.	<div><input type="checkbox"/> Unplug the other items on the circuit.</div> <div><input type="checkbox"/> Contact a qualified electrician or call the Customer Service Team at 1-800-986-3460.</div>

HOME DECORATORS COLLECTION

Questions, problems, missing parts? Before returning to the store,
call Home Decorators Collection Customer Service
8 a.m. - 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-986-3460

WWW.HOMEDEPOT.COM/HOMEDECORATORS

Retain this manual for future use.