




brooklyn + max™

## **UPTON / SEVILLE / HENDRICKS**

## ACCENT CHAIR MODEL# AXCCHR-007-SLG

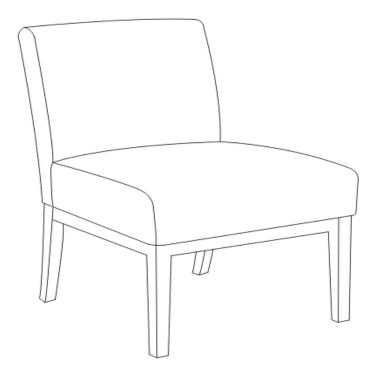



## FOR REPLACEMENT PARTS OR HELP WITH ASSEMBLY PLEASE CONTACT US AT: <u>simpli-home.com/customer-support</u> PLEASE ENSURE TO HAVE THE MODEL # FROM THE PACKAGING OR INSTRUCTION BOOKLET

## TO RETURN THE PRODUCT: PLEASE CONTACT THE RETAILER WHERE THE ITEM WAS PURCHASED FROM





brooklyn + max™



# Upload an image of our furniture in your home with a short review to our facebook page for a chance to

Win up to \$3000 of **Simpli Home** furniture!!!

www.facebook.com/simplihomefurnishings



**IMPORTANT**: Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

#### SAFETY INFORMATION

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all of the parts and hardware required. Hardware package may have spare parts.

**WARNING:** This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets. We recommend that you assemble this unit on a flat smooth surface to avoid scratches. If using power tools, set the tool to low torque to avoid damage.

#### May require 2 people for ease of assembly.

#### **CARE and MAINTENANCE**

Wipe regularly with clean water and a damp, clean, soft white cloth.

General cleaning can be done as needed with a mild detergent and water solution. Always rinse with clean water and dry.

For heavy soiling, dampen a soft white cloth or soft bristle brush.


Use care as scrubbing can damage the surface.

More difficult stains can be treated, but this should be occasional, not daily cleaning.

ANY cleaning solution used must be removed with clean water and a clean white cloth. Cleaning residue left on the material can cause it to dry out and crack, or affect the color.

DO NOT use any cleaners with corrosive ingredients (lye, acids or ammonia).


#### PARTS DESCRIPTION

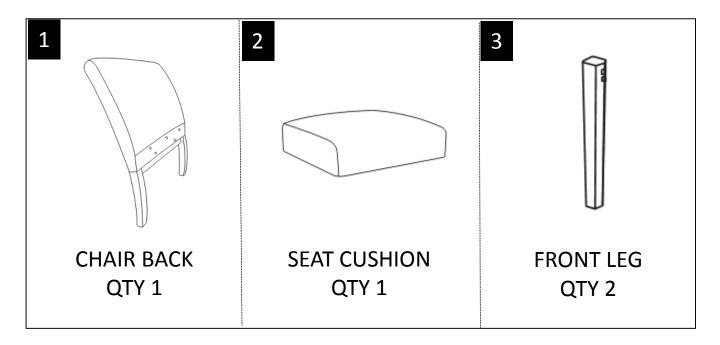

**NEED HELP?** For help with assembly or if you are missing a part, Please call customer service at 1-866-518-0120 ext. 262 (9 am to 4 pm EST)

#### **PRE-ASSEMBLY INFORMATION**


#### HARDWARE DESCRIPTION

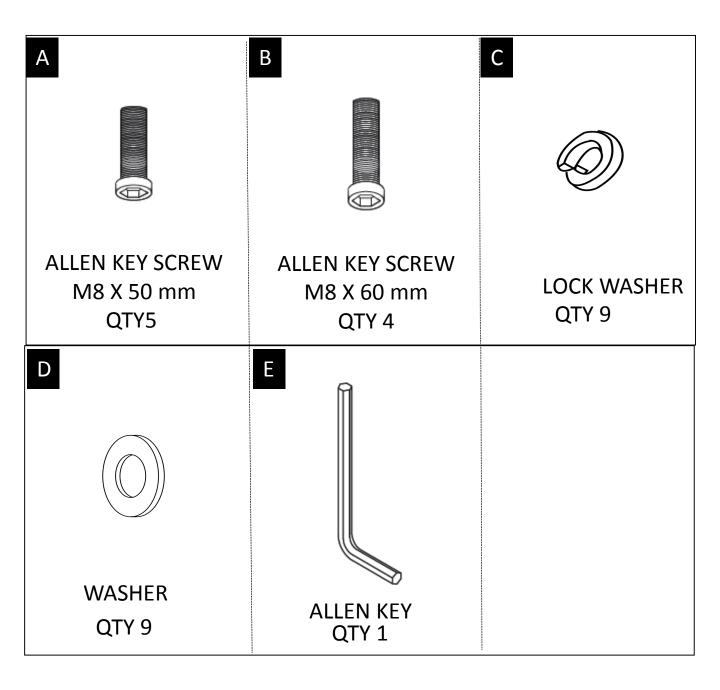

**NEED HELP?** For help with assembly or if you are missing a part, Please call customer service at 1-866-518-0120 ext. 262 (9 am to 4 pm EST)

#### ASSEMBLY

**STEP 1** 

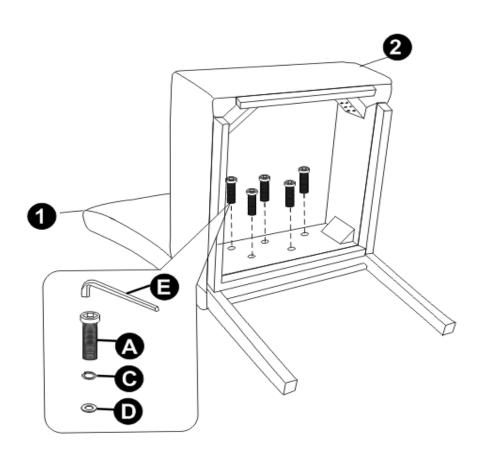


Align Seat Cushion (2) into pre-drilled holes on Chair Back (1). Attach Seat Cushion (2) to Chair Back (1) using Allen Key Screws (A), five Lock Washers (C) and five Washers (D).

Use Allen Key (E) to tighten. Do not over-tighten.

#### ASSEMBLY

STEP 2

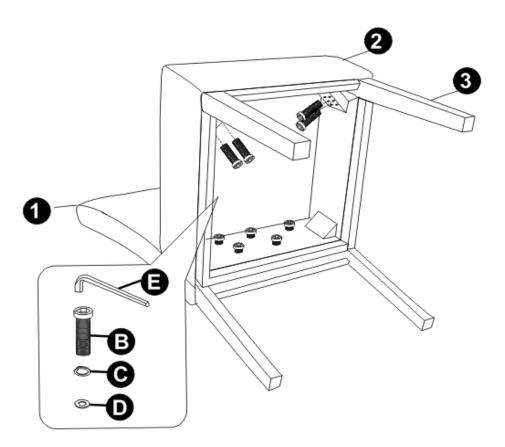

Attach Front Legs (3) to Seat Cushion (2) using Allen Key Screws (B), four Lock Washers (C) and four Washers(D). Use Allen Key (E) to tighten.

### ASSEMBLY

STEP 3



Turn chair right side up.





Wynden Hal HOME DECC brooklyn + max

#### WARRANTY

Thank you for purchasing a Simpli Home – Wyndenhall – Brooklyn + Max product. These products have been made to demanding, high-quality standards and are guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase. This warranty does not affect your statutory rights.

In case of any malfunction of your product (failure, missing parts, etc.) please contact us at our toll free service line at 1-866-518-0120 ext. 262 from 9 am to 4 pm, Monday to Friday, Eastern Standard Time or by email at simpli-home.com/customer-support.

We reserve the right to repair or replace the defective product, at its discretion.

This product is guaranteed for 12 months if used for normal purposes. Any warranty is invalid if the product has been overloaded or subject to neglect, improper use or an attempted repair by other than an authorized agent. Heavy-duty or daily professional/commercial usage are not guaranteed.

Due to continuous product improvement, we reserve the right to change the product specifications without prior notice.





brooklyn + max™

## Questions, problems, missing parts?

### Before returning your product

please email Customer Support at <u>simpli-home.com/customer-support</u>

or call

Customer Support at 1-866-518-0120 ext. 262 Monday to Friday between 9 am – 4 pm EST

For more information visit us on our website <u>www.simpli-home.com</u>

Like us on facebook <u>www.facebook.com/simplihomefurnishings</u>