




IMPORTANT

Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.


Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.

Part List

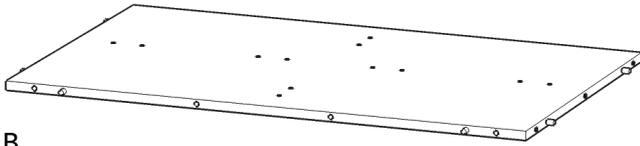

 
B.
Bottom
1 pc.




C.
Plinth
2 pcs.




F.
Shelf
6 pcs.

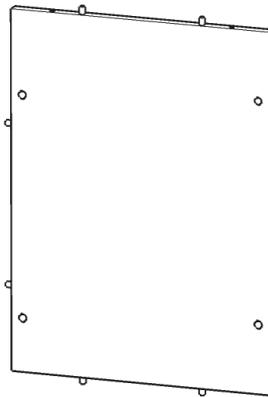

E.
Back Panel
1 pc.

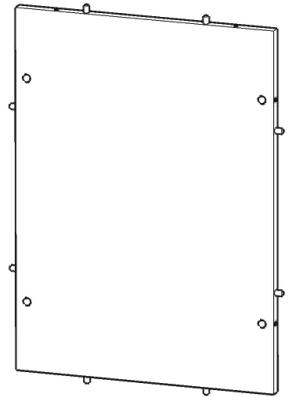

 D.
Back Panel
1 pc.



G.
Front Rail
4 pcs.

Hardware List



Hex Wrench
1 pc.



Cam Lock
30 pcs. (+4 extra)



M6x25
Head Cap Bolt
20 pcs. (+1 extra)



M4x25
Wood Screw
8 pcs. (+1 extra)



M3.5x20
Wood Screw (short)
60 pcs. (+1 extra)



M4x30
Wood Screw (long)
80 pcs. (+1 extra)



Small Hex Wrench
1 pc.



Cam Lock Screw
30 pcs. (+2 extra)



Adjustable Pin
24 pcs. (+1 extra)



M4x25
Machine Screw
20 pcs.



Knob (small)
8 pcs.



Knob (large)
12 pcs.

Cartons 20 05530 0941, 0943 are also needed for assembly.

Tool(s) required for assembly: Phillips screwdriver, Level, Drill (8 volts or less), 3/16" Drill Bit, 3/8" Drill Bit

Home Styles Customer Service: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

Assembly Instructions 2/9

IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the bolts until each part is properly assembled.
- The unit must be level to work properly. Use the included adjustable levelers to level.
- Keep Hex Wrench as the bolts may need to be tightened in future.

STEP 1

Insert Cam Lock Screws into pre-drilled holes in Plinths (C), Side Panels (H), (I) and Middle Panel (J), then tighten. (See Figure 1)




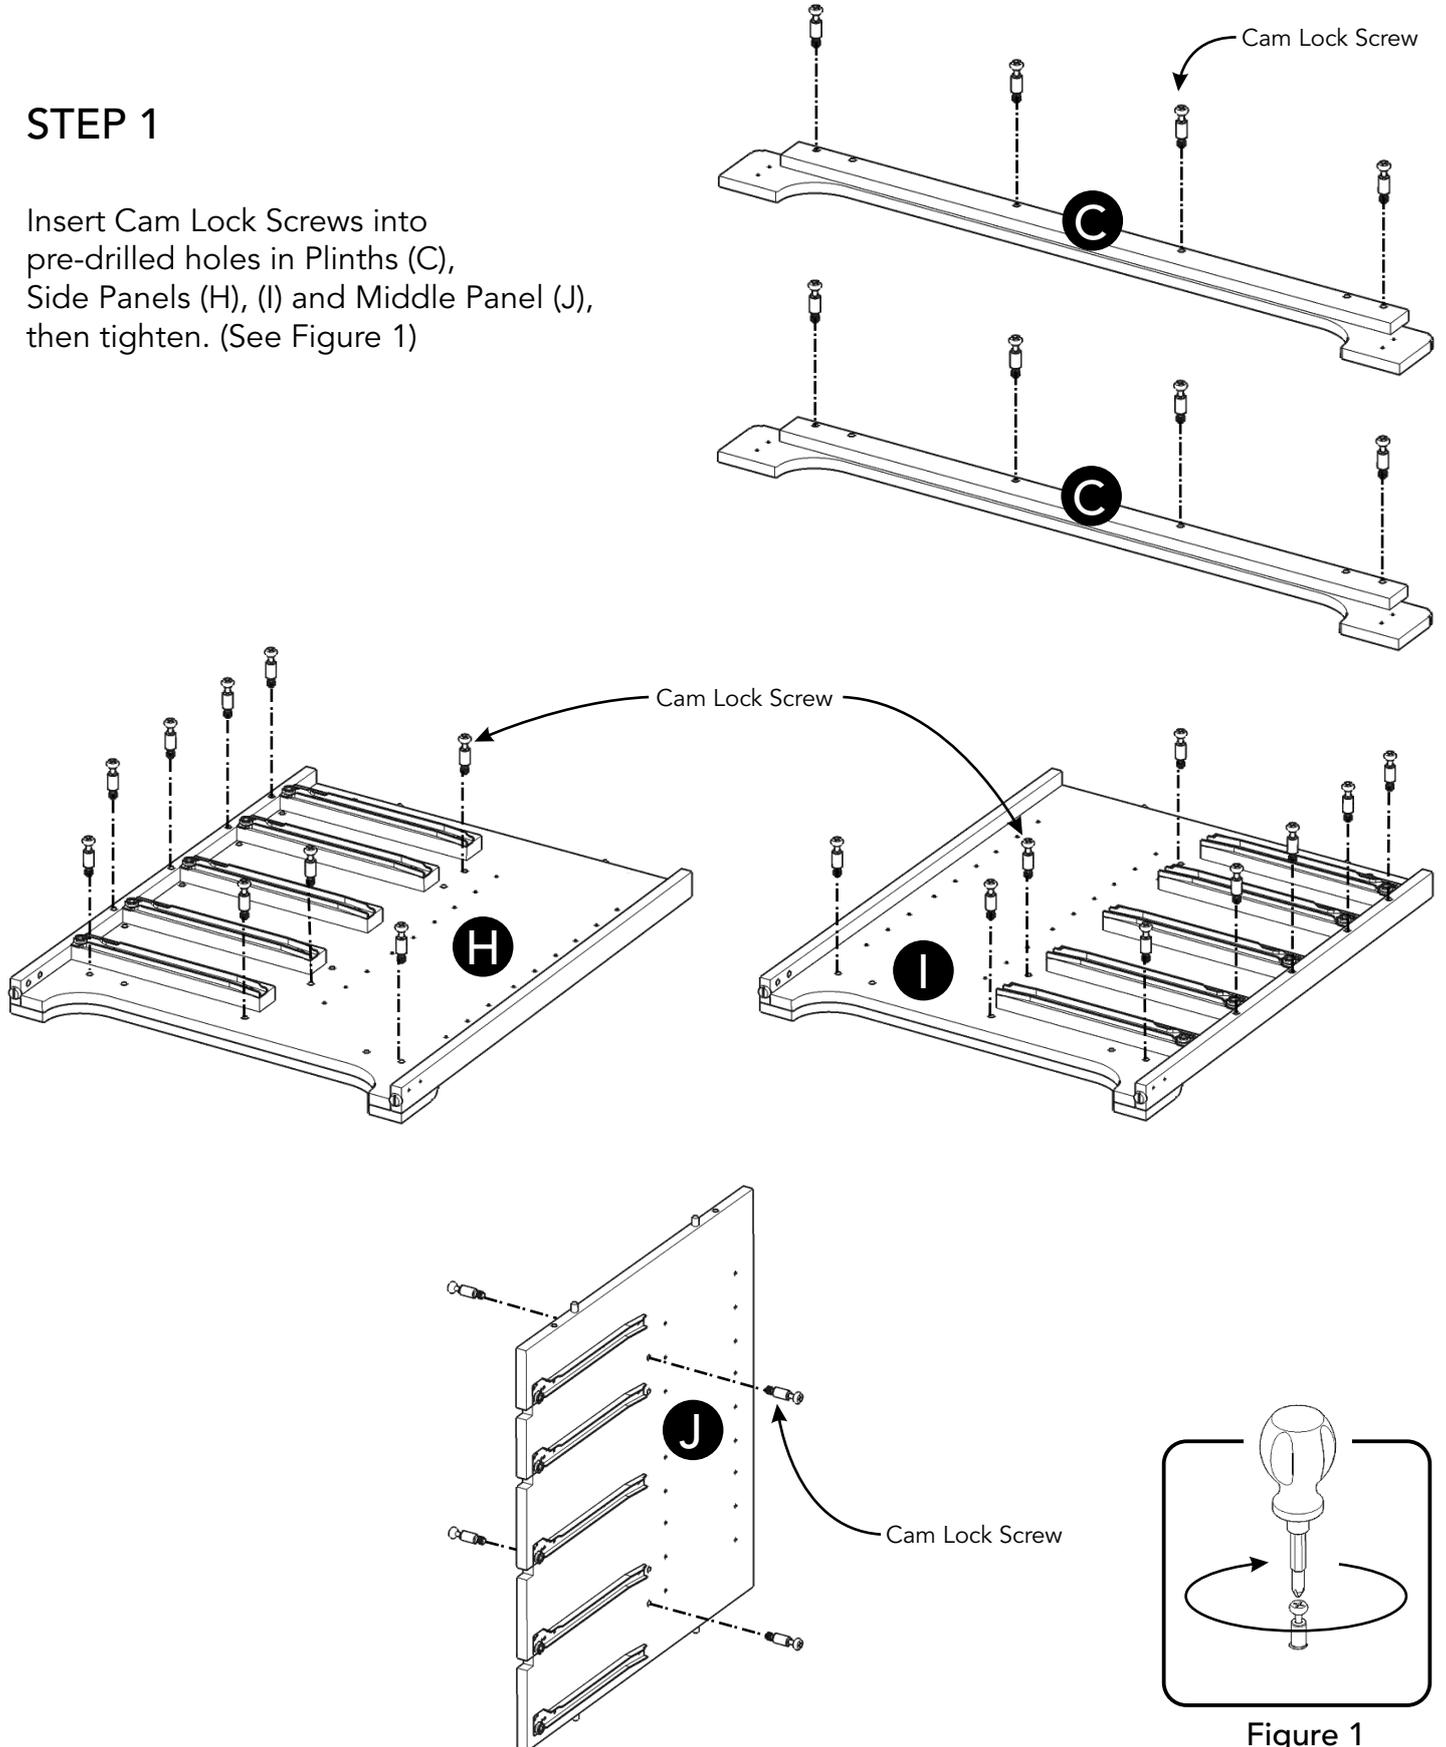


Figure 1

STEP 2

Attach Back Panels (D) and (E) to Middle Panel (J) with Cam Locks.
(See Figure 2)

Attach Front Rails (G) to unit.

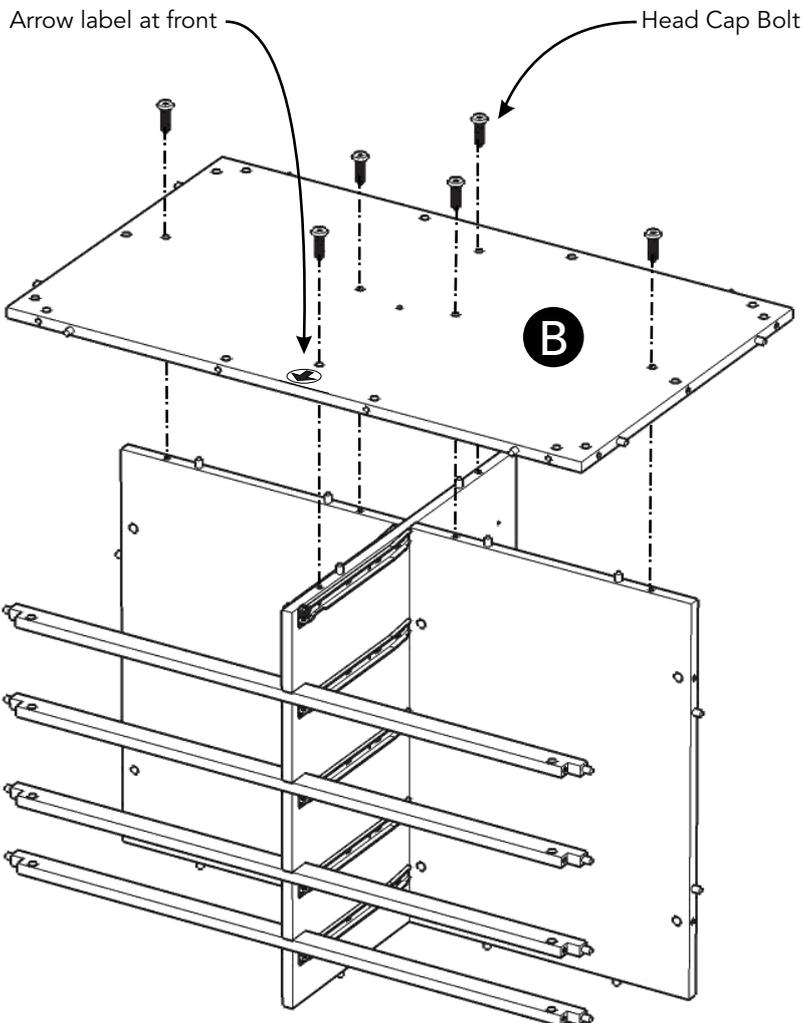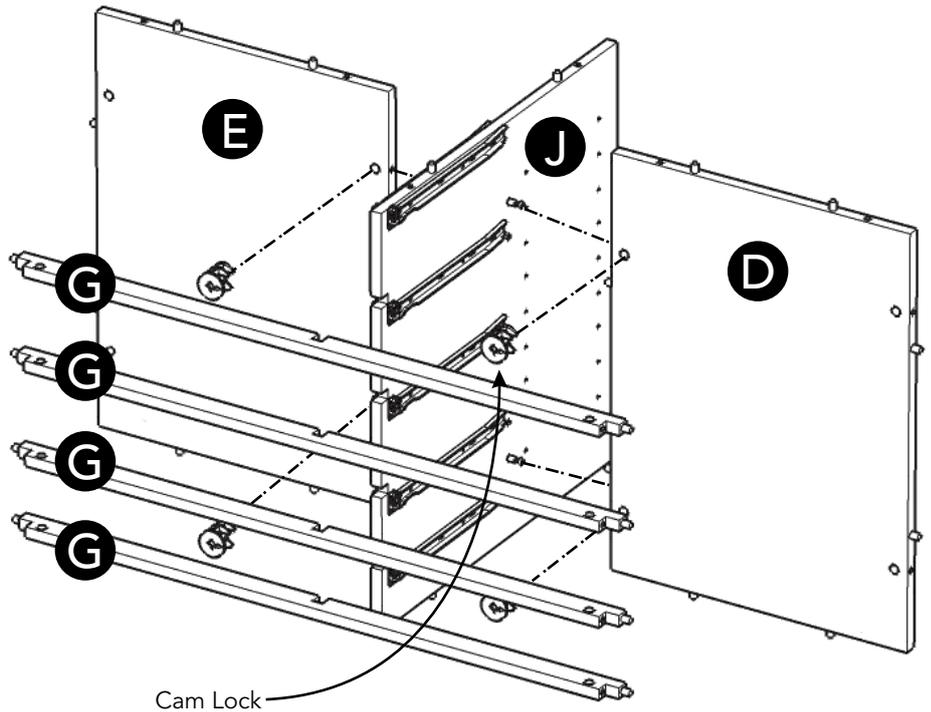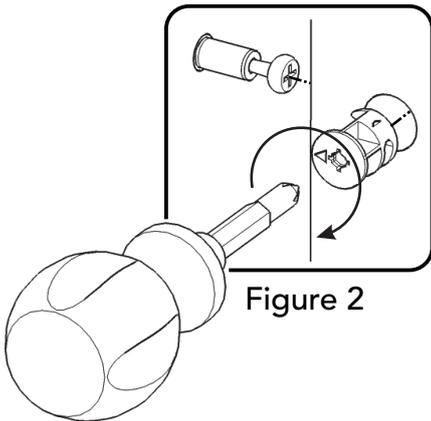

STEP 3

Attach Bottom (B) to unit
with Head Cap Bolts,
tightening bolts only halfway.
(See Figure 3)

Note: Arrow label indicates
front of Bottom (B).

Tighten Head Cap Bolts.


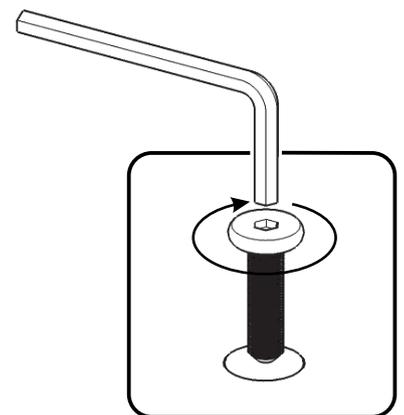


Figure 3

STEP 4

Attach Side Panels (H) and (I) to unit with Cam Locks.

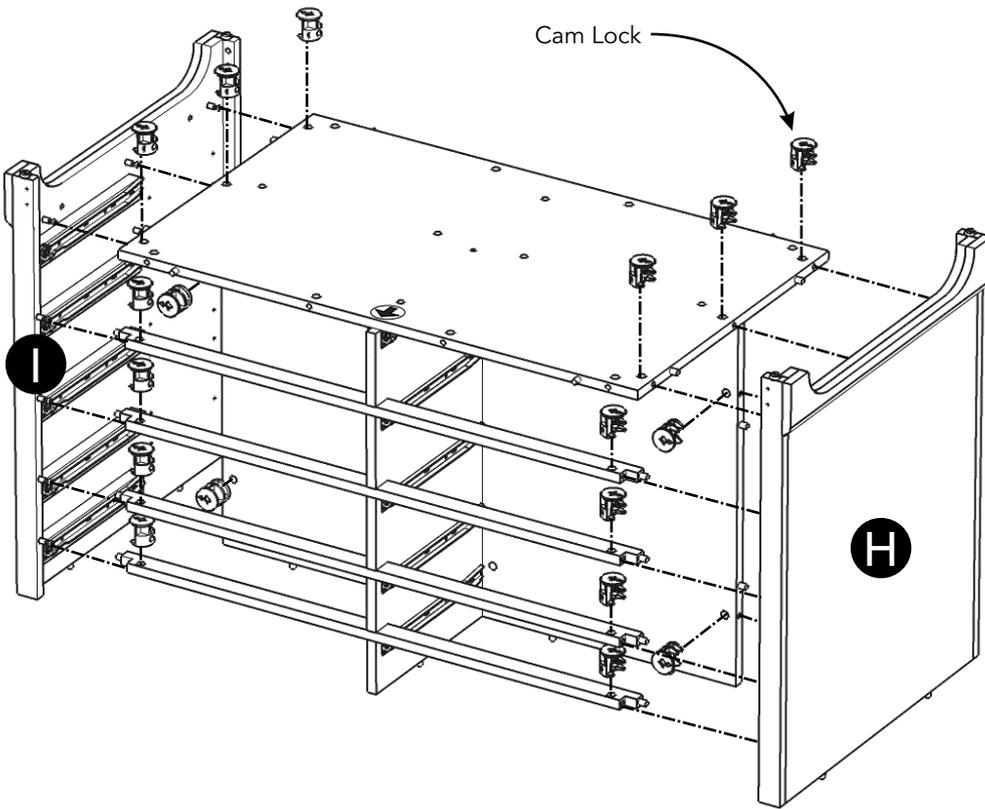

STEP 5

Attach Plinths (C) to unit with Cam Locks and Wood Screws.

Attach Leg Support (K) to unit. (See Figure 4)



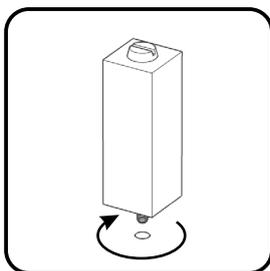


Figure 4

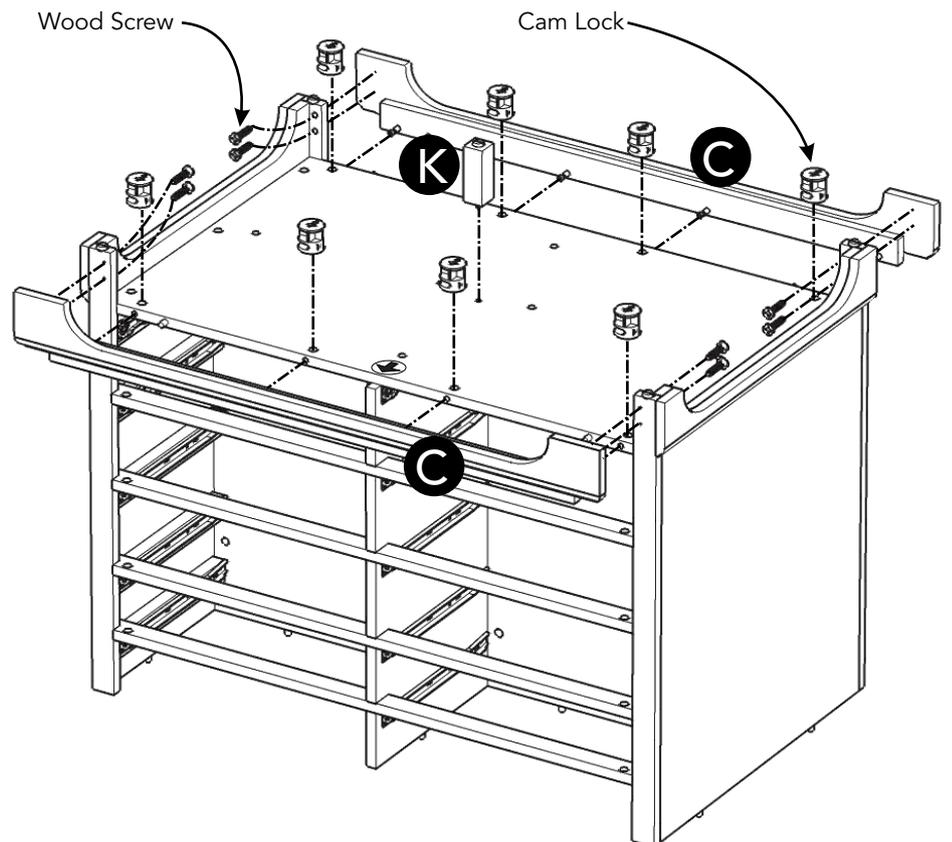

Assembly Instructions 5/9

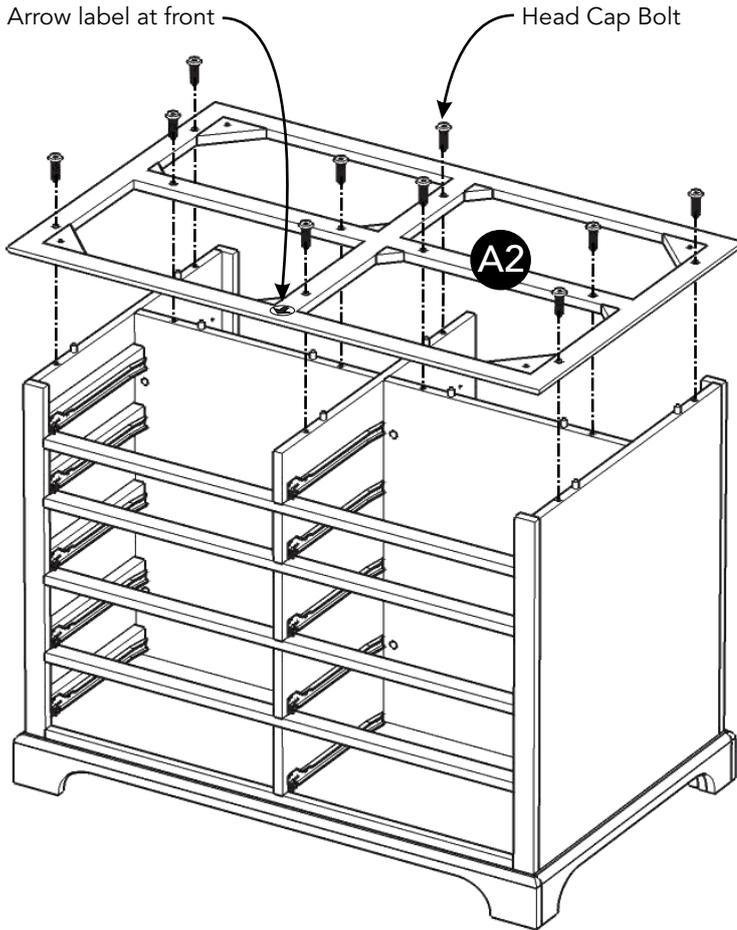

STEP 6

Turn unit over to its upright position.

Attach Top (A2) to unit with Head Cap Bolts, tightening bolts only halfway.

Note: Arrow label indicates front of Top (A2).

Tighten Head Cap Bolts.

Level unit by adjusting the adjustable levelers on bottom of unit. (See Figure 5)

Note: Unit must be level to work properly.


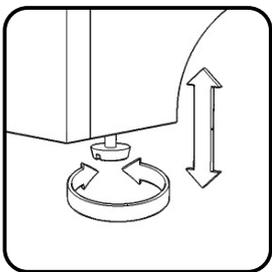


Figure 5

STEP 7



Attach Top (A1) to unit with Head Cap Bolts, tightening bolts only halfway.

Tighten Head Cap Bolts.

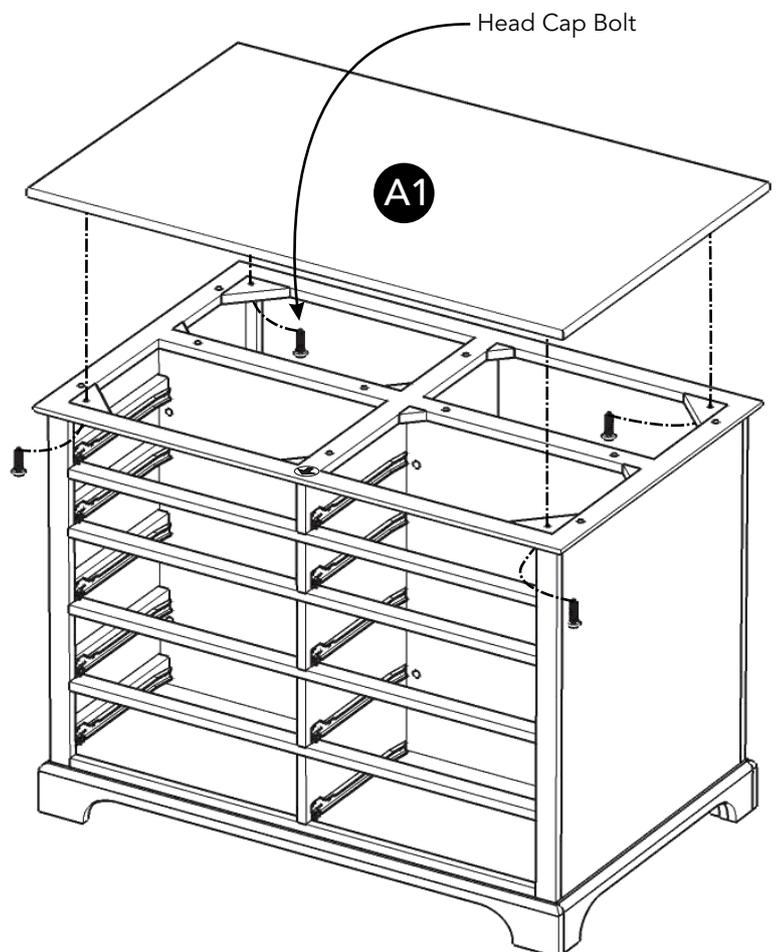

Assembly Instructions 6/9

Drawer (L)

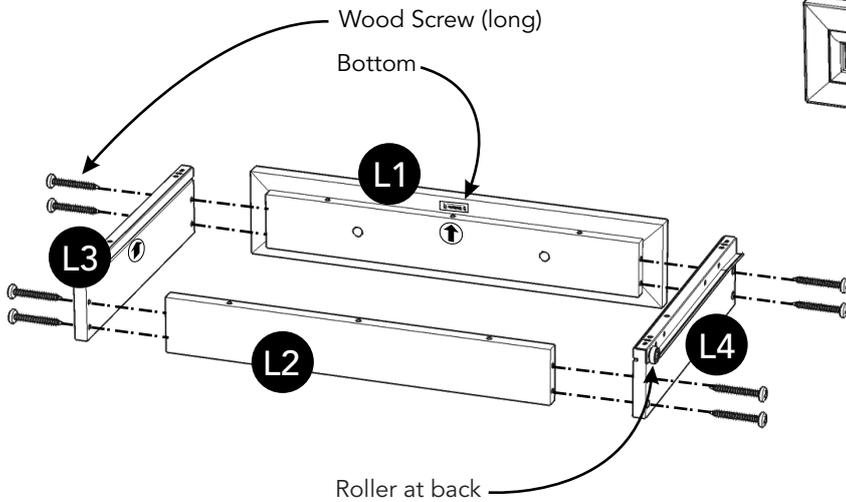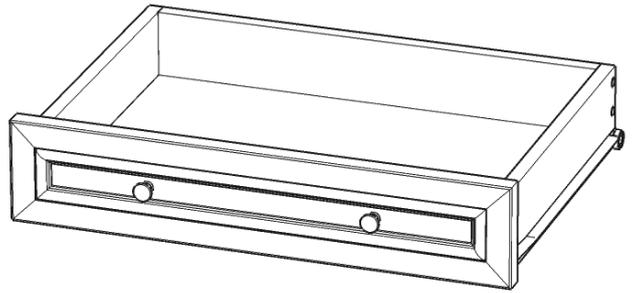

STEP 8



Attach Drawer Front (L1) and Drawer Back (L2) to Drawer Side (L3) with Wood Screws (long).

Attach Drawer Side (L4) to unit with Wood Screws (long).

STEP 9

Slide Drawer Bottom (L5) into groove.


Attach Drawer Bottom (L5) to unit with Wood Screws (short).

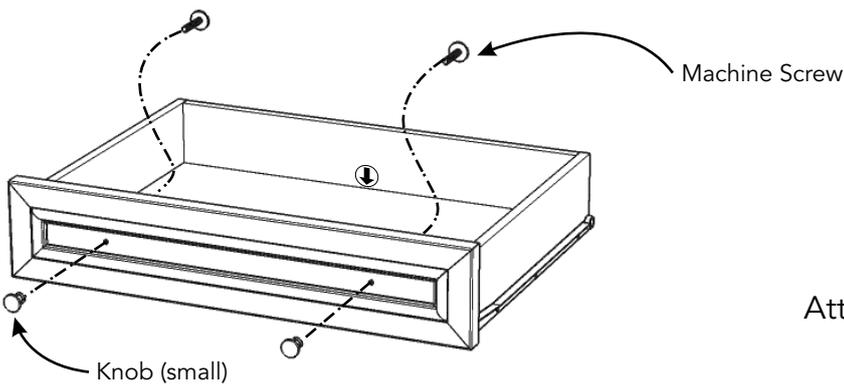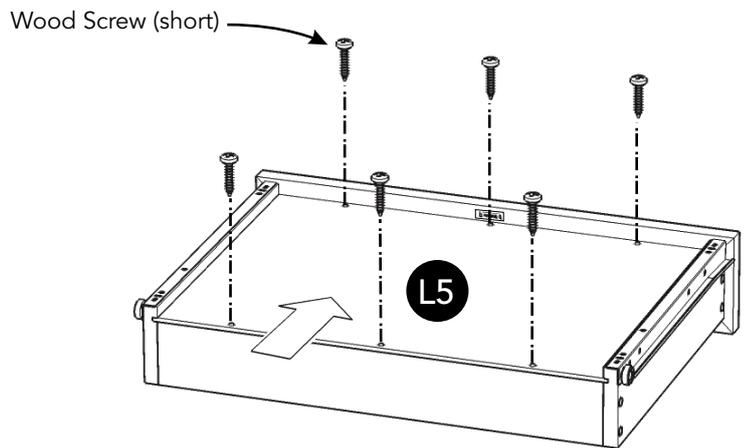


STEP 10

Attach Knobs (small) with Machine Screws.

 Part List



L1.
Drawer Front
4 pcs.

 

L2.
Drawer Back
4 pcs.



L3.
Drawer Side
4 pcs.




L4.
Drawer Side
4 pcs.




L5.
Drawer Bottom
4 pcs.

Assembly Instructions 7/9

Drawer (M)

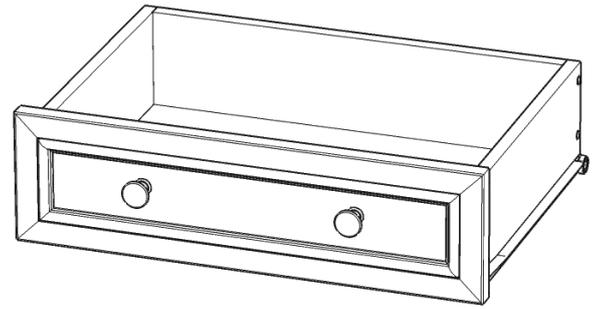



STEP 11

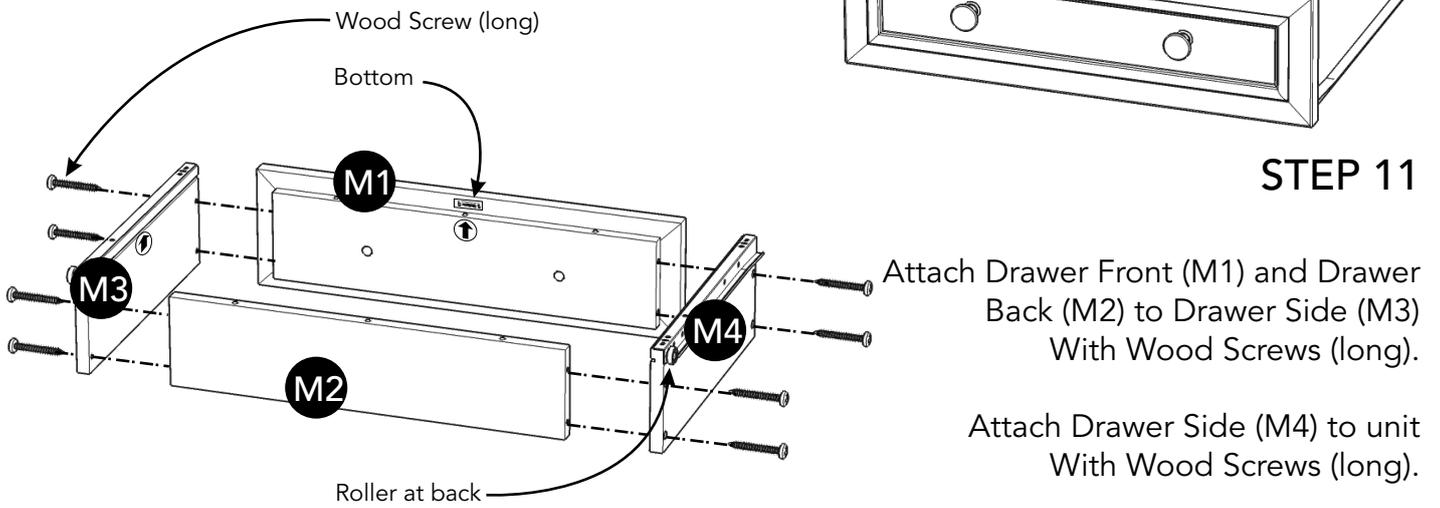

STEP 12

Slide Drawer Bottom (M5) into groove.


Attach Drawer Bottom (M5) to unit with Wood Screws (short).

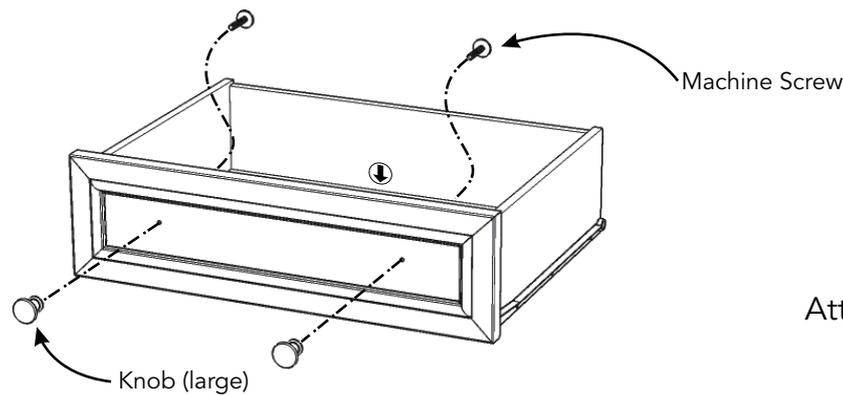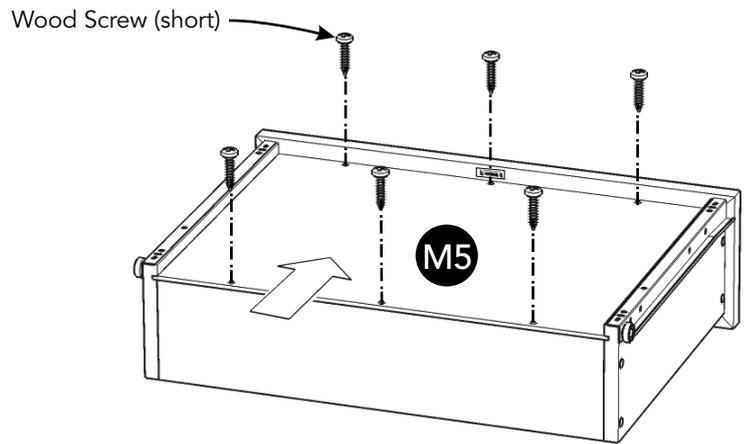


STEP 13

Attach Knobs (large) with Machine Screws.

Part List

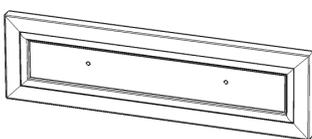

M1.
Drawer Front
6 pcs.

 

M2.
Drawer Back
6 pcs.



M3.
Drawer Side
6 pcs.




M4.
Drawer Side
6 pcs.



M5.
Drawer Bottom
6 pcs.

STEP 14


Slide Drawers (L) and (M) into position.

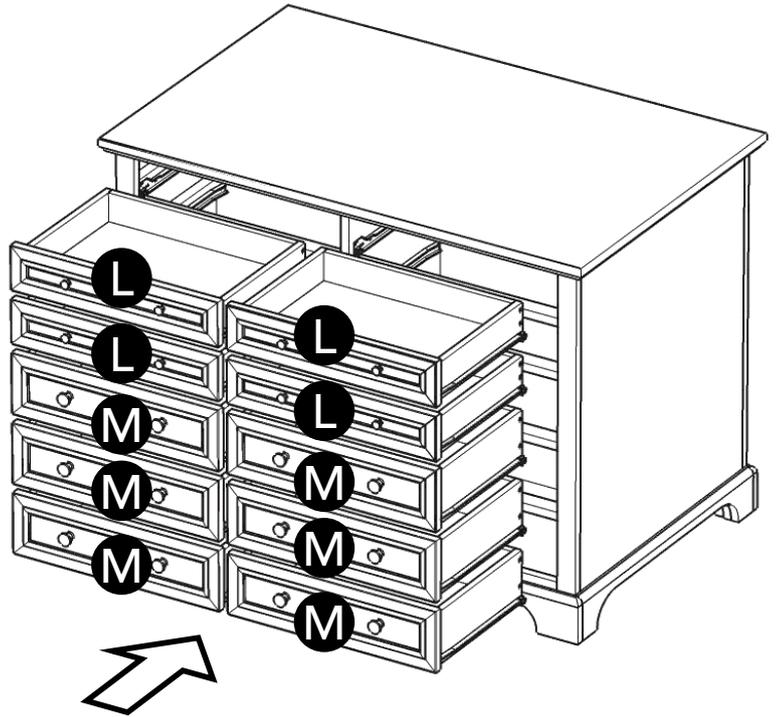

STEP 15

Insert Adjustable Pins into side panels and middle panel at desired level.

Place Shelves (F) into position.

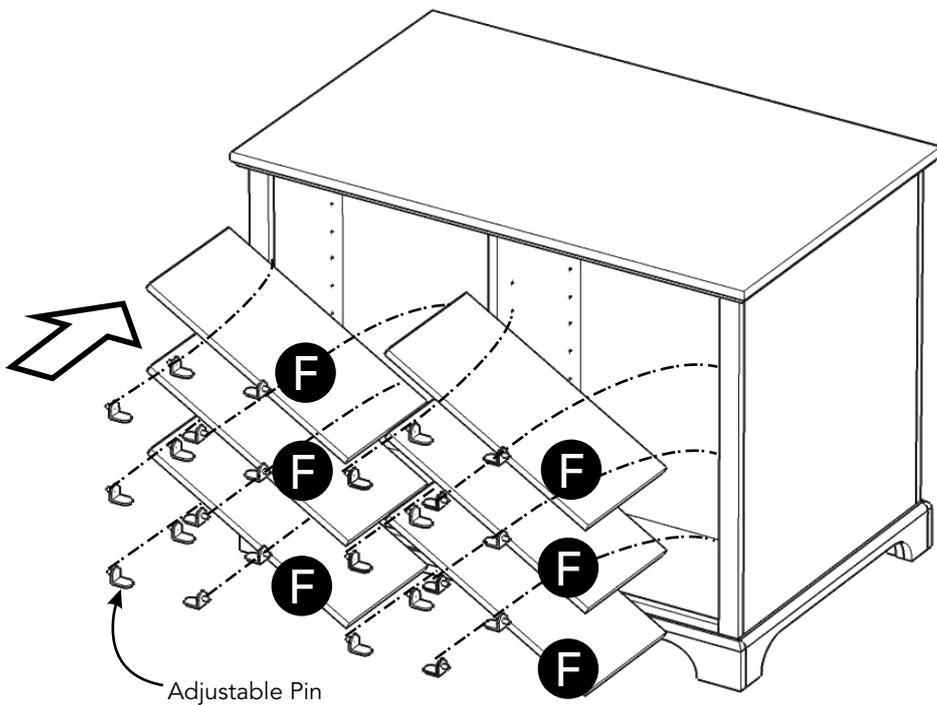

Assembly Instructions 9/9

Per regulatory requirements, a Tip-over Restraint is included. Follow Step 16 to install it.

STEP 16

Drill a 3/16" hole 1/2" deep 1" from top in middle of side panel that is against a wall.

Place unit at desired location.

Drill a 3/8" hole in wall in-line with 3/16" hole drilled in side panel.

Move unit.

Insert Anchor into the wall hole and attach Bracket with Wall Screw.

Attach Bracket at drilled hole in side panel with Wood Screw.

Move unit back into place.

Slide Tipover Restraint through Bracket on wall and Bracket on side panel. (See Figure 6)

Put tie end of Tipover Restraint into lock end of Tipover Restraint and pull until tight.



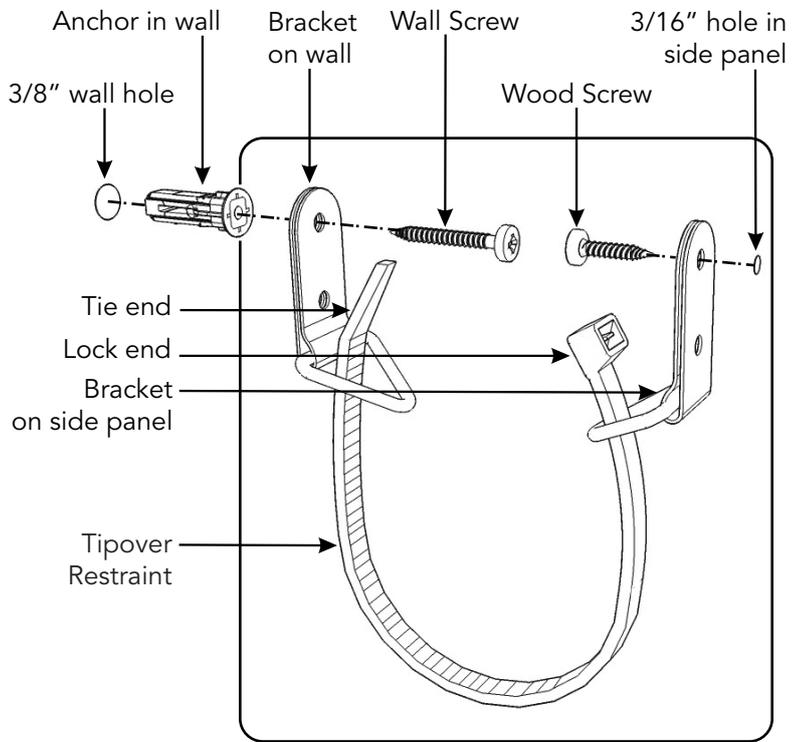


Figure 6

Drill 3/16" hole in side panel
Drill 3/8" hole in wall

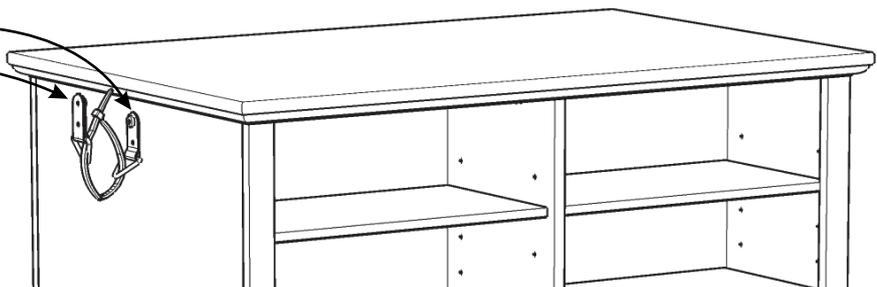


Hardware List

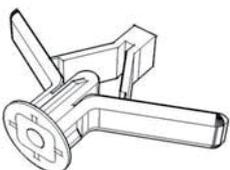

Anchor
1 pc. (+1 extra)



Bracket
2 pcs. (+1 extra)

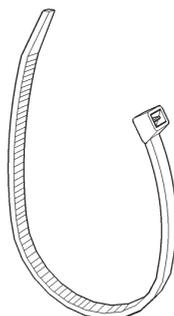

Tipover Restraint
1 pc. (+1 extra)



M3.5x40
Wall Screw
1 pc. (+1 extra)



M3.5x16
Wood Screw
1 pc. (+1 extra)

CARE INSTRUCTIONS

NEVER

allow liquids to remain on furniture.
Absorption causes parts to warp
and split and finishes to delaminate.

NEVER

use glass cleaners on
finished furniture. Ammonia
chemically attacks the finish.



Do not use power tools
above 8 volts to assemble.
**PREVENT
CRACKING**



Do not place
in direct sunlight.
**PREVENT
FADING**



Do not write
directly on surface.
**PREVENT
MARKING**



Do not place hot
objects on surface.
**PREVENT
FINISH DAMAGE**



Do not use rubber
based placemats.
**PREVENT
DISCOLORING**



Do not use commercial
waxes and polishes.
**PREVENT
YELLOWING**

CLEAN

with a soft cloth moistened
in lukewarm soap and water.
Buff with a dry clean cloth.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

www.homestyles-furniture.com/customer-service/replacement-parts

Home Styles Customer Service: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

homestyles®

20 05530 0941
Storage Island




IMPORTANT

Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.


Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.

Part List

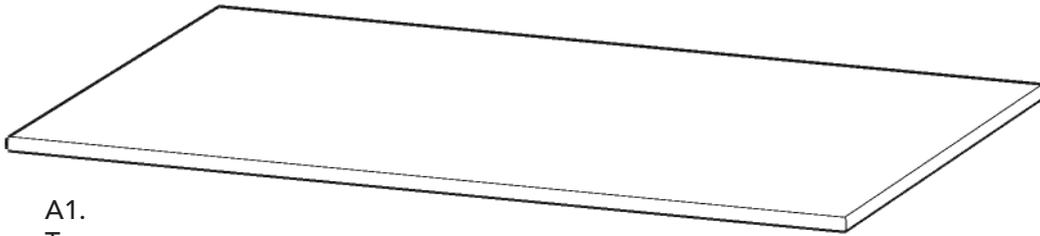

A1.
Top
1 pc.

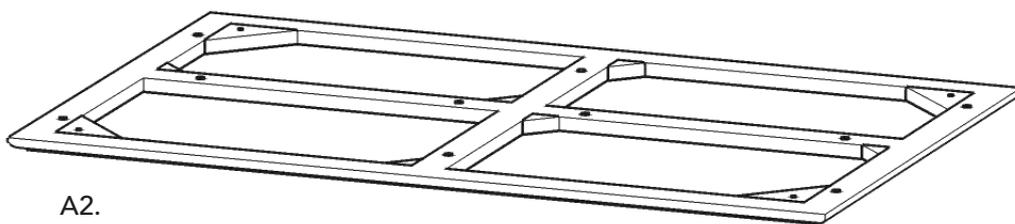

A2.
Top
1 pc.


For assembly see instructions in carton 20 05530 0942.

Home Styles Customer Service: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

Unpacking Instructions

STEP 1

Open carton.

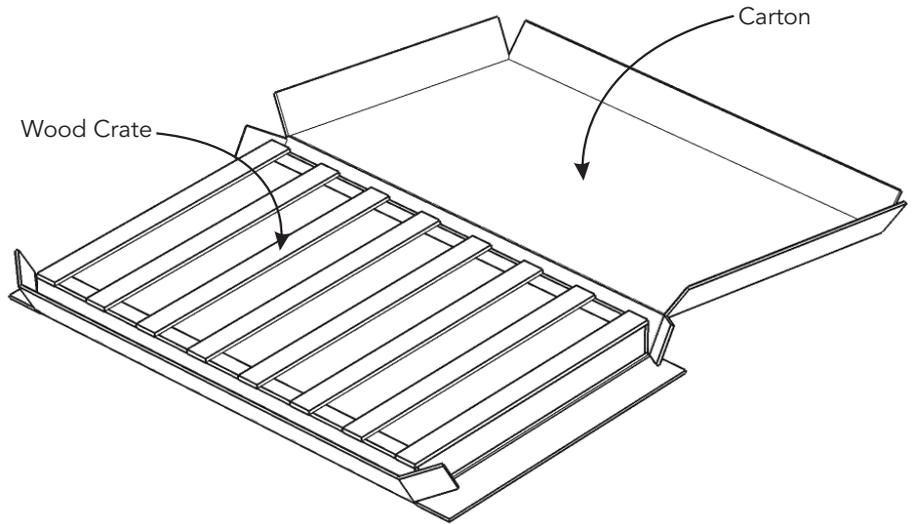

STEP 2

Use a hammer to remove wood supports.
(See Figure 1)

Note: Do not hit top with hammer.


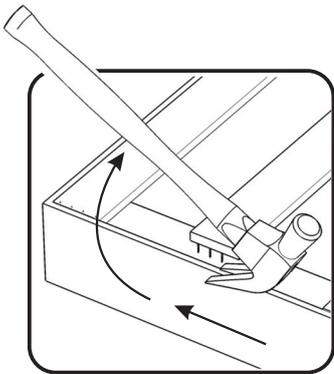


Figure 1

STEP 3

Remove foam and Tops (A1), (A2).

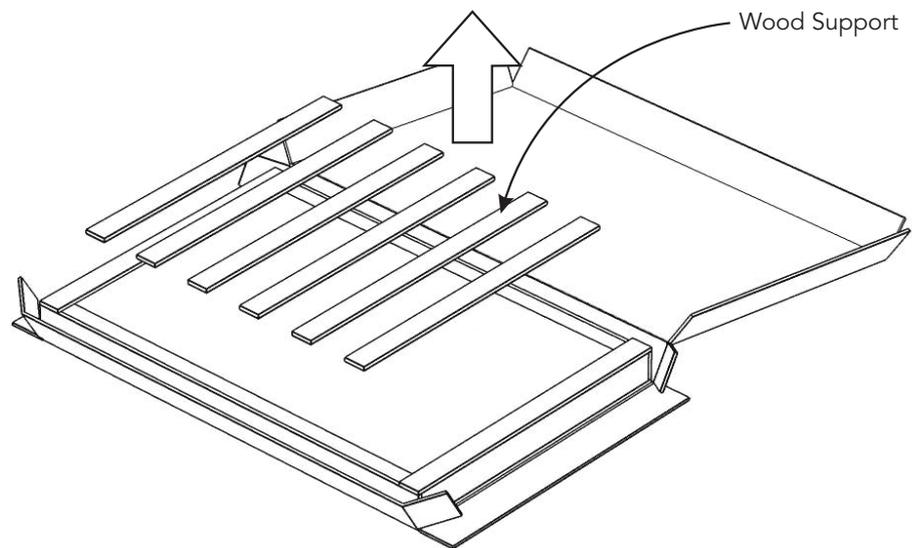