 




YOW SKU# 721091
Model # TYY338-1626

USE AND CARE GUIDE

SET OF 4 LIGHTED LANTERN

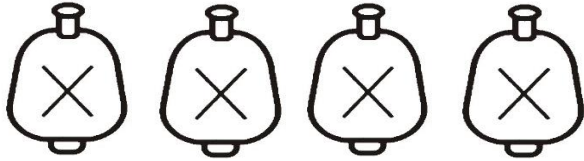

THANK YOU

We appreciate the trust and confidence you have placed in Home Accents through the purchase of this Set of 4 Lighted Lantern. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Home Accents!

Guarantee

What is Covered

The product is intended for residential seasonal use only; 90 days maximum per year. This product is covered by a 90 day limited guarantee due to defects in material and workmanship. Return the product with purchase receipt to the location of purchase for refund within 90 days of purchase.

What is Not Covered

This warranty does not cover commercial use, normal wear and tear, products not used in accordance with directions provided on or with the product, burn out of bulbs or LEDs, batteries, products that have been subjected to unauthorized repair and/or modification and damage caused by shipping and improper handling, alterations, misuse or accidents. Questions, problems, missing parts? Before returning to the store, call Home Accents Holiday Customer Service 8 a.m.-6 p.m., EST, Monday-Friday

1-877-527-0313
 HOMEACCENTSHOLIDAY.COM

 
Pre-Assembly

PLANNING ASSEMBLY

Carefully remove all the parts from the box and place them on a flat surface. Read the entire manual prior to assembly and identify all the parts included in the package against the parts list. If any parts are missing or damaged do not attempt assembly. Contact our customer service center. Assembly of this product may require more than one person.

PACKAGE CONTENTS

A

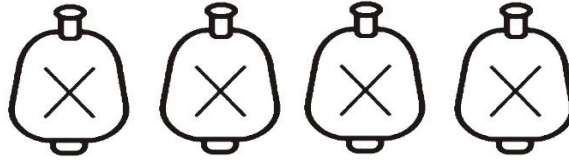

B



C

Package Content's/Parts List

Package Content's/Parts List		
A	Lantern	4
B	Light String	1
C	Ground Stakes	4

Assembly

Assembling the Lantern



FIG.1



FIG.2

Step 1. Attach the Light String (B) to the top of each Ground Stake (C) making sure the cord runs through the openings of the top of Ground Stake.(FIG.1)

Step 2. Attach each Lantern to a Ground Stake by tightening counter clockwise. (FIG.2)

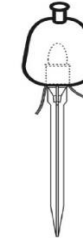


FIG.3

Step 3. Insert the Ground Stakes into the ground by grasping at middle of Ground Stake and gently forcing into the ground. Do not push down on Lantern as this will damage it. (FIG.3)

Pre-Operation

CAUTION: Grasp the plug to insert or remove from the power source. Do not unplug by pulling on cord.

CAUTION: The lighting string on this product is rated at 4 Watts. Do not overload. Do not connect to another lighting string, decorative outfit or other product. Before you use or re-use this product inspect it carefully. Return to place of purchase with receipt if the product has cuts, damage, frayed wire insulation on cords, cracks in the socket enclosures, loose connections or exposed copper wire.

Care and Cleaning

- Carefully remove the product from wherever it is placed. This helps to avoid any undue strain or stress on the product conductors, connections, and wires. If the product is placed somewhere other than the ground it should be well secure and stable.
- Wipe the unit with a damp cloth and allow the unit to dry before storing.
- Store the product neatly in a cool, dry location protected from sunlight.

FOR INDOOR AND OUTDOOR USE