



SKU # 782 491
 OMS THD SKU # 1000 237 671
 Model # TY166-1118

ASSEMBLY INSTRUCTIONS

10in Candy Cane Pathway Lights: 8-Pack

USE AND CARE GUIDE

PLANNING ASSEMBLY

Carefully remove all the parts from the box and place them on a flat surface. Please note that many of the parts are connected by the lighting string that runs throughout the item. Remove the parts with care not to damage the lighting string or parts. Read the entire manual prior to assembly and identify all the parts included in the package against the parts list. If any parts are missing or damaged do not attempt assembly. Contact our customer service center or return the item to place of purchase with purchase receipt. Assembly of this product may require more than one person.

Pre-Operation

CAUTION: Grasp the plug to insert or remove from the power source. Do not unplug by pulling on cord.

CAUTION: The lighting string on this product is rated at 20.4 Watts (0.17 Amps). Do not overload. Do not connect to another lighting string, decorative outfit or other electrical products. Before you use or re-use this product, inspect it carefully. Discard or return to place of purchase with purchase receipt if the product has cuts, damage, frayed wire insulation on cords, cracks in the socket enclosures, loose connections or exposed copper wire.

Care and Cleaning

- Carefully remove the product from wherever it is placed. This helps to avoid any undue strain or stress on the product connections and wires. If the product is placed somewhere other than the ground it should be well secured and stable.
- Wipe the unit with a damp cloth and allow the unit to dry before storing.
- Store the product neatly in a cool, dry location protected from sunlight.

Trouble Shooting

- Ensure that the floor or surface that the item sits on is flat and level
- Be sure to plug the item correctly to a wall outlet or a UL Listed Power Cord
- Ensure all parts are assembled properly per the Instruction Manual
- If the item does not light check for loose or broken bulbs and connections
- Do not plug into other electrical items
- If the item has multiple Light String Cords be sure to plug in all cords
- Check for Broken or Burned Out Fuse In Plug

Guarantee

What is Covered

The product is intended for residential seasonal use for 90 days per year. This product is covered by a 90 days limited guarantee due to defects in material and workmanship. Return the product with purchase receipts to the location of purchase for refund within 90 days of purchase.

What is Not Covered

This warranty does not cover commercial use, normal wear and tear, products not used in accordance with directions provided on or with the product, burn out of bulbs or LEDs, batteries, products that have been subjected to unauthorized repair and/or modification and damage caused by shipping and improper handling, alterations, misuse or accidents. Questions, problems, missing parts? Before returning to the store, call Home Accents Holiday Customer Service 8 a.m.-6 p.m., EST, Monday-Friday



Thank you!


We appreciate the trust and confidence you have placed in Home Accents through the purchase of this 10in Candy Cane Pathway Lights: 8-Pack. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home decoration needs. Thank you for choosing Home Accents!

1-877-527-0313
 HOMEACCENTSHOLIDAY.COM

Parts List		
Locater	Name	Qty.
A	Candy Cane	8

Hardware List		
Locater	Name	Qty.
B	Stake	8
C	Fuse	2
D	Replacement Bulbs	3

Diagram of Parts

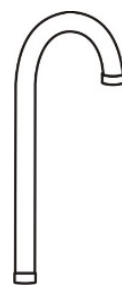

A

Hardware



B



C




D

ASSEMBLY

1 Assembly the Candy Cane

Attach the bottom of the Candy Cane (A) to the top of the Stake (B). Do not pinch the wires. Route the wires through the cutout hole at the top of the Stake. Repeat for each Candy Cane Stake.

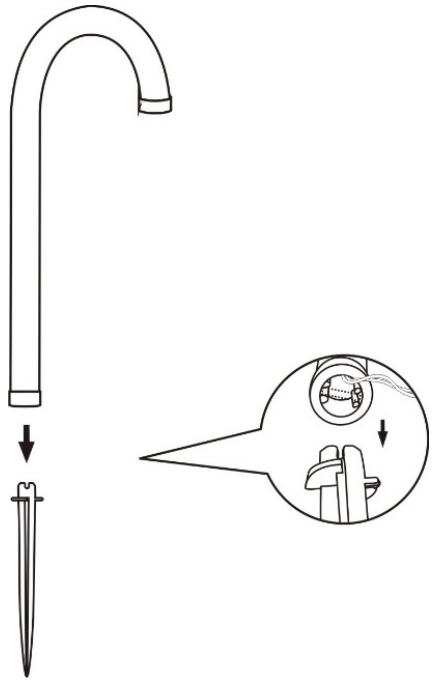

2 Assembly the Candy Cane

Carefully push the Candy Cane Stakes into the ground by grasping the stake at the middle. Do not grasp the top of the Candy Cane to press on. This could result in breakage. Moisten the ground with water if the ground is too hard. Separate the Stakes apart to your desired look.

