





 



 


 

 
 

 


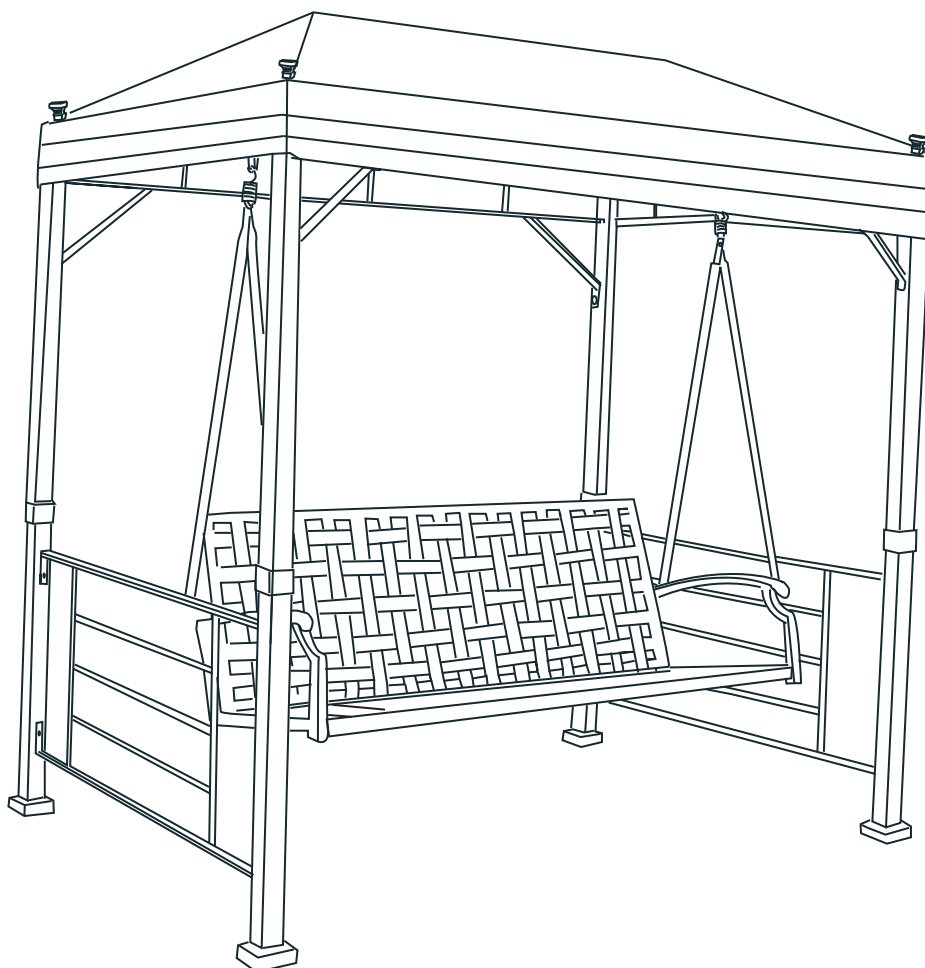



 

 

 

SONOMA 3 PERSON SWING

IMPORTANT: PLEASE READ COMPLETE INSTRUCTION SHEET PRIOR TO ASSEMBLY!





 












Identify all parts packed in carton against the parts list. Remove all protective materials, place parts on a nonabrasive surface to avoid scratching. If any parts are missing or damaged, DO NOT attempt to assemble. Please contact our customer service center (Monday-Friday 9:00 a.m.-5:00 p.m.CST) at 1-866-538-7735 (fax: 952-946-0031), e-mail: custserv@homecasual.net or visit our website at www.homecasual.net.



DO NOT ATTEMPT TO ASSEMBLE THE SWING IF ANY PARTS ARE MISSING OR DAMAGED.

	PARTS LIST	DESCRIPTION	QTY		PARTS LIST	DESCRIPTION	QTY
A	 RIGHT FRONT	LEG 1	1	O		CANOPY COVER	1
B	 LEFT FRONT	LEG 2	1	P		TOP SUPPORT 1	1
C	 RIGHT REAR	LEG 3	1	Q		ROOF PIECE	2
D	 LEFT REAR	LEG 4	1	R		TOP SUPPORT 2	4
E	 TOP SIDE	RAILING 1	2	S		LONG STRAIGHT BAR	2
F	 TOP FRONT/BACK	RAILING 2	2	T		SHORT STRAIGHT BAR	2
G	 SIDE BOTTOM	RAILING 3	2	U		CUSHION	1
H		SUPPORT BAR 1	1	V		METAL SPRING	2
I		BEAM	1	W		LARGE PEG	2
J		SUPPORT BAR 2	4	X		SMALL PEG	2
K		BACK	1	Y		TOUCH-UP PAINT BOTTLE	1
L		SEAT	1	Z		FINIAL	4
M		ARMREST 1 (right side when sitting)	1	N		ARMREST 2 (left side when sitting)	1

DO NOT ATTEMPT TO ASSEMBLE THE GAZEBO SWING IF HARDWARE KITS ARE MISSING OR DAMAGED.

HARDWARE KITS							
a		BOLT(M6x35mm)	12	j		SMALL NUT (M6)	12
b		BOLT(M8x20mm)	36	k		LARGE NUT (M8)	8
c		BOLT(M8x30mm)	4	l		SMALL PLASTIC BOLT CAP (M6)	12
d		BOLT(M8x35mm)	6	m		LARGE PLASTIC BOLT CAP (M8)	50
e		BOLT(M8x75mm)	4	n		SMALL PLASTIC NUT CAP (M6)	12
f		SMALL METAL WASHER	24	o		LARGE PLASTIC NUT CAP (M8)	8
g		LARGE METAL WASHER	54	p		HEX WRENCH	1
h		PLASTIC WASHER	4	q		HEX WRENCH	1
i		LOCK WASHER	4				

A minimum of two people are required to properly assemble this gazebo swing.

1. GAZEBO SWING FRAME ASSEMBLY

Step 1


Attach Railing 3 (G) to Leg 2 (B) with Bolt M8x20mm (b) and the Large Metal Washers (g). Repeat this step for Leg 4 (D) assembly for other side of Railing 3 (G).

Step 2

Attach Railing 1 (E) to Leg 2 (B) with Bolt M8x20mm (b) and Large Metal Washers (g). Repeat this step for Leg 4 (D) assembly for the other side of Railing 1 (E).


Step 3

Repeat steps 1 & 2 for attaching Railing 3 (G) and Railing 1 (E) to Leg 1 (A) and Leg 3 (C).

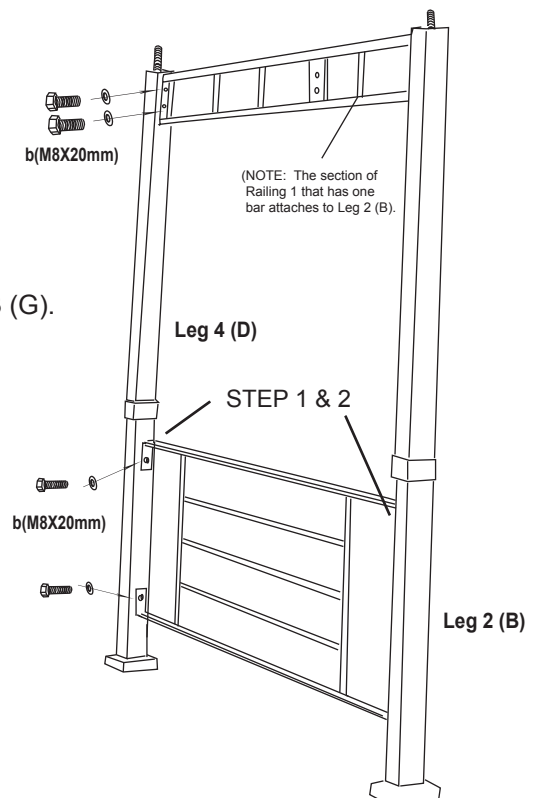

Step 4

Attach Railing 2 (F) to Leg 2 (B) with Bolt M8x20 (b) and Large Metal Washer (g). Repeat Leg 1 (A) assembly for the other side of Railing 2 (F).

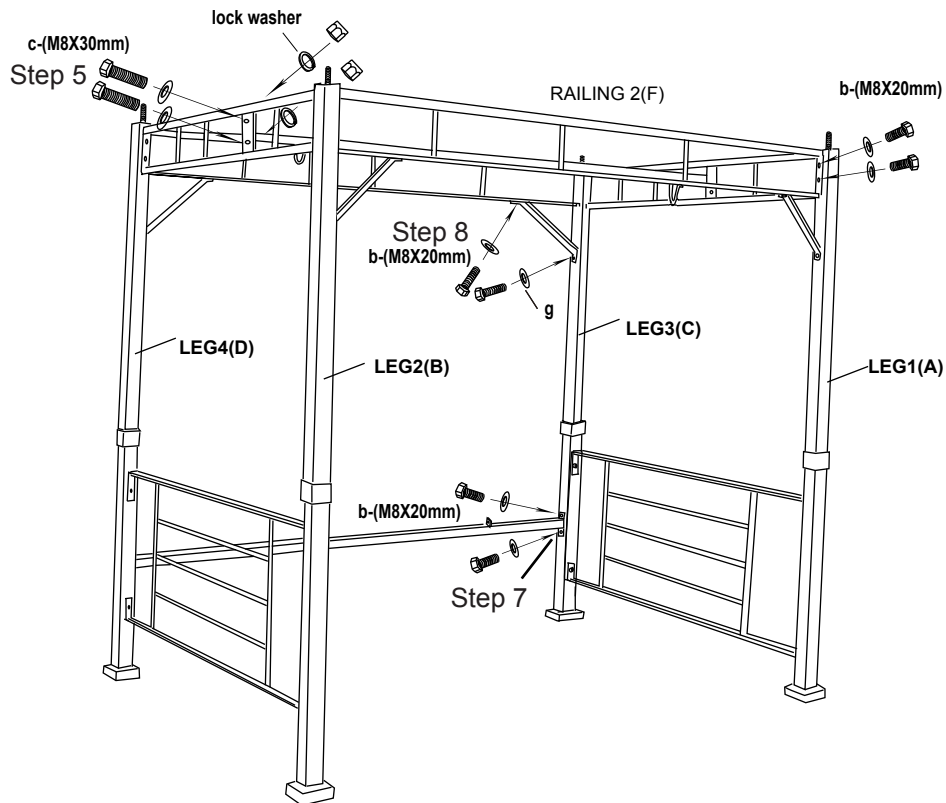

Step 5

Attach Beam (I) to Railing 1 (E) with Bolt M8x30 (c) and Large Nut (k) in order of: Bolt M8x30mm (c), Larger Metal Washer (g), Beam (I), Railing 1 (E), Lock washer (I), Large Nut (k).

Repeat the beam assembly for the other side of Railing 1.

Step 6

Repeat step 5, assembly of Railing 2 (F) to Leg 4 (D) and Leg 3 (C).

Step 7

Attach Support Bar 1 (H) to Leg 4 (D) with Bolt M8x20mm (b) and Large Metal Washer (g). Repeat this step for Leg 3 (C). MAKE SURE THE SLOT FACES UP.

Step 8

Attach Support Bar 2 (J) to Leg 2 (B) with Bolt M8x20mm (b) and Large Metal Washer (g). Repeat this step for Railing 2 (F) assembly for the other side of Support Bar 2 (J).

Step 9

Repeat step 8, assemble Support Bar 2 (J) to the remaining Legs and Railing 2 (F).

Step 10

Tighten all bolts and nuts with Hex Wrench. Cover all bolts and nuts with plastic bolt and nut caps.

2. TOP FRAME ASSEMBLY

Step 1


Insert Top Support 1 (P) into the long slot of Roof Piece (Q). Attach the Top Support 1 (P) to the long slot of Roof Piece (Q) with Bolt M6x35mm (a) and Small Nut (j) in order of: Bolt M6x35mm (a), Small Metal Washer (f), hole in Roof Piece and Top Support 1, Small Metal Washer (f), Small Nut (j). Repeat this step for remaining Roof Piece (Q) assembly for the other end of Top Support 1 (P).

Step 2

Insert Top Support 2 (R) into short slot of Roof Piece (Q). Attach Top Support 2 (R) to the short slot of Roof Piece (Q) with Bolt M6x35mm (a) and Small Nut (j) in order of: Bolt M6x35mm (a), Small Metal Washer (f), hole in Roof Piece and Top Support 2, Small Metal Washer (f), Small Nut (j). Repeat Top Support (R) assembly for the other end of Roof Piece (Q).

Step 3

Tighten all bolts and nuts with Hex Wrench. Cover all bolts with plastic bolt caps and plastic nut caps provided.

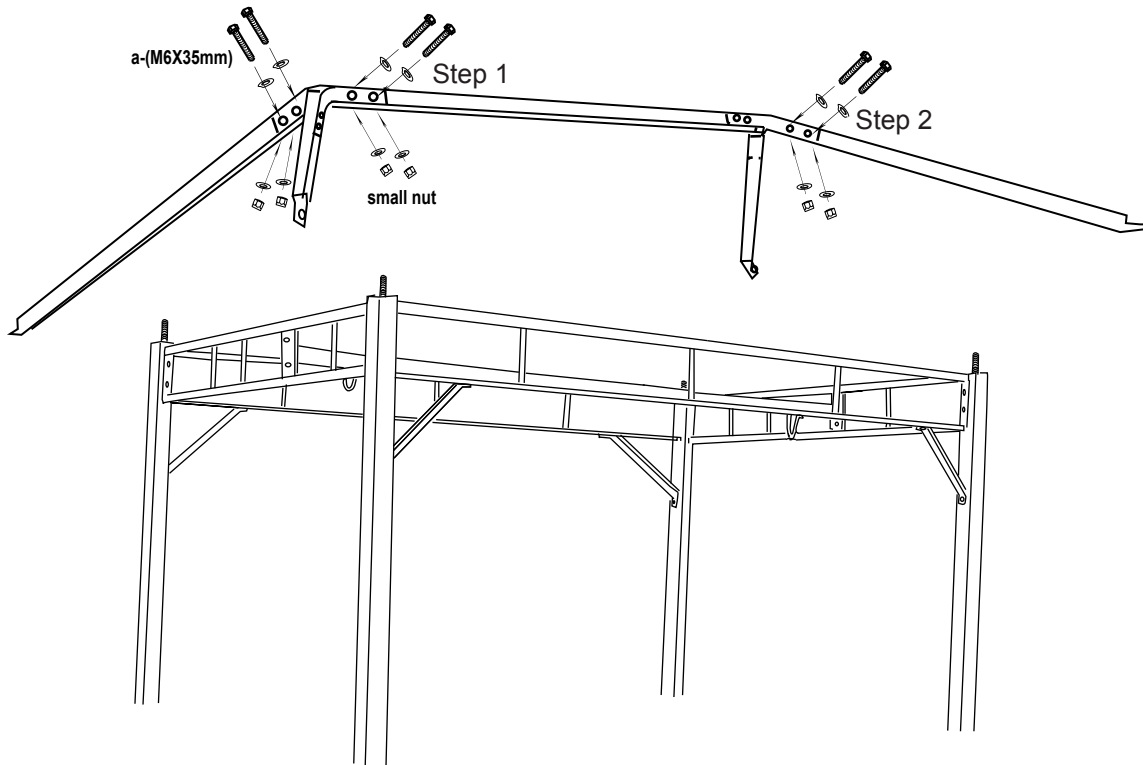

Step 4

With the help of another person, attach the top frame to the gazebo frame.


3. ASSEMBLE THE CANOPY COVER

Step 1

Attach the Canopy Cover (O) to Legs with Finial (Z) in the order of Finial (Z), Canopy Cover (O), Leg.

Step 2

Attach the border of the Canopy cover to the frame by wrapping velcro ends around the frame pole. Make sure to level off the surface of fabric by smoothing the fabric as you attach.

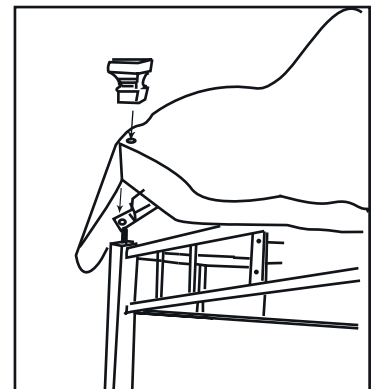


4. SEAT AND BACK ASSEMBLY

Step 1

Attach Seat (L) to Armrests (M & N) with Bolt M8x75mm (e) and Large Nut (k) in the order of Bolt M8x75mm (e), Large Metal Washer (g), bottom hole of Armrest, hole of the Seat (L), Large Metal Washer (g) and Large Nut (k).

Step 2

Attach Back (K) to the Armrest (M & N) with Bolts M8x35mm (d) in order of Bolt M8x35mm (d), Larger Metal Washer (g) the lower hole of Back (K), Armrest.

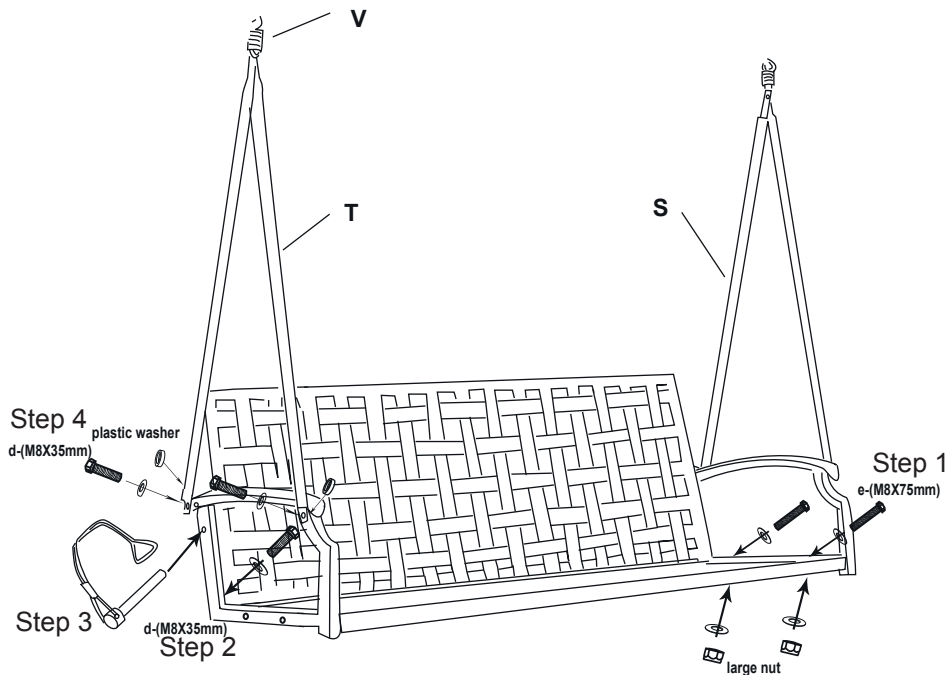

Step 3

Attach Back (K) to Armrest (M & N) with Large Peg (W) in order of Large Peg (W), Armrest (M & N), and the upper hole of the Back (K).

Step 4

Attach Long Straight Bar (S) to Rear of Armrest with Bolts M8x35mm (d) in order of Bolt M8x35mm (d), Large Metal Washer (g), Long Straight Bar (S), Plastic Washer (h), and Armrest.

Step 5

Attach Short Straight Bar (T) to front of Armrest with bolts M8x30mm (c) in order of Bolt M8x30mm (c), Large Metal Washer (g), Short Straight Bar (T), Plastic Washer (h) and Armrest.

Step 6

Connect Metal Springs (V) to Straight Bars (S & T).

Step 7

Tighten all bolts and nuts with Hex Wrench. Cover all bolts and nuts with plastic bolt and nut caps provided.

5. SWING ASSEMBLY

Step 1



Attach the Seat and Back Assembly to Beam (I) using Metal Springs (V).

Step 2

Place Cushion (U) on the Seat and Back. Attach the border of the Cushion to the Seat and the Back by wrapping the velcro ends around the tube frame of the Seat and Back.

6. HOW TO FOLD DOWN THE SWING BACK

Loosen the Large Peg (W), gently lower the Back until it reclines. Attach the Back Assembly to Support Bar 1 (H) using the Small Peg (X).

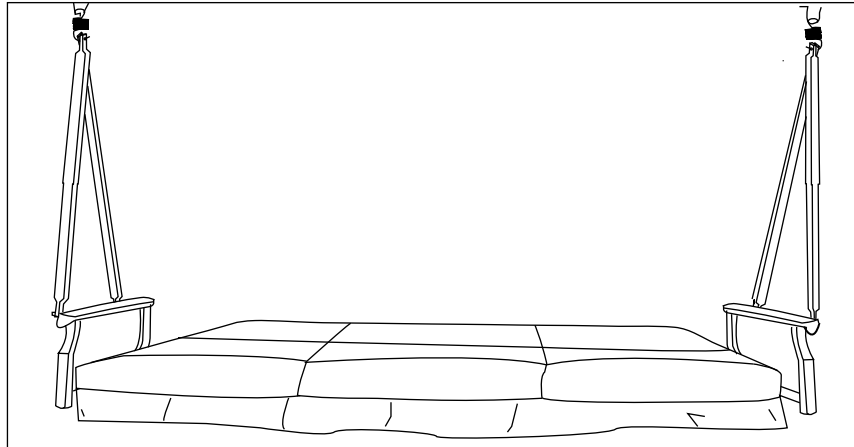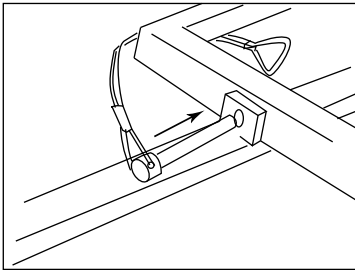

Helpful Hint: When small or large pegs are not in use, please attach to swing frame to avoid misplacing them. Keep the Touch Up Paint Bottle (Y) for future use.

Your Gazebo Swing is now ready to use.

Thank you for choosing a Home Casual product!