




INSTRUCTION MANUAL

1 Light Exterior Wall Lantern

Home Depot SKU 477405 (UPC 718212230107)

Home Depot SKU 495682 (UPC 718212230282)

(Prairie Bronze)

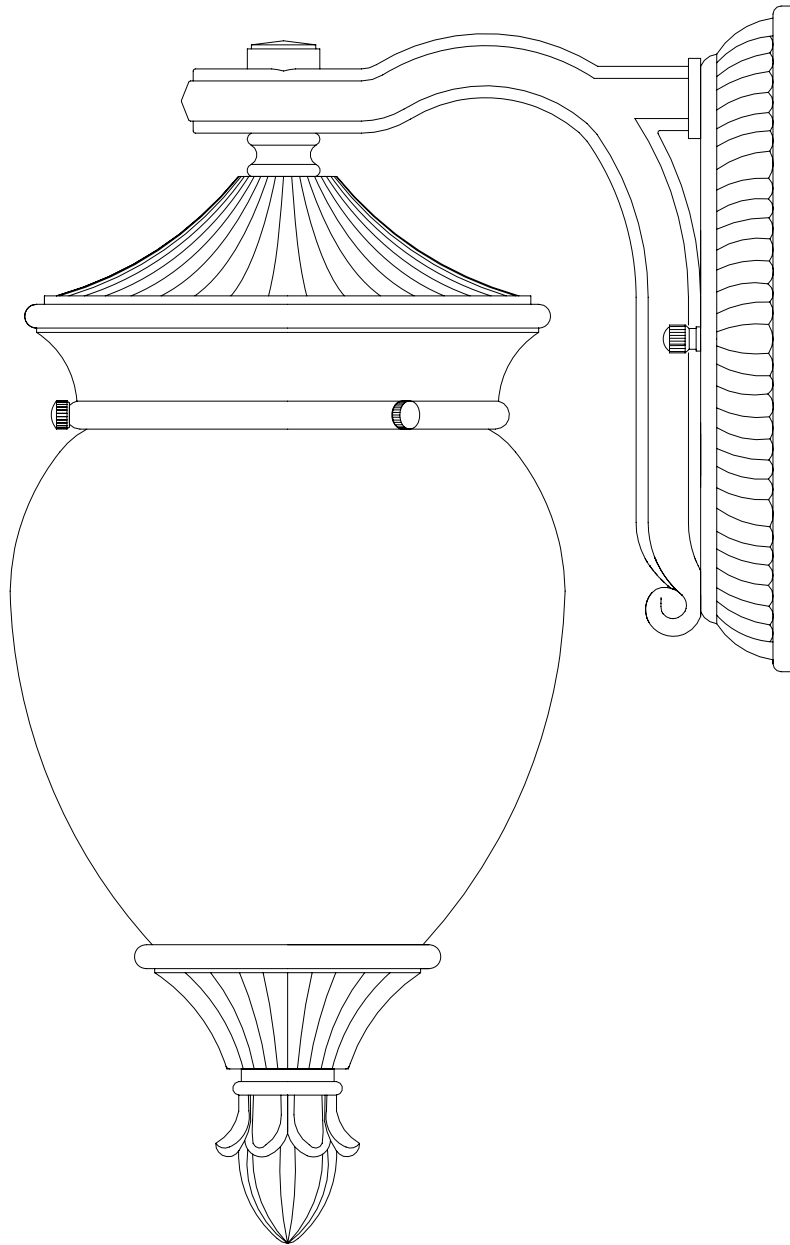

Thank you for purchasing this Hampton Bay exterior wall lantern. This product has been manufactured with the highest standards of safety and quality. The finish of this lantern is weather resistant but over time will naturally weather and fade.

FEATURES:

1. Easy and Economic Maintenance.
2. Weather Resistant Body.
3. ETL listed for Wet Location.
4. Easy to Install.

QUESTIONS, PROBLEMS, MISSING PARTS:

Before returning to your local Home Depot, please call our Customer Service Team at 1-800-527-0998 or visit www.homedepot.com. Please reference your SKU 477405 Prairie Bronze fixture or UPC 718212230107 Prairie Bronze fixture

CAUTION:

1. Before starting installation of this fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box.
2. CONSULT A QUALIFIED ELECTRICIAN IF YOU HAVE ANY ELECTRICAL QUESTIONS.
3. If you have any non-electrical questions about this fixture, please contact our Customer Service Team at 1-800-527-0998 or visit www.homedepot.com. Please reference your SKU 477405 Prairie Bronze fixture or UPC 718212230107 Prairie Bronze fixture.
4. Keep your receipt and these Instructions for Proof of Purchase.

TOOLS REQUIRED FOR ASSEMBLY & INSTALLATION (Not included):



 
Light Bulb
(60watt maximum)




Safety goggles



Silicon Rubber Sealant
for exterior use



Wire strippers

 

Flathead screwdriver



Phillips screwdriver

 


Electrical tape



Wire cutters

PARTS INCLUDED FOR ASSEMBLY (parts are not to scale):



3 Nut (#1)



1 Finial (#2)




2 Lock Nuts (#3)

ASSEMBLY INSTRUCTIONS:

1. Shut off power at the fuse box or circuit breaker box, if necessary remove old fixture and all mounting hardware from outlet box.
2. Carefully unpack your new fixture and lay out all the parts on a clear area, Take care not to lose any small parts necessary for installation.
3. Install light bulbs in accordance with the fixtures specifications. (DO NOT EXCEED THE MAXIMUM WATTAGE RATING!!)
4. Place the Glass shade (#7) up to the Fixture frame (#4) and secure with 3 pieces of Nut (#1).
5. Screwing the Finial (#2) to the bottom of Glass shade (#7).

ASSEMBLY:

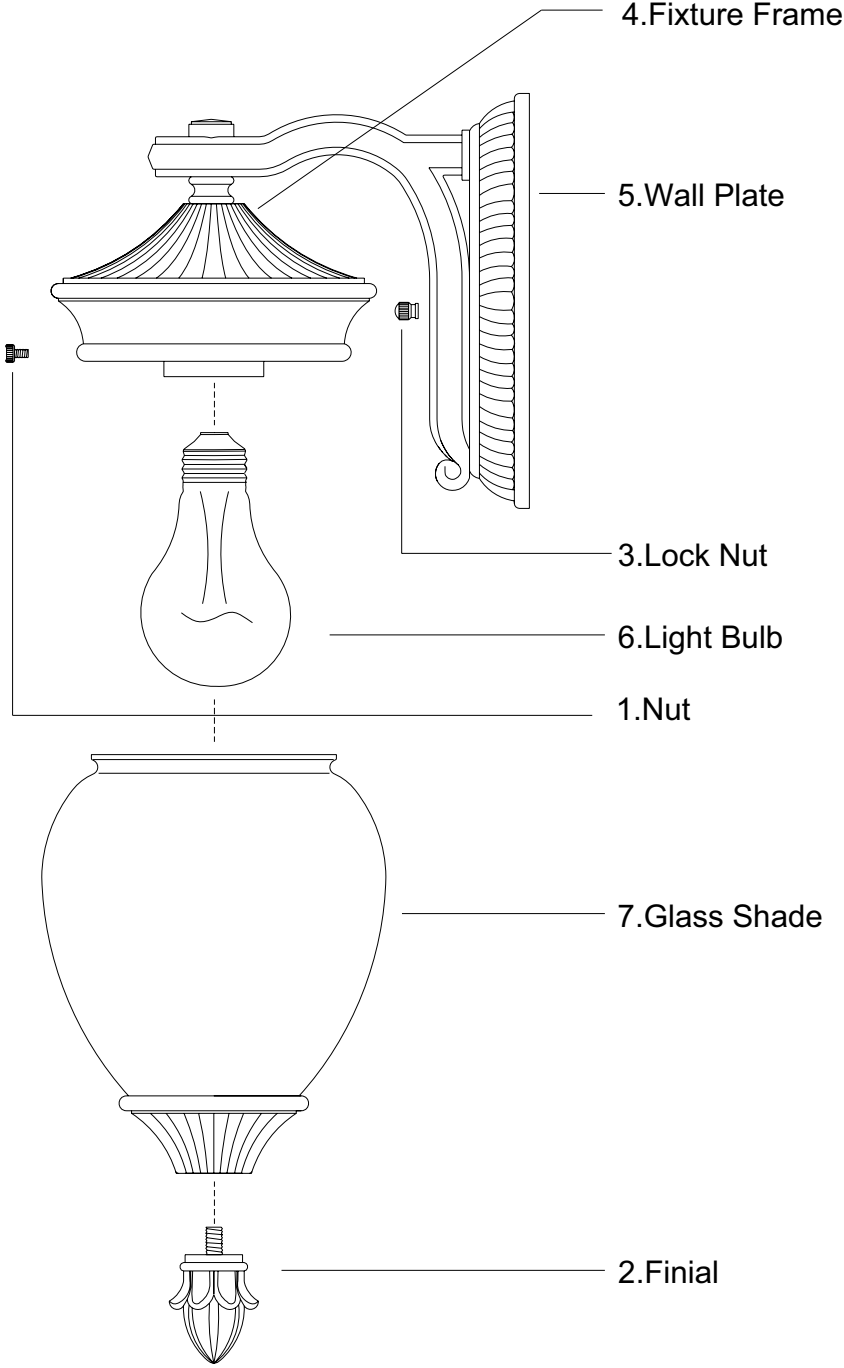


PARTS INCLUDED FOR INSTALLATION (parts are not to scale):




1 Ground Screw (#8)



 2 Outlet Box Screws (#9)



2 Mounting Screws (#10)

 

1 Cross Bar (#11)




2 Wire Connectors (#12)

INSTALLATION INSTRUCTIONS:

1. Screw the two Mounting Screws (#10) into the Cross Bar (#11). Mount the Cross Bar (#11) to the Outlet Box (#13) using the two provided Outlet Box Screws (#9). [Make sure the threads of the Mounting Screws (#10) are facing outside when the Cross Bar (#11) is attached to the Outlet Box (#13).]
2. Connect the white wire from the fixture to the white wire from the Outlet Box (#13), and the black wire from the fixture to the black wire from the Outlet Box (#13). Cover the two wire connections using the two provided Wire Connectors (#12). Wrap the two wire connections with electrical tape for a more secure connection. Connect the copper ground wires from the fixture and from the Outlet Box (#13) to the Ground Screw (#8) on the Cross Bar (#11). *Note: If you have electrical questions, consult your local electrical code for approved grounding methods.*
3. Mount the body of the fixture on the wall by aligning the protruding Mounting Screws (#10) all the way through the holes on the Wall Plate (#5). Be careful not to pinch any of the wires between the fixture and the Outlet Box (#13). Tighten the fixture to the wall by screwing the two Lock Nuts (#3) onto the two protruding Mounting Screws (#10).
4. Once the fixture is mounted on the wall, caulk the space between the wall and the upper 3/4 area of the Wall Plate (#5) to prevent water seeping into the Outlet Box (#13). Leave the bottom 1/4 area un-caulked for drainage of any water which might leak into the enclosure.
5. Installation is complete. Turn on the power at the circuit breaker or fuse box. Turn the light switch on to activate the fixture.

INSTALLATION:

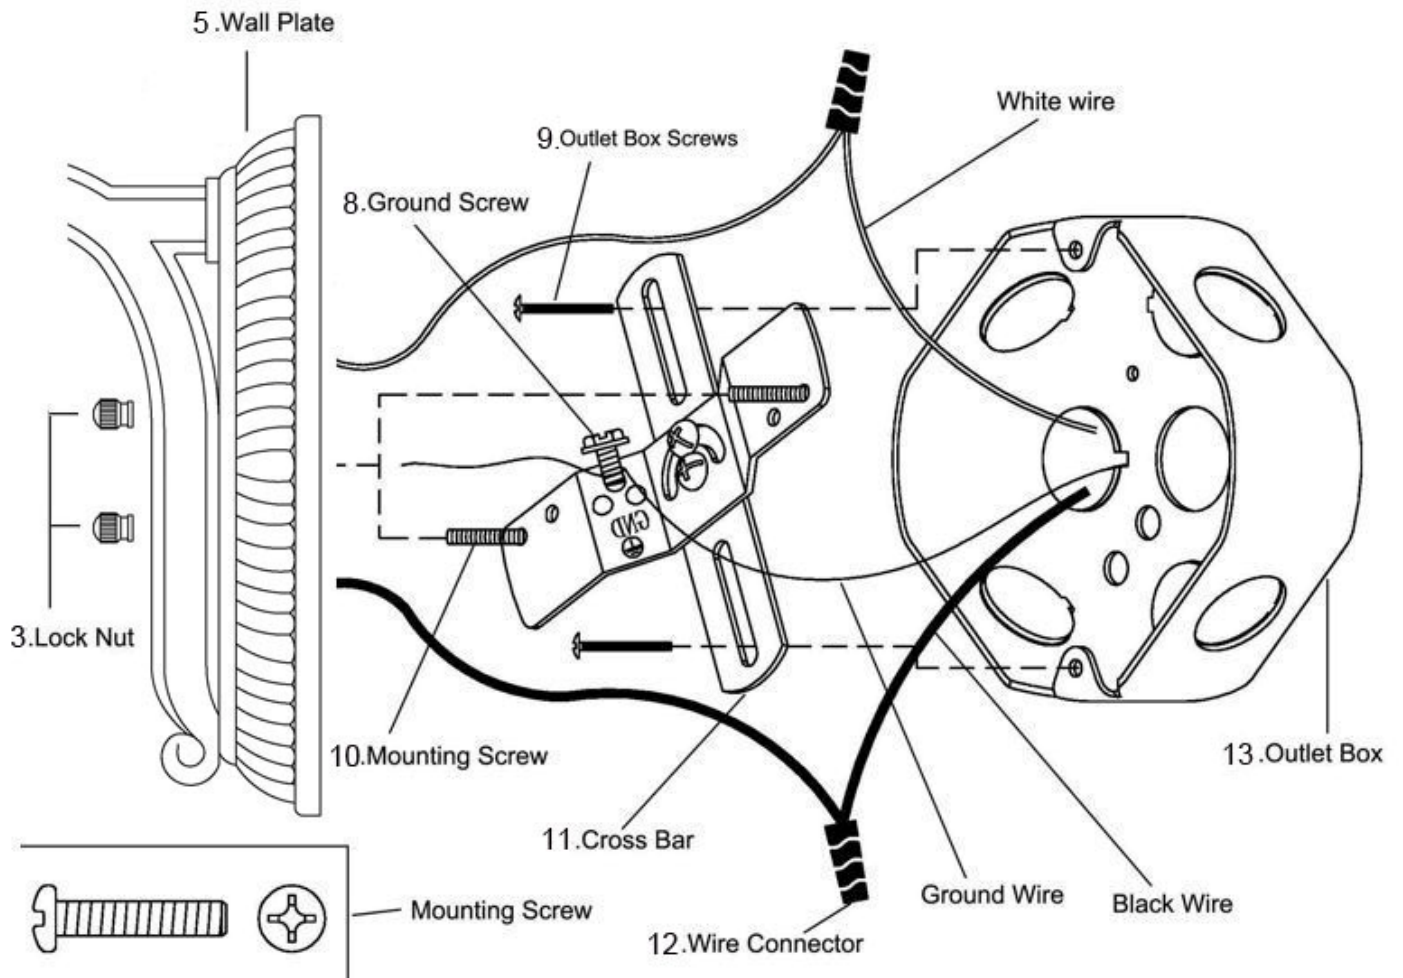

TROUBLESHOOTING:

| | Possible Cause | Corrective Action |
|--|---|----------------------------------|
| Bulb will not light. | 1. Bulb is burned out. | 1. Replace light bulb. |
| | 2. Power is off. | 2. Make sure power supply is on. |
| | 3. Faulty wire connection. | 3. Check wiring. |
| | 4. Faulty switch. | 4. Test or replace switch. |
| Fuse blows or circuit breaker trips when light is turned on. | Crossed wires or power wire is grounding out. | Check wire connections. |

PRODUCT MAINTENANCE:

1. To clean the outside of the fixture, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the glass and surface of the fixture.
2. To clean the inside of the fixture, first disconnect power to the fixture by turning off the circuit breaker or by removing the fuse at the fuse box. Next, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the inside glass and interior surface of the fixture.
3. Do not use any cleaners with chemicals, solvents or harsh abrasives. Use only a dry soft cloth to dust or wipe carefully.

LIMITED WARRANTY

The manufacturer warrants this lighting fixture to be free from defects in materials and workmanship for a period of three (3) years from date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alterations, neglect or mishandling. This warranty shall not apply to any product that is found to have been improperly installed, set-up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, or faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear. **The manufacturer does not warrant and specially disclaims any warranty, whether express or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to any labor / expense costs involved in the replacement or repair of said product.**