



FIRE PIT W/ BBQ GRILL

ITEM # 96811



OWNER'S MANUAL AND SAFETY INSTRUCTIONS

SAVE THIS MANUAL. KEEP THIS MANUAL FOR SAFETY WARNINGS, PRECAUTIONS, ASSEMBLY, OPERATION, INSPECTION, MAINTENANCE AND CLEANING PROCEDURES. WRITE THE PRODUCT'S SERIAL NUMBER ON THE BACK OF THE MANUAL, OR THE MONTH AND YEAR OF PURCHASE IF PRODUCT HAS NO SERIAL NUMBER

FOR QUESTIONS, PLEASE CALL CUSTOMER SERVICE: 909.628.4900

SAFETY INFORMATION

WARNING

Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in injury and/or property damage. Save all warnings and instructions for future reference.

The warning and safety instructions in this manual are not meant to cover all possible conditions and situations that may occur. Common sense, caution and care must be exercised when operating or cleaning tools and equipment. Always contact your dealer, distributor, service agent or manufacturer about problems or conditions you do not understand before operating the product.

- 1. Improper installation, adjustment, alteration, service or maintenance can cause injury or property damage.
- 2. Read the installation, operation, and maintenance instructions thoroughly before installing or servicing this equipment.
- 3. Failure to follow these instructions could result in fire or explosion, which could cause property damage, personal injury, or death.

- * FOR OUTDOOR USE ONLY.
- * KEEP THE OUTDOOR FIRE PIT AT LEAST 20 FEET AWAY FROM ANY FLAMMABLE SURFACE OR DWELLING.
- * KEEP AWAY FROM CHILDREN AND PETS.
- * CHECK WITH THE LOCAL OFFICIALS AND FIRE DEPARTMENT FOR ORDINANCES REGARDING THE USE OF OUTDOOR FIRE PITS.
- * NEVER USE GASOLINE, KEROSENE, LIGHTER FLUID, ALCOHOL OR ANY OTHER FLAMMABLE MATERIAL TO LIGHT YOUR FIRE.
- * ALWAYS USE GLOVES AND PROTECTIVE GLASSES WHEN LOADING THE FIRE PIT OR EXTINGUISHING THE FIRE.
- * NEVER LEAVE THE FIREPIT UNATTENDED WHEN NOT IN USE
- * DO NOT MOVE THE FIRE PIT WHEN HOT OR LIT
- * ALWAYS SET THE OUTDOOR FIREPIT ON A LEVEL NON-FLAMMABLE SURFACE
- * NEVER OVER LOAD THE OUTDOOR FIREPIT

DANGER

DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

DANGER

Failure to comply with the precautions and instructions provided with this fire pit can result in death, serious bodily injury and property loss or damage from hazards of fire, explosion, burn, asphyxiation, and/or carbon monoxide poisoning. Only persons who can understand and follow the instructions should use or service this fire pit.

DANGER

FOR YOUR SAFETY

If you smell gas:

1. Shut off gas to the appliance.
2. Extinguish any open flame.
3. If odor continues, keep away from the appliance and immediately call you gas supplier or fire department.

Solid fuels shall not be burned in this appliance.

SAFETY INFORMATION

DANGER

- EXPLOSION - FIRE HAZARD
- Keep solid combustibles, such as building materials, paper or cardboard, a safe distance away from the fire pit as recommended by the instructions.
- Provide adequate clearances around air openings into the combustion chamber.
- Never use the fire pit in spaces which do or may contain volatile or airborne combustibles, or products such as gasoline, solvents, paint thinner, dust particles or unknown chemicals.
- During operation, this product can be a source of ignition. Keep fire pit area clear and free from combustible materials, gasoline, paint thinner, cleaning solvents and other flammable vapors and liquids. Do not use fire pit in areas with high dust content. Minimum fire pit clearances from combustible materials: two (2) feet from the sides & two (2) feet from the rear, 6 feet from ceiling.

DANGER

- CARBON MONOXIDE HAZARD
- This fire pit is a combustion appliance. All combustion appliances produce carbon monoxide (CO) during the combustion process. This product is designed to produce extremely minute, non-hazardous amounts of CO if used and maintained in accordance with all warnings and instructions. Do not block air flow into or out of the fire pit.
- Carbon Monoxide (CO) poisoning produces flu-like symptoms, watery eyes, headaches, dizziness, fatigue and possibly death. You can't see it and you can't smell it. It's an invisible killer. If these symptoms are present during operation of this product get fresh air immediately!
- For outdoor use only.
- Never use inside house, or other unventilated or enclosed areas.
- This fire pit consumes air (oxygen). Do not use in unventilated or enclosed areas to avoid endangering your life.

WARNING

WARNING indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

WARNING

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance. An LP-cylinder not connected for use shall not be stored in the vicinity of this or any other appliance.

WARNING: For Outdoor Use Only

DANGER



CARBON MONOXIDE HAZARD
This appliance can produce carbon monoxide which has no odor. Using it in an enclosed space can kill you. Never use this appliance in an enclosed space such as a camper, tent or home.










WARNING

We cannot foresee every use which may be made of our fire pit.
Check with your local fire safety authority if you have questions about fire pit use.
Other standards govern the use of fuel gases and heat producing products for specific uses. Your local authorities can advise you about these.
If no local codes exist, follow National Fuel Gas Code, ANS Z223.1. In Canada, installation must conform to local codes. If no local codes exist, follow the current National standards of CANADA CAN/CGA-B 149.2.

WARNING

Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death. Read the installation, operation and maintenance instructions thoroughly before installing or servicing this equipment.

PARTS INFORMATION


| Part List | Description | Qty. | Drawings |
|-----------|--------------|------|---|
| A | Base | 1 |  |
| B | Fire Bowl | 4 |  |
| C | Mesh Lid | 4 |  |
| D | Nut | 3 |  |
| E | Lid Ring | 1 |  |
| F | Bolt (M6x8) | 6 |  |
| G | Bolt (M6x12) | 3 |  |
| H | Poker | 1 |  |
| I | Allen Wrench | 1 |  |
| J | Connector | 6 |  |

ASSEMBLY


Estimated Assembly Time: 20 Minutes

DO NOT over tighten hardware.

Step 1: Attach Base (A) to Fire Bowl (B) with Bolts (G) and Nuts (D). Tighten all bolts by Allen Wrench (I). (View Fig 1).

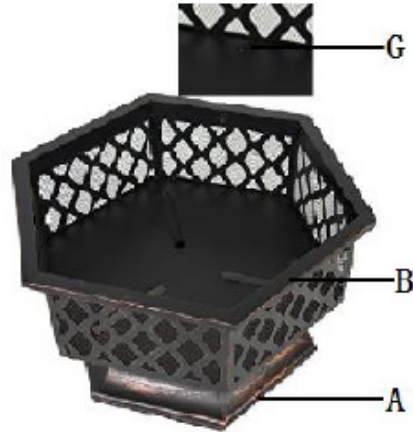

STEP 2: Attach Frame Support Parts (C) to Legs (B) by Bolts (H) as shown. Repeat the same steps for another Frame Support Parts. Tighten all bolts by Allen Wrench (J)

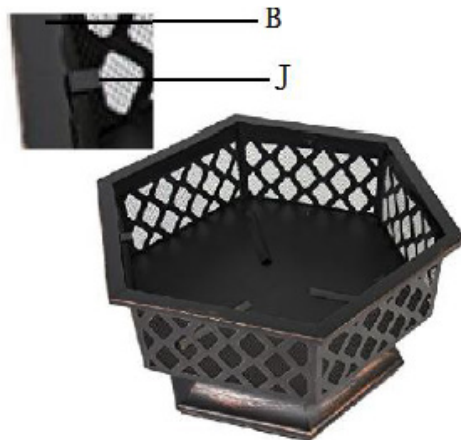

STEP 3: Place Fire Bowl (E) in the center of Top Frame (A) and put Log Grate (D) in the Fire bowl (E). Mount Lid Ring (G) on the Mesh Lid (F), then place the assembled Mesh Lid over the Fire bowl (E).



OPERATION

OPERATING INSTRUCTIONS

LIGHTING

1. make sure there is only a small amount of ash in the bottom of the bowl.
2. place a layer of dry kindling or a natural firestarter onto the center of the grate.
3. place above that a layer of dry seasoned hardwood that is cut to lengths no more than 3/4 the diameter of the bowl.
4. use a match to light kindling or firestarter.
5. using a hook and heat resistant gloves, replace spark guard once the kindling or firestarter is lit.

TENDING THE FIRE

You may need to shift and/or add logs for an ideal experience. CAUTION: DO NOT place a hot spark guard or hot fire bowl tools onto combustible surfaces such as grass, wooden deck or furniture.

1. Using a hook and heat resistant gloves, carefully remove spark guard.
2. While using a long handled fire pit tool, shift coals and logs to allow additional airflow.
3. DO NOT add gasoline, kerosene, diesel fuel, lighter fluid or alcohol to relight or enhance an existing fire.
4. Wait until glowing coals have developed before adding any additional wood. If additional wood is required, place wood on top coals. Be careful not to shift ashes.
5. Using a hook and heat resistant gloves, replace spark guard.

EXTINGUISHING

1. Allow fire to burn itself out.
2. DO NOT use water to extinguish as this is dangerous and can cause damage to this outdoor fire pit.

CLEANING AND CARE

Inspecting This outdoor fire pit should be inspected on a regular basis to ensure product safety and longer product life. CAUTION: DO NOT attempt to inspect this outdoor fire pit until the fire is completely out.

1. Check handles to make sure they are secure.
2. Check components for any signs of damage or rust.
3. If damage to any components is detected, DO NOT operate until repairs are executed.

CLEANING

This outdoor fire pit should be inspected on a regular basis to ensure product safety and longer product life.

Note: After repeated use, a slight discoloration of the finish may occur.

STORAGE

CAUTION: DO NOT move or store this outdoor fire pit until the fire is completely out.

1. Once the fire is out, coals are cold and outdoor fire pit is cool to the touch, remove ashes and properly dispose.
2. Store assembled in a location away from children and pets.

OPERATION

CAUTION: DO NOT attempt to inspect this outdoor fire pit until the fire is COMPLETELY out.

CAUTION: DO NOT use oven cleaner or abrasive cleaners as they will damage this product.

CAUTION: DO NOT clean any part of this outdoor fire pit in a self cleaning oven as it may damage the finish.

1. Wipe exterior surfaces with a mild dishwashing detergent or baking soda.
2. For stubborn surfaces use a citrus based degreaser and a nylon scrubbing brush.
3. Rinse clean with water.
4. Remove built-up creosote from components with a chimney cleaning product. 3. Rinse clean with water.

OF NOTE

PLEASE READ THE FOLLOWING CAREFULLY

THE MANUFACTURER AND/OR DISTRIBUTOR HAS PROVIDED THE PARTS LIST AND ASSEMBLY DIAGRAM IN THIS MANUAL AS A REFERENCE TOOL ONLY. NEITHER THE MANUFACTURER OR DISTRIBUTOR MAKES ANY REPRESENTATION OR WARRANTY OF ANY KIND TO THE BUYER THAT HE OR SHE IS QUALIFIED TO MAKE ANY REPAIRS TO THE PRODUCT, OR THAT HE OR SHE IS QUALIFIED TO REPLACE ANY PARTS OF THE PRODUCT. IN FACT, THE MANUFACTURER AND/OR DISTRIBUTOR EXPRESSLY STATES THAT ALL REPAIRS AND PARTS REPLACEMENTS SHOULD BE UNDERTAKEN BY CERTIFIED AND LICENSED TECHNICIANS, AND NOT BY THE BUYER. THE BUYER ASSUMES ALL RISK AND LIABILITY ARISING OUT OF HIS OR HER REPAIRS TO THE ORIGINAL PRODUCT OR REPLACEMENT PARTS THERETO, OR ARISING OUT OF HIS OR HER INSTALLATION OF REPLACEMENT PARTS THERETO.

Record Product's Serial Number Here: _____

Note: If product has no serial number, record month and year of purchase instead.

Note: Some parts are listed and shown for illustration purposes only and are not available individually as replacement parts.

Questions, issues or missing parts?

Before returning to your retailer, our customer service team is here to help.



Call Us: 909.628.0880

Email Us: customer@bartonliving.com

Hours of Operation: 9am - 3pm PST Monday - Friday

MADE IN CHINA