


# PRODUCT INSTRUCTION

## NAMES OF PARTS

When using electrical appliance, basic safety precautions should always be followed, including the following:

- 1. Housing
- 2. Temperature knob
- 3. Function knob
- 4. Temperature knob
- 5. Indicator light
- 6. Timer knob
- 7. Oven foot
- 8. Door handle
- 9. Door glass
- 10. Crumb tray
- 11. Baking rack
- 12. Baking tray
- 13. Helper handle
- 14. Rotisserie fork
- 15. Extract Clamp

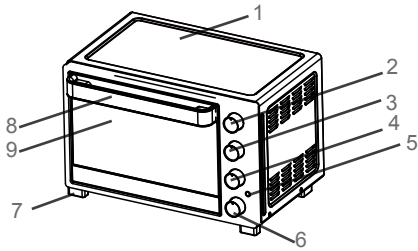

10



11



12



13



14



15