

# ASSEMBLY INSTRUCTIONS



# 7363417 MAGNETIC SCREEN HOUSE 11' X 9'

## SAFETY WARNING - DOs AND DO NOTs

EVERYONE WHO USES THIS SCREEN HOUSE SHOULD READ THIS MANUAL AND BECOME FAMILIAR WITH ALL SAFETY WARNINGS AND PRECAUTIONS FOR SAFE USE, ASSEMBLY, CARE, MAINTENANCE, AND STORAGE. KEEP THIS MANUAL SO YOU CAN REFER TO IT LATER.

### WARNING

FLAMMABILITY WARNING KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS SCREEN HOUSE FABRIC

This screen house is made with flame resistant fabric which meets CPAI-84 specification. IT IS NOT FIREPROOF. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the screen house fabric may render the flame-resistant properties ineffective. For these reasons:

- DO NOT use matches, lighters, stoves, heaters, grills, lanterns, candles, cooking equipment, or other fuel-burning devices inside or near a screen house.
- DO NOT build fires inside or near a screen house.
- DO NOT leave campfires unattended.

Your failure to follow this warning will cause death, serious injury, or permanent disability to you or others.

PROTECT YOUR CHILDREN

Children will not understand and appreciate safety warnings, and will not know how to avoid or respond to these hazards if no adults are present.

For these reasons:

- DO NOT leave children unattended inside a screen house or in camp.
- DO NOT allow children to assemble a screen house.
- DO NOT allow children to enter or exit a screen house except through the door.

Your failure to follow this warning will cause death, serious injury, or permanent disability to your children.

## CARE

DO NOT LEAVE YOUR SCREEN HOUSE SET UP IN DIRECT SUNLIGHT LONGER THAN NECESSARY. THE SUN'S ULTRAVIOLET (UV) LIGHT DEGRADES ALMOST EVERY FABRIC AND MATERIAL. IF LEFT IN SUNLIGHT FOR PROLONGED PERIODS OF TIME, FABRIC WILL FADE AND WEAKEN. DO NOT STORE SCREEN HOUSE ON CONCRETE FLOOR. DO NOT SPRAY THE SCREEN HOUSE WITH INSECTICIDE.

EXERCISE CARE WHEN USING ELECTRIC DEVICES IN AND NEAR SCREEN HOUSE.

Although our tents and screen houses are constructed to rigid specifications, periods of wind or rain soaking the ground may loosen the stakes and cause the uprights to sink into the ground. This will weaken the rigidity of the overall structure. Water pockets may also form in the roof if the unit is not assembled taut, possibly causing broken frames and torn fabric.


## REPLACEMENT PARTS

If you have questions or need to order a part, call 1-800-325-4121 or send an email to [contactus@wenzelco.com](mailto:contactus@wenzelco.com). Have your model number or part number ready when you call. DO NOT ORDER BY REFERENCE KEY NUMBER.

Send your request for parts to:

Exxel Outdoors, LLC.  
6235 Lookout Road  
Boulder, CO 80301

KEY NO.	MODEL NO 7363417, 11' X 9'		QTY REQ
	DESCRIPTION	PART NO.	
A	Main Pole	7363417M	2
B	Ridge Pole	7363417R	1
C	Upright Pole	7363417U	4
D	Corner Joint	7363417CJ	4
	Complete Frame	7363417ST	1
	Magnet	7363417DM	14
	Guy Rope	A1001	4
	Steel Stake	PIN STAKE	18
	Plastic Stake	7.25 STAKE	4

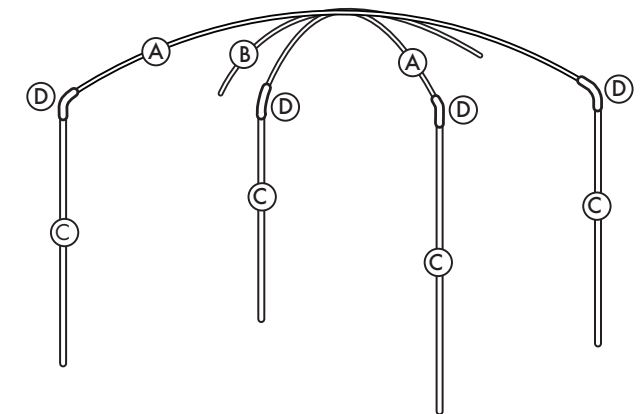

# ASSEMBLY INSTRUCTIONS



7363417 MAGNETIC SCREEN HOUSE 11' X 9'

**IMPORTANT:** WE ADVISE YOU TO ASSEMBLE THE SCREENHOUSE BEFORE USE TO BECOME FAMILIAR WITH THE ASSEMBLY. IT IS RECOMMENDED TWO ADULTS BE INVOLVED IN SET UP.


**NOTE:** PLEASE LOOK AT THE REPLACEMENT PARTS DIAGRAM TO SEE HOW YOUR FRAME IS ASSEMBLED. TO PROLONG THE LIFE OF THE SCREENHOUSE, SELECT A LEVEL, CLEAN AREA FOR SET UP.

**STEP 1:** Spread screen house out flat with the black and grey pole sleeves facing up.

**STEP 2:** Extend the three fiberglass frame poles by pulling out each section and placing pole ends into the metal ferrule connectors. You will have two black poles (A) and one grey pole (B).




**STEP 3:** While leaving screen house on the ground, make certain the pole sleeves are in line with each other and slide each fiberglass pole through the corresponding colored sleeves (black and grey) that are opposite each other on the roof of the screen house.

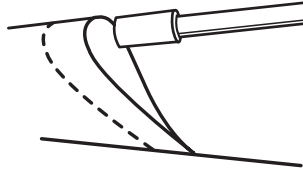


**STEP 4:** Straighten the pole sleeves along the fiberglass poles and position the poles so that they are laid out even across the top of the screen house.

 **STEP 5:** Locate the grommets on the webbing that are attached to the screen house above the two doors. Place one end of the grey fiberglass pole into one grommet. Go to the other side of the screen house and flex the fiberglass pole and place the other end into the corresponding grommet. The tension of the webbing can be adjusted to optimize the magnetic door function once the screen house is set up.




**STEP 6:** Locate the plastic corner joints (D) that are attached to the screen house. Attach them to the ends of the black fiberglass poles. The smaller opening of the corner joints with "teeth" fit over the end ferrules on fiberglass poles.

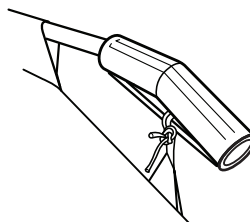


**STEP 7:** Where the three poles cross at the center of roof there is a tie that goes over the poles to hold them together.




**STEP 8:** Extend each of the four steel poles (C), by pulling out each wire-corded section and placing the jointed ends into the connected pole sections.

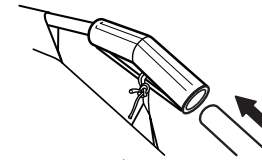

**STEP 9:** With an adult on each side at one end of the screen house, insert the end of the steel poles into the bottom opening of the plastic joint at the roof corner of the screen house.

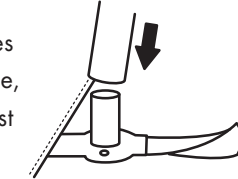


**STEP 10:** Each adult should lift up on the steel poles and while raising the end portion of the screen house, place the bottom ends of the steel poles over the fast feet at the base of the screen house.

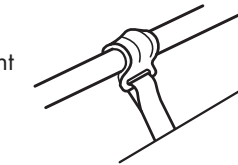

**STEP 11:** Using the two remaining steel poles, repeat the previous step at other side of the screen house.


**STEP 12:** Clip the screen house to the steel upright poles with the plastic clips sewn to the screen house walls.

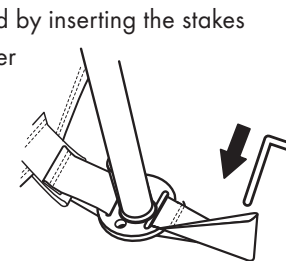


**STEP 13:** Stake the screen house to the ground by inserting the stakes through the stake loops at each corner. Hammer stakes into the ground at a 45° angle, making sure the screen house is pulled out even and tight. Continue to stake down the screen house by staking down the stake loops at all four corners of the door mats under each door.

**NOTE:** For the magnetic doors to open and close properly it is important to stake down the door mats.

**STEP 14:** Guy ropes have been provided for added stability. Extend each of the guy ropes which are attached to the four corners of the screen house. Make a loop at the opposite end of the guy rope, by using slider as shown and place loop over plastic tent stake. Adjust slider to make guy rope tight and stake to the ground.

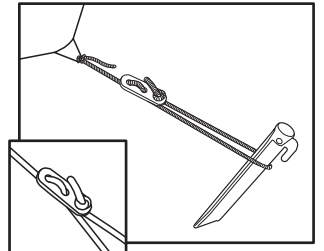

Assembled screen house should appear as shown.

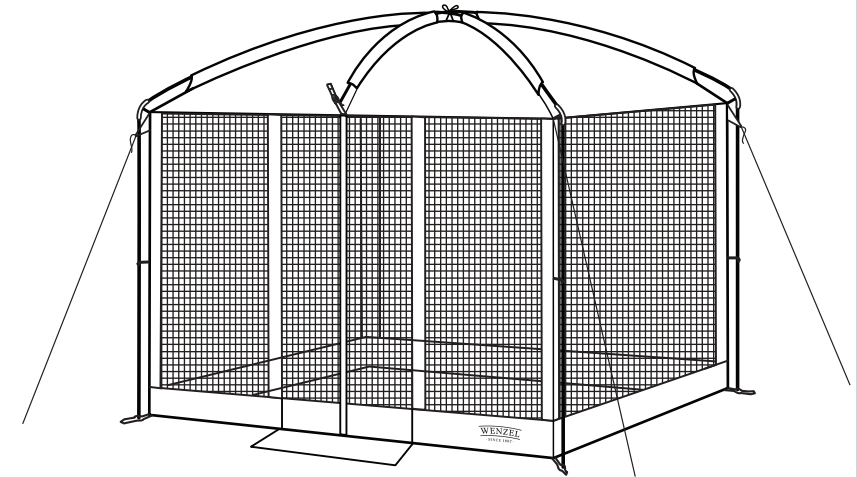

**NOTE:** To take down screen house, follow steps above in the reverse order. Place stakes into stake bag and poles into pole bag, which are provided. The screen house should be folded into equal parts toward the center of the screen house to distribute the bulk. Place frame on folded screen house and start a small tight roll, the width of your carry bag. Once rolled, tie a string or rope around screen house to hold it in place. Place screen house and stake bag into carry bag. **Make sure screen house is clean and dry before storing.**