INSTRUCTIONS! Read Before Use!





IMPORTANT SAFETY INSTRUCTIONS, READ AND FOLLOW ALL WARNINGS AND INSTRUCTIONS BEFORE USING THIS PRODUCT. INJURY CAN RESULT FROM IMPROPER USE. SAVE THESE INSTRUCTIONS.

 
#### Dear Customer,

Thank you for your purchase of the new Pocket Hose® Silver Bullet™.

#### **Instructions For Use:**

- 1. Remove the Pocket Hose® Silver Bullet™ from the package and completely unravel. Note: The Adjustable Spray Aluminum Nozzle will be extended in the closed position. (Figure 1)
- 2. Ensure Adjustable Spray Aluminum Nozzle is attached tightly to the connector. (Figure 2)
- 3. Attach the Pocket Hose® Silver Bullet™ inlet to the water supply of your home. (Figure 3)
- 4. Turn on the tap from your home's water supply and let the Pocket Hose® Silver Bullet™ fully expand.
- 5. Holding the connector between thumb and forefinger, turn the nozzle counter-clockwise to the open position to spray.









Using Adjustable Spray Aluminum Nozzle

Turn Adjustable Spray Aluminum Nozzle counter-clockwise to turn on. Turn clockwise to turn off.



### Storing the Pocket Hose®Silver Bullet™:

After use, turn off the tap for your home's water supply. Twist open the Adjustable Spray Aluminum Nozzle to drain the water from the Pocket Hose® Silver Bullet™. As this happens, the Pocket Hose® Silver Bullet™ will shrink to its original size.

NOTE: To prolong the life of your Pocket Hose® Silver Bullet™, completely drain and ALWAYS store INDOORS when not in use.

## To use your own spray nozzle:

Adjustable Spray Aluminum Nozzle can be removed from the Pocket Hose® Silver Bullet™ if you prefer to use your own spray nozzle. Turn nozzle counter clockwise to remove and then attach your own spray nozzle.

### **Important Safety Information:**

## **WARNING**

- The water in ANY garden hose may become contaminated and cause serious health effects.
- NEVER stretch or expand the hose when empty or not under water pressure. Hose will snap back if stretched and released, and may cause serious injury.
- Strangulation hazard. Hose wrapped around neck may cause serious injury or death.
- Keep out of reach of children and pets.
   For general OLITDOOR use ONLY in an
- For general OUTDOOR use ONLY in applications under 80psi.
   DO NOT use this bose for commercial applications, in hot water
- DO NOT use this hose for commercial applications, in hot water applications, or high pressure applications (such as a pressure washer). Doing so may cause serious personal injury and/or damage or destroy the product.
  DO NOT leave this product unattended when it is in use or under
- pressure.
- This product is NOT A TOY

### LIMITATION OF LIABILITY

Liability limited to the purchase price of this product.

TeleBrands Corp. shall not be liable for any incidental or consequential damages or any implied warranty on this product.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.



# INSTRUCTIONS! Read Before Use!