


ITEM #000 000
MODEL #DS-25802

Use and Care Guide

MESH SCREEN

Assembling the mesh screen

- Attach the cover handle (A) to the mesh cover (B) by inserting the cover handle (A) through the top of the mesh cover (B) and securing with a nut (C).
- Tighten the nut with a wrench (not included).
- Carefully use the assembled mesh cover with your fire pit.

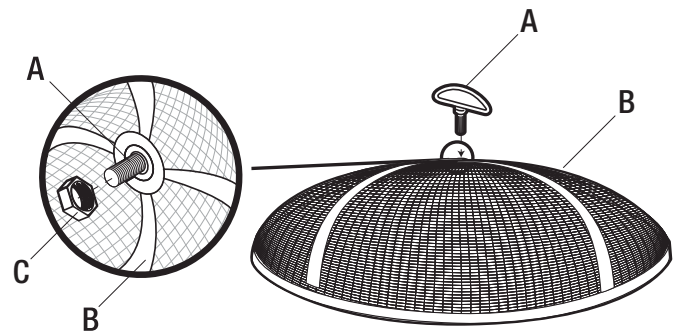

Safety Information



WARNING: Clean after each use.



WARNING: Keep out of reach of children and pets.



CAUTION: Use the hook to lift / replace the mesh cover while the fire is burning.



WARNING: Keep out of rain.



WARNING: Cover the unit when not in use to prolong the life.



WARNING: Keep away from windy or drafty location.

Care and Cleaning

Clean with a soft cloth and water or a dust cloth. Do not use a scrub brush. If the paint chips, use only high temperature paints and a brush to fix. If rust is showing, sand lightly and repaint the area with high-temperature paints.

Warranty

This product carries no warranty. No replacement parts available.

For questions or concerns about this product, contact the Customer Service Team 8:00 a.m. to 5:00 p.m. EST at 1-877-527-0313 or visit www.HomeDepot.com.