FIREFLECT SHIELD™

Product Installation Sheet

Required Equipment

- Dust Mask
- Safety Glasses
- Gloves








Installation

- 1. Remove the fireplace grate and throughly clean fireplace.
- 2. When you open the box, you are looking at the back side (the side with the folded over edges in the 321 stainless steel) of the FireFlect[™] Shield. This is the side that will be facing the back wall of your fireplace.
- 3. Carefully swing the arms around from the back side to the front side of the FireFlect Shield[™]. You may wish to grab a straight edge or use the edge of a table to avoid creases when folding the arms to the front. You do not need to fold the arms all the way so they are flush to the front (smooth side). It is better to have the arms so they are flat or slightly bending to the front side. This creates a "spring" effect and keeps the FireFlect Shield pushed toward your fireplace wall.
- 4. Carefully set your FireFlect Shield[™] in your fireplace, make sure it is all the way against the back-wall. Be sure the FireFlect Shield[™] sits directly against the back-wall, and the smooth side (no folded edges) it facing toward the room.
- 5. Replace your fireplace grate

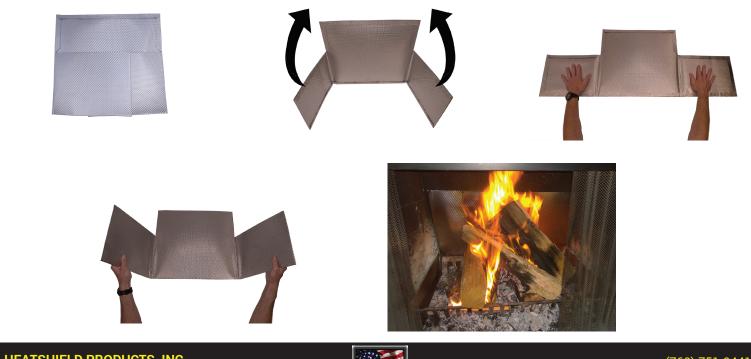



(760) 751-0441 tech@heatshieldproducts.com www.heatshieldproducts.com