

Elite Cuisine

BY MAXI-MATIC

COFFEE GRINDER & SPICE MILL

MOLINO PARA CAFÉ Y ESPECIAS

MODEL: ETS-9053

INSTRUCTION MANUAL

Before operating your new appliance, please read all instructions carefully and keep for future reference.



Questions? Elite's customer service team is ready to help.
Call us toll-free at 800-365-6133 ext. 120/105.
For more Elite products, visit us at www.maxi-matic.com.

TABLE OF CONTENTS

IMPORTANT SAFEGUARDS	2
SHORT CORD PURPOSE	3
POLARIZED PLUG	3
PARTS IDENTIFICATION	4
BEFORE FIRST USE	4
HOW TO USE	5
CLEANING AND MAINTENANCE	5
WARRANTY POLICY	6
RETURN INSTRUCTIONS	7

IMPORTANT SAFEGUARDS

The Elite Brand takes consumer safety very seriously. Products are designed and manufactured with our valued consumers' safety in mind. Additionally, we ask that you exercise a level of caution when using any electrical appliance by following all instructions and important safeguards.

READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE.

WARNING: When using electrical appliances, basic safety precautions should always be followed as below:

1. When passing this device on to third parties, this operating manual must also be handed over.
2. This device complies with technical standards and the relevant safety requirements for electrical devices.
3. The manufacturer assumes no responsibility for damages arising from improper use or from failure to comply with the instructions in this manual.
4. Before first use, please check whether the type and mains voltage match the specifications on the nameplate.
5. A residual current circuit breaker with a residual operating current not exceeding 30 mA in the house circuit offers additional protection. Consult an electrician for information on the device and installation.
6. Use the device only for its intended purpose.
7. This device is for indoor use only.
8. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or by those with a lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
9. Risk of electric shock! Do not submerge the product in water.
10. Do not use the device if it is damaged. To avoid hazards, defective components must only be replaced by the manufacturer, its customer service department or similarly qualified persons.
11. Never transport the device during use.
12. Do not open the device. Do not insert any foreign objects inside of the outer casing.
13. Never touch the power plug with wet or damp hands.
14. Do not operate this device with wet hands or when standing on a wet floor.
15. Regularly inspect the power plug and cord. If the power cord of this device has been damaged, it must be replaced by the manufacturer, the manufacturer's customer service or by a similarly qualified person in order to prevent hazards.
16. Prevent damage to the cable due to squashing, bending or scuffing on sharp edges.
17. Lay the power cord out in such a way that accidentally pulling on it or tripping over it will not be possible.
18. Do not pull on the power cord when disconnecting the plug from the power outlet. Do not wrap the power cord around the device.
19. When using an extension cord, make sure it is suitable for the corresponding power rating.
20. Always unplug the device when left unattended, during disassembly, assembly or cleaning.
21. The blades are sharp, exercise extreme caution when cleaning.
22. CAUTION: The blades must be still before opening the lid.
23. The blades may not be resharpened. The blades were balanced exactly by the manufacturer. If the blades are no longer in balance, the device may be damaged and pose a risk to the user.
24. Do not operate the device when empty. This may damage the motor.

SHORT CORD PURPOSE

Note: A short power cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a long cord.

Longer power-supply cords or extension cords are available and may be used if care is exercised in their use.

If an extension cord is used: (1) the marked electrical rating of the extension cord should be at least as great as the electrical rating of the product; (2) the extension cord should

be arranged so that it will not drape over the counter top or tabletop where it can unintentionally be pulled on or tripped over by children or pets. If an extension cord is used: (1) the marked electrical rating of the extension cord should be at least as great as the electrical rating of the product; (2) the extension cord should be arranged so that it will not drape over the counter top or tabletop where it can unintentionally be pulled on or tripped over by children or pets.

POLARIZED PLUG

If this appliance is equipped with a *polarized plug* (one blade is wider than the other), please follow the below instructions:

To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way. If you are unable to fit the plug into the electrical outlet, try reversing the plug.

If the plug still does not fit, contact a qualified electrician. Never use the plug with an extension cord unless the plug can be fully inserted into the extension cord. Do not alter the plug of the product or any extension cord being used with this product. Do not attempt to defeat the safety purpose of the polarized plug.

**SAVE THESE INSTRUCTIONS.
THIS PRODUCT IS FOR
HOUSEHOLD USE ONLY.**

PARTS IDENTIFICATION



BEFORE FIRST USE

- Make sure all packaging materials are removed and check the device and accessories for damages.
- Clean the device as described under Cleaning & Maintenance.
- Grind only coffee, nuts or spices in this appliance.
- When not in use and during cleaning, always unplug the unit.
- If the power cord is damaged, it must be replaced by manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

BEFORE FIRST USE

1. Fully unwind the power cord from the cord storage, and then guide it through the cord guide on the back of the coffee grinder.
2. Turn the lid in opposite direction of the arrow marking (open lock symbol), and then lift it up.
3. Fill the coffee receptacle with the desired amount of coffee beans. Do not overfill the receptacle!
4. Install the lid on the coffee grinder, and then turn it in the direction of the arrow marking (closed lock symbol) until it clicks into place.
5. Connect the power plug to an appropriate outlet.
6. Push the on/off button to start the coffee grinder.
7. Release the on/off button to stop the coffee grinder.
8. Turn the lid in opposite direction of the arrow marking (open lock symbol), and then lift it up.
9. Remove the ground coffee. If the ground coffee is very fine, it is possible for it to be sticky. Use the provided brush to remove the ground coffee.

CLEANING & MAINTENANCE

- Clean the coffee grinder regularly. Old ground coffee residue inside the device can cause oxidation and therefore adversely affect the coffee flavor.
- Use a slightly damp cloth and, if necessary, a little bit of mild cleaning agent to clean the casing. Make sure that no liquid enters the device interior.
- Always dry the device after cleaning.
- Use the brush to clean the blades and the inside of the coffee receptacle.
- Rewind the power cord using the cord storage.
- Store the coffee grinder at a dry, cool location protected against moisture.



NOTE:

Coffee aroma is affected by heat. Operate the coffee grinder within as short intervals as possible (max. 30 sec.) in order to prevent generation of heat.



CAUTION:

DO NOT IMMERSE THE MOTOR HOUSING IN WATER



NOTE:

- Unplug the device before every cleaning. Never submerge the device in water or other liquids.

- Do not use alcohol, acetone, benzene, abrasive cleaning agent, etc. to clean plastic components.

- Do not use any hard brushes or metal objects.

LIMITED WARRANTY* ONE (1) YEAR
WARRANTY IS ONLY VALID WITH A DATED PROOF OF PURCHASE

PLEASE DO NOT RETURN TO STORE OF PURCHASE.

If you have any problems with this unit, contact Customer Service for support.

1. Your small kitchen appliance is warranted to the original purchaser to be free from any manufacturing defects under normal use and conditions for one (1) year, cord excluded. This Warranty applies only to the original purchaser of this product.
2. Retail stores/merchants selling this product do not have the right to alter, modify, or in any way revise the terms and conditions of the warranty.
3. If you use your appliance for household use and according to instructions, it should give you years of satisfactory service.
4. At its sole discretion, Maxi-Matic USA will either repair or replace the product found to be defective during the warranty period.
5. The repaired or replacement product will be in warranty for the remaining balance of the one-year warranty period and an additional one-month period.
6. Consumer's remorse is not an acceptable reason to return a product to our Service Center.
7. This limited warranty covers appliances purchased and used within the 50 U.S. states plus the District of Columbia and does NOT cover normal wear of parts or:
 - Damages caused by unreasonable use, neglect, normal wear and tear, commercial use, improper assembly or installation of product.
 - Damages caused in shipping.
 - Damages caused by replacement or resetting of house fuses or circuit breakers.
 - Defects other than manufacturing defects.
 - Breakage caused by misuse, abuse, accident, alteration, lack of proper care and maintenance, or incorrect current or voltage.
 - Lost or missing parts of the product. Parts will need to be purchased separately.
 - Damages of parts that are not electrical; i.e. cracked or broken plastic/glass, scratched/dented inner pots.
 - Damage from service or repair by unauthorized personnel.
 - Extended warranties purchased via a separate company or reseller.
 - Acts of God such as fire, floods, hurricanes, tornadoes, etc.

8. This warranty does not apply to re-manufactured merchandise.

Maxi-Matic, USA shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty. Apart from the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in time to the duration of the warranty.

*One Year Limited Warranty valid only in the 50 U.S. states plus the District of Columbia, excluding Puerto Rico and the Virgin Islands.

This warranty is effective only if the product is purchased and operated in the USA; product usage which is in violation of the written instructions provided with the unit will void this warranty. For international warranty, please contact the local distributor.

This warranty gives you special legal rights and you may also have other rights to which you are entitled which may vary by state, province, and/or jurisdiction.

**Any instruction or policy included in this manual may be subject to change at any time.

MAXI-MATIC, USA

18401 E. Arenth Ave. City of Industry, CA 91748

Customer Support Hours of Operation MON-FRI 8:30 AM - 5:00 PM PST

(800) 365-6133 Ext: 120/107/105; (626) 912-9877 Ext: 120/107/105

Visit: www.maxi-matic.com for Live Chat Support and Contact Us Form

RETURN INSTRUCTIONS

RETURNS:

- A. Any return of defective merchandise to the manufacturer must be processed accordingly by first contacting customer service (info@maxi-matic.com) to obtain an RA # (Return Authorization Number). We will not accept any returns of merchandise without an applicable RA #.
- B. **IMPORTANT RETURN INSTRUCTIONS.** Your Warranty depends on your following these instructions if you are returning the unit to Maxi-Matic, USA:
1. Carefully pack the item in its original carton or other suitable box with sufficient cushioning to avoid damage in shipping.
 2. Before packing your unit for return, be sure to enclose:
 - a) Your name, full address with zip code, daytime telephone number, and RA#,
 - b) A dated sales receipt or PROOF OF PURCHASE,
 - c) The model number of the unit and the problem you are having (Enclose in an envelope and tape directly to the unit before the box is sealed,) and
 - d) Any parts or accessories related to the problem.
 3. Maxi-Matic, USA recommends that you ship the package via UPS ground service for tracking purposes. **We cannot assume responsibility for lost or damaged products returned to us during incoming shipment.** For your protection, always carefully package the product for shipment and insure it with the carrier. C.O.D shipments cannot be accepted.
 4. **All return shipping charges must be prepaid by you.**
 5. Once your return has been received by our warehouse, Maxi-Matic, USA will repair or replace the product if it is defective in material or workmanship, subject to the conditions in paragraph B.
 6. **Maxi-Matic will pay the shipping charges to ship the repaired or replacement product back to you.**



Elite Customer Service Center

Mail: Maxi-Matic, USA
18401 E. Arenth Ave
City of Industry, CA
91748-1227

Phone: 800-365-6133 ext. 120/105

Website: www.maxi-matic.com
Visit our website for Live Chat Support
& Contact Us Form
Register your product online



[elitebymaximatic](https://www.facebook.com/elitebymaximatic)



[@elite_by_maximatic](https://www.instagram.com/elite_by_maximatic)

Elite is a registered trademark of Maxi-Matic, USA.
Copyright Elite by Maxi-Matic.

Actual product may vary from the images/illustrations in this manual due to continual product improvement.

MODEL: ETS-9053