



Wreath

INDOOR / COVERED ENTRY

INSTRUCTION MANUAL

Sku # 1001370791

Model: BOWOTHD173D

Assembly:


- 1) Straighten up the branches. Shape the branches by pointing them outwards and in clockwise direction.
- 2) After shaping the wreath, step back and take an overall look. Shift branches to fill any gaps.
- 3) Open the lid of the battery box by releasing the locks. Insert four AA batteries* into the compartment, making sure that the batteries are in the correct orientation. Close the lid with the locks.
- 4) Press the button on the battery box once for timer mode, twice to turn the lights constantly on, and a third time to turn the lights off or reset the timer. The built-in timer mode causes the lights to turn on and off in a cycle: on for 6 hours then off for 18. The user should initially turn on the lights at a specific time of their choice, and then the lights will turn on every day at approximately the same time.
- 5) Replace batteries when the lights become dim. Remove batteries from unit when it is not in use.

* Use 1.5V AA batteries or equivalent. Batteries not included.

Troubleshooting:

If the lights do not work:

- 1) Ensure the batteries are new and are inserted correctly into the battery box.
- 2) In cold temperatures, lithium AA batteries must be used. Otherwise, the life-span of the batteries will be greatly reduced, or the lights will not turn on at all.
- 3) If a bulb is not working, replace the faulty bulb as shown in the figures below. Use the replacement bulbs provided.

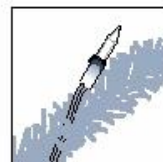

Spare bulbs

CAUTIONS:

1. Read all instructions and warning tags carefully.
2. For indoor and outdoor covered use. Do not place in uncovered area where there is prolonged exposure to sunlight or where rain/snow accumulates.
3. In cold temperatures, lithium AA batteries must be used. Otherwise, the life-span of the batteries will be greatly reduced, or the lights will not turn on at all.
4. Do not place near gas or electric heaters, radiators, fireplaces, candles or other similar sources of heat.
5. Do not install near fountains, bathtubs, sinks, or other wet areas.
6. Do not use candles on the wreath.
7. Please dispose or recycle the batteries according to municipal requirements. Do not dispose of batteries in fire or other similar sources of heat.
8. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries, or equivalent.
9. Remove batteries from product at end of season before storing to avoid battery leakage and corrosion.
10. This is a Christmas decoration. This is not a toy. Keep out of the hands of small children.
11. For festive use only. Not intended for prolonged use over 90 days each season.
12. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
13. Children should be supervised to ensure that they do not play with the appliance.
14. The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.

Please read assembly instructions. The parts for this product have been carefully inspected and packed. If you have any questions or problems regarding this product, please call our toll-free helpdesk at **1-800-919-6564**, available 7 days a week, 24 hours a day.