

CLEANING

1. Unplug fan and remove decorative guard and front guard. Wipe blades with a soft damp cloth, taking care not to alter the angle of the blades. If necessary use a soft brush to remove the dust from the guards, reassemble fan guards fully before use.

NOTE: The motor bearings are permanently sealed and do not require additional lubricating.

