



CANTERBURY II LED OUTDOOR WALL LIGHT

Item # 578666

Please read carefully and save these instructions, as you may need them at a later date.

CAUTION

WARNING: For fixtures labeled for outdoor and wet location use, provide a water-tight seal between the fixture and the wall surface by using silicone or similar caulking. Turn off the main power at the circuit breaker before installing or service the fixture.

GENERAL

All electrical connections must be in accordance with local and National Electrical Code (N.E.C) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician.

Remove the fixture and mounting hardware from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions.

TOOLS REQUIRED

Phillips screwdriver

ASSEMBLY AND INSTALLATION

1. Carefully unpack and identify all parts referring to Figure.
2. Fasten the CROSS BAR (A) to the OUTLET BOX (B) with the OUTLET BOX SCREWS (C) and properly adjust the length of the MOUNTING SCREWS (D) on CROSS BAR (A) with the HEXAGON NUTS (E).
3. Make wire connections with WIRE NUTS (F)
 - black fixture wire to live supply wire.
 - white fixture wire to neutral supply wire.
 - fixture ground wire to supply ground wire or attach the fixture ground wire to

the CROSS BAR with the GREEN SCREW, Then connect it to the supply ground wire.

4. Carefully tuck the wire and WIRE NUTS (F) into the OUTLET BOX (B).
5. Attach the BACK PLATE (G) to the CROSS BAR with the BALL NUTS (H).
6. Secure the COVER (I) to the FIXTURE FRAME (J) with the SCREW (K).
7. Turn on the power at the main fuse or circuit breaker box.



