




Item # 240177 / # 240204
Model # KB 5004 / # HW 5004

USE AND CARE GUIDE

SQUARE WALL LANTERN

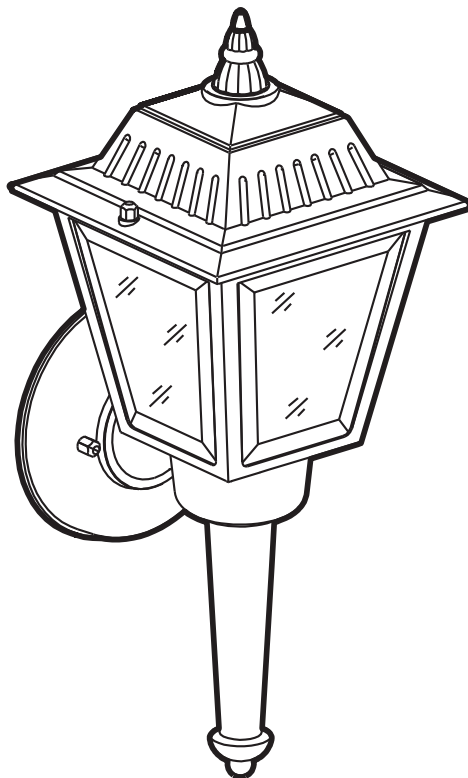

Questions, problems, missing parts? Before returning to the store,
call Hampton Bay Customer Service
8 a.m. - 7 p.m., EST, Monday-Friday and 9 a.m. - 6 p.m., EST, Saturday

1-855-HD-HAMPTON

HAMPTONBAY.COM

THANK YOU

We appreciate the trust and confidence you have placed in Hampton Bay through the purchase of this light fixture. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Hampton Bay!

Table of Contents

Table of Contents.....	2	Hardware Included.....	3
Safety Information.....	2	Package Contents.....	4
Warranty.....	2	Installation	5
Pre-Installation	3	Operation	7
Planning Installation.....	3	Care and Cleaning	7
Tools Required.....	3	Troubleshooting.....	7

Safety Information

- Consult a qualified electrician if you have any electrical questions.



CAUTION: Inspect the wire insulation for any cuts, abrasions, or exposed copper that may have resulted during shipping. If there is a defect in the wire, do not attempt installation. Please call our Customer Service Team at 1-855-HD-HAMPTON.



WARNING: Before starting installation of this fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box.

Warranty

The manufacturer warrants this lighting fixture to be free from defects in materials and workmanship for a period of one (1) year from date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alterations, neglect, or mishandling. This warranty shall not apply to any product that is found to have been improperly installed, set-up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear. The manufacturer does not warrant and specially disclaims any warranty, whether express or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to any labor / expense costs involved in the replacement or repair of said product.


Contact the Customer Service Team at 1-855-HD-HAMPTON or visit www.hamptonbay.com.

Pre-Installation

PLANNING INSTALLATION

- Read all instructions before installation.
- To avoid damaging this product, assemble it on a soft, non-abrasive surface, such as carpet or cardboard.
- Keep your receipt and these instructions for proof of purchase.

TOOLS REQUIRED

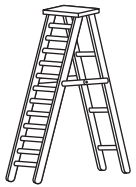


Ladder




Safety glasses



 
Electrical tape



Silicon sealant

 


Phillips screwdriver

 

Flat blade screwdriver



 Pliers



Wire strippers

HARDWARE INCLUDED




NOTE: Hardware not shown to actual size.



AA




BB

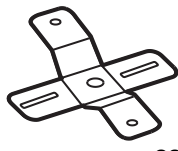


CC



 DD



EE


 


FF

Part	Description	Quantity
AA	Lock nut	2
BB	Wire connector	3
CC	Mounting bracket	1
DD	Ground screw	1
EE	Outlet box screw	2
FF	Mounting screw	2

Pre-Installation (continued)

PACKAGE CONTENTS

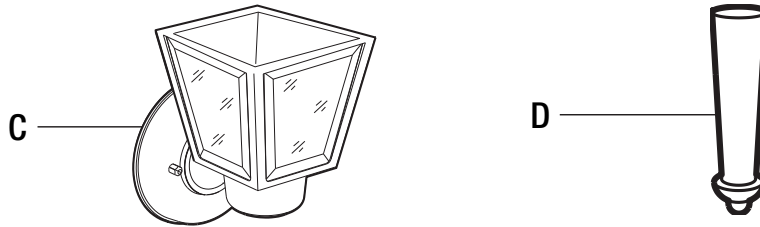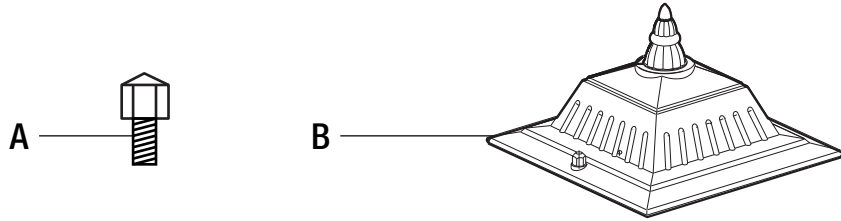

Part	Description	Quantity
A	Fixture screw	2
B	Top cover	1
C	Fixture body	1
D	Finial	1


Installation

1 Assembling the fixture



IMPORTANT: The light bulb is not included with this light fixture. A 100 watt maximum medium-base bulb or 26 watt maximum CFL equivalent is required.

- Unpack the fixture and lay all parts on a clean, soft surface.
- Screw the finial (D) onto the bottom of the fixture body (C).
- Install a light bulb (not included) into the socket of the fixture body (C).
- Place the top cover (B) onto the top of the fixture body (C), aligning the holes. Secure together using the fixture screws (A).

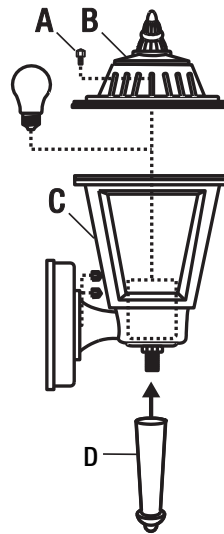


2 Mounting the bracket

- Screw the two mounting screws (FF) into the mounting bracket (CC). Attach the mounting bracket (CC) to the outlet box using the two outlet box screws (EE). Ensure the threads of the mounting screws (FF) are facing outside when the mounting bracket (CC) is attached to the outlet box.




CAUTION: Disconnect the power by turning it off at the circuit breaker or removing the fuse at the fuse box.

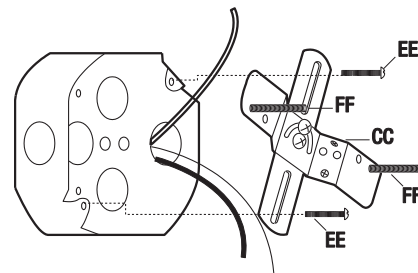

3 Connecting the wires


- Wrap the ground wire from the fixture around the ground screw (DD) on the mounting bracket (CC), and then connect the ground wire from the fixture to the ground wire from the outlet box.
- Connect the white wire from the fixture to the white wire (neutral wire) from the outlet box. Connect the black wire from the fixture to the black wire (live wire) from the outlet box. Cover the three connections using the wire connectors (BB).
- Wrap the connections with electrical tape and position the wires back inside the outlet box.

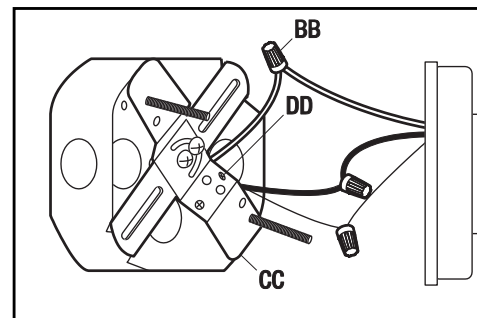

Installation (continued)

4 Installing the fixture

- Place the fixture body (C) on the wall and align the protruding mounting screws (FF) through the appropriate holes on the wall plate portion of the fixture body (C). Secure the fixture to the wall by threading the lock nuts (AA) over the mounting screws (FF). Tighten securely.
- Caulk the space between the wall and the upper 3/4 area of the wall plate to prevent water from seeping into the outlet box. Leave the bottom 1/4 area uncaulked for drainage of any water which might leak into the enclosure.
- Turn on the power at the circuit breaker or fuse box.

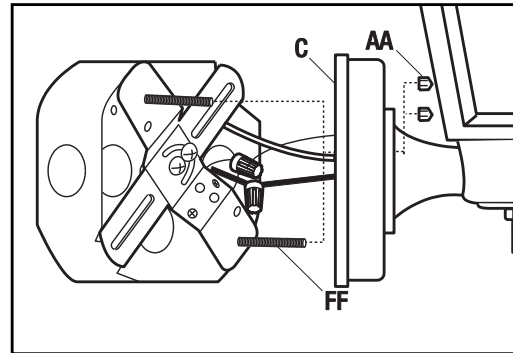

Operation

1 Turning the light on

- Turn the light switch on to activate the fixture.

Care and Cleaning

- Clean the lamp with a soft, dry cloth.
- Do not use any cleaners with chemicals, solvents, or harsh abrasives.

Troubleshooting

Problem	Possible Cause	Solution
The bulb will not light.	The bulb is burned out.	Replace the light bulb.
	The power is off.	Ensure the power supply is On.
	There is a faulty wire connection.	Check the wiring.
	The circuit breaker is off.	Ensure the circuit breaker is in the On position.
The fuse blows or circuit breaker trips when the light is turned on.	There are crossed wires or the power wire is grounding out.	Check the wire connections. Contact a qualified electrician or call the Customer Service Team at 1-855-HD-HAMPTON.



Questions, problems, missing parts? Before returning to the store,
call Hampton Bay Customer Service
8 a.m. - 7 p.m., EST, Monday-Friday and 9 a.m. - 6 p.m., EST, Saturday

1-855-HD-HAMPTON

HAMPTONBAY.COM

Retain this manual for future use.