



ASSEMBLY INSTRUCTION



Warning:


1. **OUTDOOR USE ONLY!**
2. Do not use this unit on a wooden deck or on combustible surfaces such as dry grass, leaves, mulch, etc.
3. Do not use this unit near heat sensitive or combustible structures such as vinyl or wood siding.
4. When in use, keep the fire pit area clear and at least 60 cm(24inch) side clearance from combustible materials, gasoline and other flammable liquid and vapors.
5. **DO NOT** use gasoline or kerosene. Use only a method of lighting, which is acceptable. This unit has been designed for burning of charcoal and untreated Wood only. Do not place burning material over 75% of the full capacity for safe use.
6. **NEVER LEAVE FIRE UNATTENDED!** Do not allow small children near flame. Hot embers can fly out of basin in breezy conditions. Adequate fire extinguishing material should be readily available.
7. **CARBON MONOXIDE HAZARD**
 - i. Burning charcoal inside can kill you. It gives off carbon monoxide, which has no odor.
 - ii. **NEVER** burn charcoal inside, vehicles or tents.
8. Do not use this fire pit as a cooking appliance. This FIRE PIT is not designed to be used for grilling food. Eating food cooked in this FIRE PIT could cause poisoning and death.
9. Do not attempt to move your fire pit while hot or in use.
10. Some parts may contain sharp edges – especially as noted in manual. Wear protective gloves if necessary.

Hardware list

Item	Description	Figure	Quantity
AA	M6 Bolt		12
BB	M6 Nut		1

Parts list

Item	Description	Quantity
A	Lift handle	1
B	Mesh screen	1
C	Log grate	1
D	Fire bowl	1
E	Leg	4
F	Décor section 1	2
G	Décor section 2	2
H	Poker	1

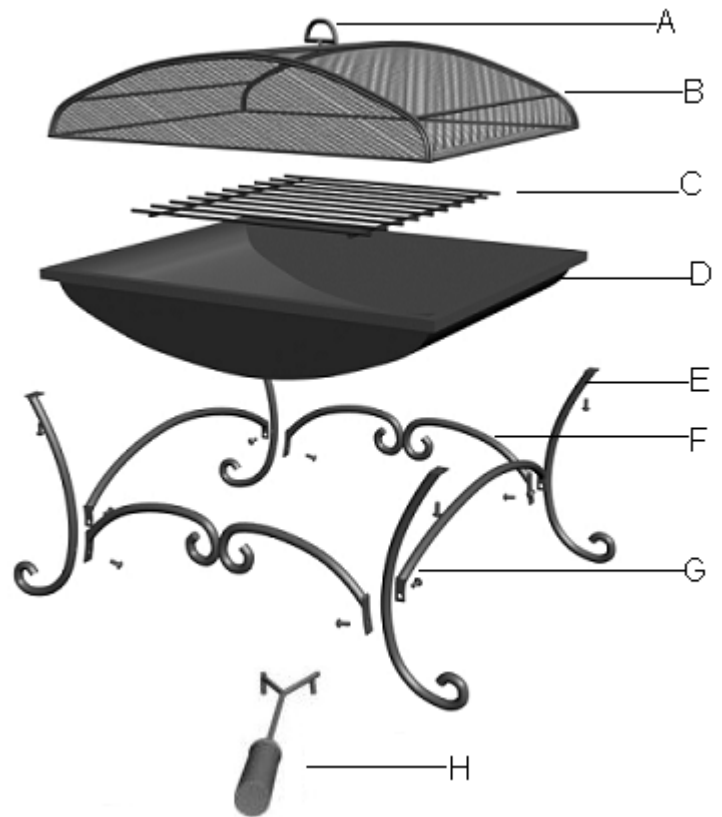

Assembly instruction

Please save this manual for future reference.

Caution: Read, understand and follow **all** instructions before using this fire pit.

Account for all parts and hardware before beginning assembly.

Assembled tool required is cross screwdriver which is not included in hardware pack.

Step1

Choose a clean and soft level location for assembly. Connect Lift handle (A) with Mesh screen (B) by using Nut (BB) tightly. See Figure 1.

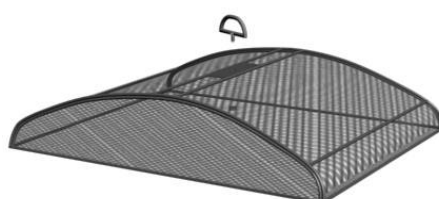


Figure 1

Step2

Turn Fire bowl (D) upside down firstly, connect 4 Legs (E) with Fire bowl (D) by using bolts (AA) loosely, then connect 2 Décor section 1 (F) & 2 Décor section 2 (G) to 4 Legs (E) by using Bolts (AA) loosely. See Figure 2.
Tighten all of the bolts, and turn over the assembled parts.



Figure 2

Step3

Place Log grate, Mesh screen on the bowl. See Figure 3.



Figure 3

Now, your fire pit is ready for use.

Please use the Poker (H) provided to lift the screen when you are using this fire pit. Do not lift the screen by hand when it is in use and without thoroughly cools down!