

5 Year Limited Household Warranty

Range Kleen Mfg., Inc. warrants pot racks to be free from defects in workmanship and materials under normal household use to the original purchaser for 5 years from the date of original purchase. To maintain your pot rack, we recommend that you follow the Use and Care instructions carefully.

During this period, Range Kleen Mfg., Inc. will repair or replace, at its option, any defective item returned to Range Kleen with original purchase receipt. If the item is out of production, an item of similar value and function will be substituted. Commercial use of this product voids this warranty. Incidental or consequential damages are not covered by this warranty. This warranty is non-transferable.

This warranty will not cover damage caused by misuse of the product in direct opposition to the supplied use and care. All discoloration, scratches and stains, or other signs of misuse or abuse of the pot rack that do not affect the function of your pot rack is not covered under this warranty.

This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

Customer Service Information

Should you have any questions or concerns, please contact Customer Service at 419.331.8000, Fax 419.331.4538 or email at info@rangekleen.com
Hours: Monday through Friday, 8:00am-5:00pm EST

Range Kleen Mfg., Inc.
4240 East Rd.
Lima, OH 45807

©2010
Designed in USA/Made in China

Printed in China

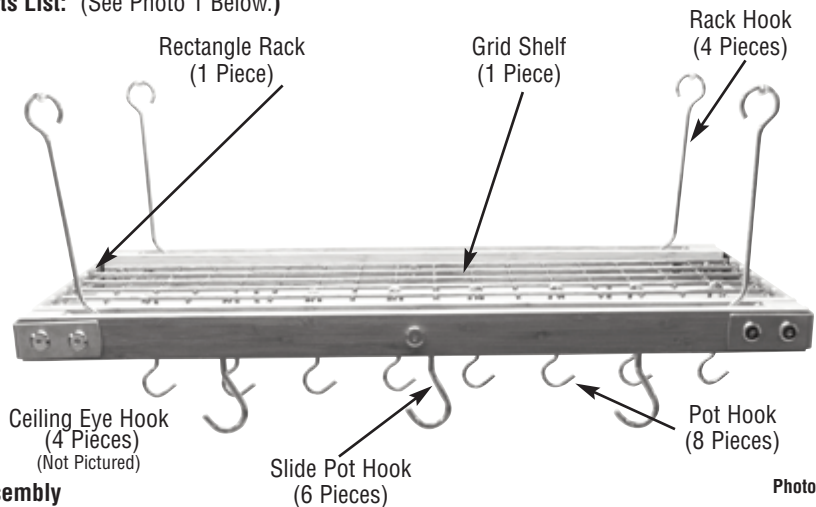


Rectangle Wood & Stainless Steel Pot Rack

Use and Care

Before using for the first time . . .

Remove all parts from packaging. Layout all parts and compare to the picture below to ensure that you have all parts needed to install your Range Kleen Pot Rack. Should any part be missing, please contact Customer Service at 419.331.8000. (Hours: Monday through Friday, 8:00am-5:00pm EST)

Parts List: (See Photo 1 Below.)**Assembly**

1. Always protect the area directly below where you are going to hang your rectangle pot rack by laying a drop cloth or tarp over the area.
2. Square up the rack directly under the area where you are going to attach to the ceiling.

Assembly (cont.)

3. Measure the distance between each pot rack hanging point and transfer your markings to the ceiling, making sure that the markings fall in ceiling joist areas. We strongly recommend that if you have any questions, you contact a professional to install your new pot rack. Ceiling Eye Hooks **MUST** be inserted in ceiling joists. Do not use sheetrock hangers.
4. Using a drill, drill the four holes in the ceiling where you have marked. Always use a drill bit that is smaller than the diameter of your ceiling hooks. Make sure that you have drilled into ceiling joists and not just sheetrock. Twist ceiling eye hooks into the four drilled holes.
5. Hang long Rack Hooks from the ceiling eye hooks.
6. Getting a partner to help you finish the installation, each hold opposite ends of the pot rack. Together, attach the rack hooks provided to the pot rack. Double check to make sure all 4 corners are attached properly before releasing the pot rack.
7. Easily level the pot rack by twisting the eye screws by half turns to lengthen or shorten the side that needs adjustment.
8. Attach Pot Hooks to the grid to display and store your cookware and utensils. Drop the Slide Pot Hooks through long slots on either side between the wooden rail to use to hang pots and utensils.
9. To Clean - wipe off pot rack parts with a damp cloth and dry thoroughly.

NOTE: MAXIMUM LOAD LEVEL IS 30 POUNDS. DO NOT ATTEMPT TO PLACE MORE THAN 30 POUNDS ON THE POT RACK. THIS COULD RESULT IN PERSONAL INJURY AS WELL AS PROPERTY DAMAGE.