

SPECIFICATIONS

Product Size: 19.7"H x 13.8"W x 12.2"D
 Internal Dimension: 19.4"H x 13.6"W x 9.8"D
 Internal Size = 1.51 Cu Ft
 2/5mm 50 Gauge Body & Door
 This safe is not fire rated
 Two one-way locking bolts (No dead bolts)



BATTERY INSTALLATION

Note: When changing the battery, always hold the battery connecting cap while disconnecting or attaching the battery. Do not pull on the wires. Doing this could cause the power supply to become disconnected from the lock.

This lock requires (4) AA batteries (1.5V). Under normal use, batteries will last about 1 year. When the battery is low and you press a button on the keypad, a red warning light indicates the battery is low.

To test the battery, enter your security code. If the batteries are low, the red light will come on momentarily. To replace the battery, remove the cover by pressing the tab and turning the cover as shown in the illustration. Replace the old battery and screw the cover back in place.

TROUBLE KEY/OVERRIDE KEY



A "Trouble Key or Override Key" has been included in the event that you have forgotten or lost your security code. Please record the number of your key in a safe location in the event the key needs to be replaced in the future. To open the safe using the trouble key, follow the steps below:

1. Remove the cover by turning the cover as shown in the illustration. The lock can hang by the connecting cable while unlocking the safe.
2. Insert the key in the key hole and turn counter clockwise 1/4 turn (until stopped) to unlock.
3. Keep the door open until you have entered a new security code. Before entering your new security code remove the key and screw the cover back in place.
4. Enter your new security code. (DO NOT STORE KEY IN SAFE)

REPLACEMENT TROUBLE KEY/OVERRIDE KEY

Verification of ownership is required in order to receive replacement key. Contact Customer Service at **1-888-287-6981** to verify registration, then complete the Replacement Form, along with required Service Fees. The Replacement Form must include the Serial Number and Lock number, and be notarized by a non-family member.

Use the included drywall screws or anchor bolts for final installation.

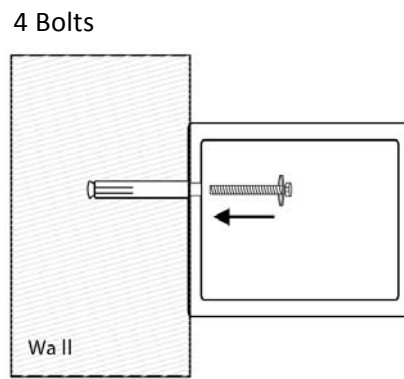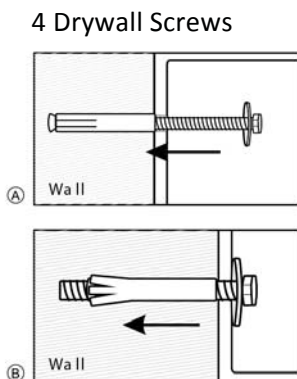

- 1 Locking Bolts
- 2 Reset Button
- 3 Battery Compartment
- 4 Lock/Unlock
- 5 Key
- 6 Ready Indicator Light
- 7 Low Battery Indicator Light
- 8 Proceed Indicator Light
- 9 B-Button

