

Cuisinart® INSTRUCTION BOOKLET



Cast-Iron Burners

CB-60/CB-30

For your safety and continued enjoyment of this product, always read the Instruction Book carefully before using.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be taken, including the following:

1. **READ ALL INSTRUCTIONS.**
2. **Unplug from the wall outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.**
3. Do not touch hot surfaces. Use handles or knobs.
4. Move or lift the burners by their sides after they have cooled completely.
5. To protect against electrical shock, do not immerse cord, plugs or housing unit in water or other liquids.
6. This appliance should not be used by or near children or individuals with certain disabilities.
7. Do not leave appliance unattended when it is on.
8. Do not operate any appliance with a damaged cord or plug, after the appliance malfunctions or has been damaged in any manner. Call the nearest authorized Cuisinart customer service center (see Warranty) to return for examination, repair or adjustment.
9. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
10. Do not use outdoors or while standing in a damp area.
11. Do not let cord hang over the edge of the table or counter, or touch hot surfaces.
12. Do not place on or near a hot gas or electric burner, or in a heated oven.
13. Extreme caution must be used when moving any pot or pan containing hot oil or other hot liquids from this appliance.
14. When using this appliance, provide at least 4–6 inches of air space above and on all sides for air circulation.
15. Do not use this appliance for anything other than its intended use. This appliance is for household use only.

16. To disconnect, turn temperature control dial(s) to off, then remove plug from wall outlet.
17. Close supervision is necessary when any appliance is used by or near children.
18. Do not operate your appliance in an appliance garage or under a wall cabinet. **When storing in an appliance garage, always unplug the unit from the electrical outlet.** Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.


SAVE THESE INSTRUCTIONS

FOR HOUSEHOLD USE ONLY

GROUNDING INSTRUCTIONS

For your protection, Cuisinart® Cast-Iron Burners are equipped with a 3-conductor cord set having a molded 3-prong grounding-type plug, and should be used in combination with a properly connected grounding-type outlet as shown in Figure 1. If a grounding-type outlet is not available, an adapter, as shown in Figure 2, may be obtained to enable a 2-slot wall outlet to be used with a 3-prong plug. As shown in Figure 3, the adapter must be grounded by attaching its grounding lug under the screw of the outlet cover plate.

CAUTION: Before using an adapter, it must be determined that the outlet cover plate screw is properly grounded. If in doubt, consult a licensed electrician. Never use an adapter unless you are sure it is properly grounded.

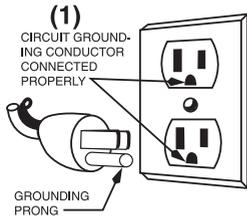

SHORT CORD INSTRUCTIONS

A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

If a longer detachable power-supply cord or extension cord is used, (1) the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and (2) the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

This appliance is for 120 volts only and should not be used with a converter.

CONTENTS

Important Safeguards.....	2
Ground Instructions.....	3
Parts and Features	4
Operating Instructions	5
Cleaning and Maintenance	5
Warranty.....	6

Parts and Features

1. Large cast-iron burner and burner ring
2. Small cast-iron burner and burner ring
3. Adjustable temperature control
4. Power On indicator light
5. Ready indicator light
6. Nonskid feet



OPERATION

Before plugging in your cast-iron burner, check to ensure that the electrical circuit is not overloaded with other appliances. This unit should always be operated on a separate 120 volt 60 Hz AC circuit. Be certain that your cast-iron burner is resting level on the countertop. There is one burner ring on the CB30 and two burner rings on the CB60. The large burner plates are rated at 1300 watts. The smaller burner is rated at 500 watts. Use the larger burner for fast and high-heat cooking, such as boiling water, and use the smaller burner for simmering or warming. Note: Avoid using pans that are unstable and easily tipped.

1. Place unit on a flat surface.

Note: Be sure to place unit in a safe area and leave 4 to 6 inches of space above and around the unit for proper ventilation.

2. Plug unit into electrical outlet. Turn temperature control dial(s) from OFF to desired setting. Caution: Do not touch burner while in use.

3. You can choose a temperature setting from 1–5.

Setting 1 — Low

Setting 2 — Low/Medium

Setting 3 — Medium

Setting 4 — Medium/High

Setting 5 — High

When burner reaches desired temperature, the green Ready indicator light will illuminate. Your burner is now ready for use.

4. Place a pot or pan, in the center of the burner. It is recommended that you use a pot or pan that is the same size as the burner.

5. When cooking is complete, turn temperature control dial(s) to the OFF position.

6. When not in use, unplug unit to ensure that it is off. This helps prevent accidental burns.

IMPORTANT NOTICES

- Before the cast-iron burner is used for the first time, it should be heated up at maximum setting for approximately 4 minutes without a pot. This will burn off any residue on the burner plates.
- The cast-iron burner may smoke the first time it is used — this is normal, and the smoke will burn off within a few minutes.

- Do not leave the unit on without any pots/pans on the solid burners after the initial burn-off process.
- Do not use as a portable heater.
- Make sure the power-supply cord does not touch hot elements or cooking utensils.
- For daily cooking, wipe excess water/condensation off pots, lids and utensils prior to use.
- Make sure that hot pots or pans do not touch the housing; this could damage the housing's finish.
- The larger burners are rated at 1300 watts. The smaller burner is rated at 500 watts. Use the larger burner for fast and high-heat cooking, and use the smaller burner for simmering or warming.

CLEANING AND MAINTENANCE

Reasonable care will ensure many years of service from your unit. Avoid dropping items on the burner rings and solid burners.

1. Turn temperature control dial(s) to the OFF position.
2. Always unplug unit from electrical outlet and allow to cool before cleaning.
3. Never immerse unit in water or other liquids.
4. For easy cleaning, the burners are sealed. Do not attempt to separate burners from the unit.
5. Use a damp, soft cloth or sponge to clean the surface of the solid burners, burner rings, nonskid feet and housing unit. Never use harsh abrasives or steel wool pads on any part of the burner as they may scratch the surface or damage the unit.
6. Thoroughly dry burners and burner rings.
7. There are no user serviceable parts. Any servicing other than cleaning should be performed by an authorized service center.

Any servicing requiring disassembly other than the above cleaning must be performed by an authorized representative.

LIMITED THREE-YEAR WARRANTY

(U.S. and Canada only)

This warranty is available to consumers only. You are a consumer if you own a Cuisinart® Cast-Iron Burner that was purchased at retail for personal, family or household use. Except as otherwise required under applicable law, this warranty is not available to retailers or other commercial purchasers or owners.

We warrant that your Cuisinart® Cast-Iron Burners will be free of defects in materials and workmanship under normal home use for 3 years from the date of original purchase. We recommend that you visit our website, www.cuisinart.com for a fast, efficient way to complete your product registration. However, product registration does not eliminate the need for the consumer to maintain the original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture.

If your Cuisinart® Cast-Iron Burners should prove to be defective within the warranty period, we will repair it, or if we think necessary, replace it. To obtain warranty service, simply call our toll-free number 1-800-726-0190 for additional information from our Consumer Service Representatives, or send the defective product to Consumer Service at Cuisinart, 7475 North Glen Harbor Blvd., Glendale, AZ 85307.

To facilitate the speed and accuracy of your return, please enclose \$10.00 for shipping and handling of the product.

Please pay by check or money order made payable to Cuisinart (California residents need only supply proof of purchase and should call 1-800-726-0190 for shipping instructions).

NOTE: For added protection and secure handling of any Cuisinart product that is being returned, we recommend you use a traceable, insured delivery service. Cuisinart cannot be held responsible for in-transit damage or for packages that are not delivered to us. Lost and/or damaged products are not covered under warranty. Please be sure to include your return address, daytime phone number, description of the product defect, product model number (located on bottom of product), original date of

purchase, and any other information pertinent to the product's return.

CALIFORNIA RESIDENTS ONLY:

California law provides that for In-Warranty Service, California residents have the option of returning a nonconforming product (A) to the store where it was purchased or (B) to another retail store that sells Cuisinart products of the same type.

The retail store shall then, at its discretion, either repair the product, refer the consumer to an independent repair facility, replace the product, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the product. If the above two options do not result in the appropriate relief to the consumer, the consumer may then take the product to an independent repair facility if service or repair can be economically accomplished. Cuisinart and not the consumer will be responsible for the reasonable cost of such service, repair, replacement, or refund for nonconforming products under warranty.

California residents may also, according to their preference, return nonconforming products directly to Cuisinart for repair, or if necessary, replacement, by calling our Consumer Service Center toll-free at 1-800-726-0190. Cuisinart will be responsible for the cost of the repair, replacement, and shipping and handling for such products under warranty.

BEFORE RETURNING YOUR CUISINART PRODUCT

If you are experiencing problems with your Cuisinart product, we suggest that you call our Cuisinart Service Center at 1-800-726-0190 before returning the product for service. If servicing is needed, a Representative can confirm whether the product is under warranty and direct you to the nearest service location.

Your Cuisinart® Cast-Iron Burners have been manufactured to the strictest specifications and have been designed for use only in 120-volt outlets and only with authorized accessories and replacement parts. This warranty expressly excludes any defects or damages caused by attempted use of this unit with a converter, as well as by use with accessories, replacement parts or repair service other than those authorized by Cuisinart. This warranty does not cover any damage caused by accident, misuse, shipment or

other than ordinary household use. This warranty excludes all incidental or consequential damages. Some states do not allow the exclusion or limitation of these damages, so these exclusions may not apply to you. You may also have other rights, which vary from state to state.

Important: If the product is to be serviced by someone other than Cuisinart's Authorized Service Center, please remind the servicer to call our Consumer Service Center at 1-800-726-0190 to ensure that the problem is properly diagnosed, the product is serviced with the correct parts, and the product is still under warranty.

©2016 Cuisinart
150 Milford Road
East Windsor, NJ 08520
Printed in China

15CE016645

IB-13967-ESP

Trademarks or service marks of third parties used herein are the trademarks or service marks of their respective owners.