


Assembly Instructions

⚠️ WARNINGS:

- This fire bowl is intended for outdoor use only. **Do not** use on wooden decks.
- This fire bowl is intended to burn wood logs only. Do not burn coal, leaves, or other combustible materials in the bowl.
- Not for use by children. Keep children and pets away from this fire bowl.
- The fire bowl is hot. Use with caution. Do not touch the hot fire bowl with bare hands.
- Never leave the burning fire bowl unattended, and always extinguish the fire completely before leaving the fire bowl.
- Do not use near flammable or combustible objects or materials.
- When the fire bowl is in use, the handle on the mesh screen can reach extreme temperatures that can cause serious injury to an unprotected hand. Use a poker or an appropriate heat resistant glove or pad when handling.
- **DO NOT** use this fire bowl as a cooking appliance. This fire bowl is not designed for grilling food.
- Check local fire regulations and municipal by-laws for safe use.
- Read all safety guidelines, warnings, instructions, and operating rules carefully before assembling and using this product.
- Some parts may contain sharp edges—especially as noted in the manual. Wear protective gloves if necessary.

PARTS LIST

Qty	No	Parts
1 piece	B	Mesh Screen
1 piece	C	Fire Grate
1 piece	D	Fire Bowl
4 pieces	E	Leg
1 piece	F	Ring
1 piece	G	Poker

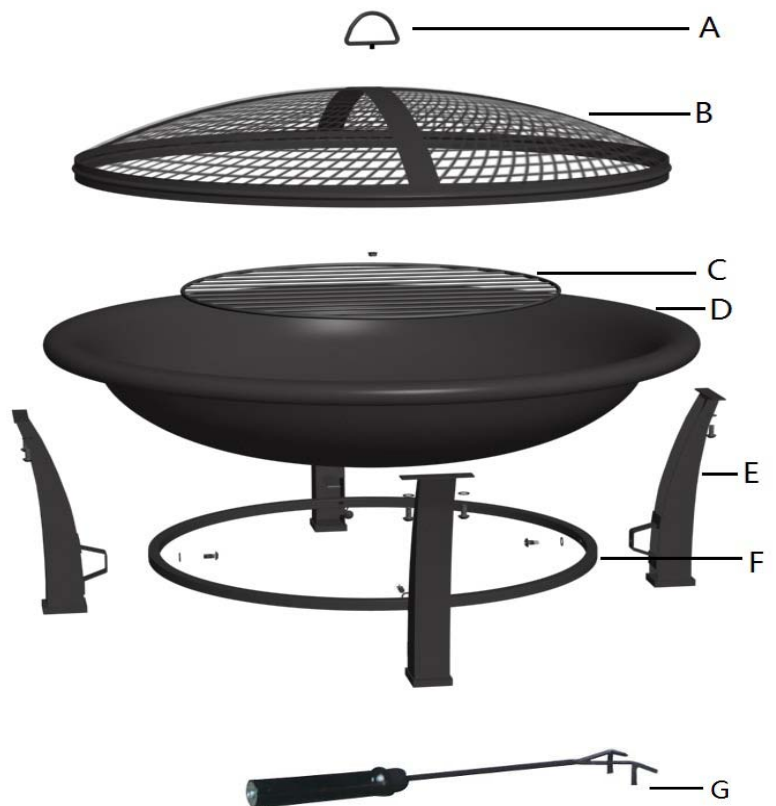


HARDWARE LIST

Qty	No	Parts
1 Set	A+AA	Screen Handle with Nut
4	BB	M6 * 20 Bolt
8	CC	M6 * 10 Bolt


Note: You will need a screwdriver to help with the assembly.

Step By Step Assembly Instructions:


Step1: Insert Screen Handle (A) into hole in Mesh Screen (B) and tighten it with Nut (AA) underside to secure.

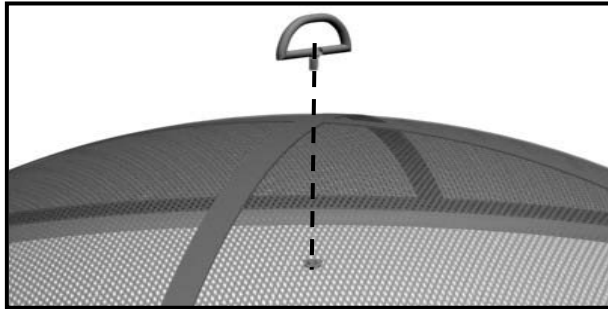

Step2: Attach the ring(.F) to the assembled legs(E) by M6*20 Bolt (BB).Please tighten all the bolts.

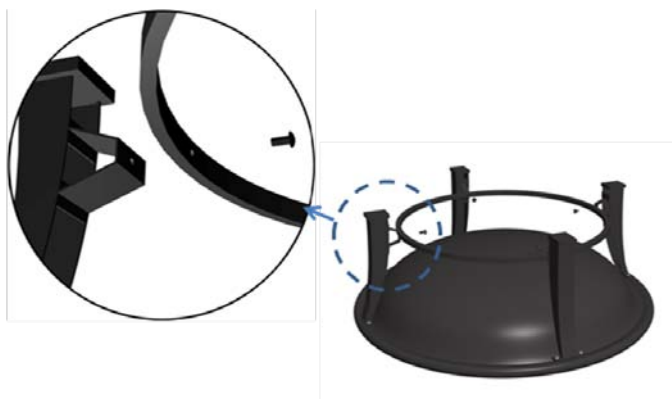

Step3: Attach the four legs (E) to the fire bowl (D) by M6*10 Bolt (CC). Please DO NOT tighten the bolts at this time.

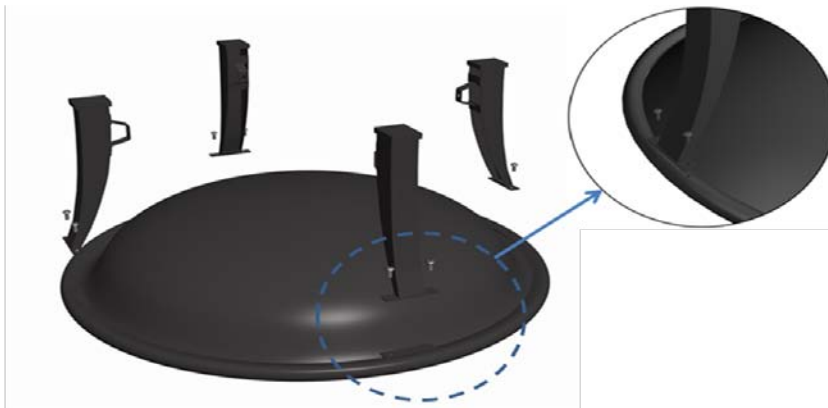

Step4: Turn the fire bowl right up side, put the fire grate (C) and mesh cover (B) on to the fire bowl, put the poker (G) near the fire pit for use anytime.



Now, your fire pit is ready for use.