


HOME DECORATORS COLLECTION

Item #
Model #181-935-CL

USE AND CARE GUIDE

RICHMOND HILL CHAISE LOUNGE WITH WHEELS

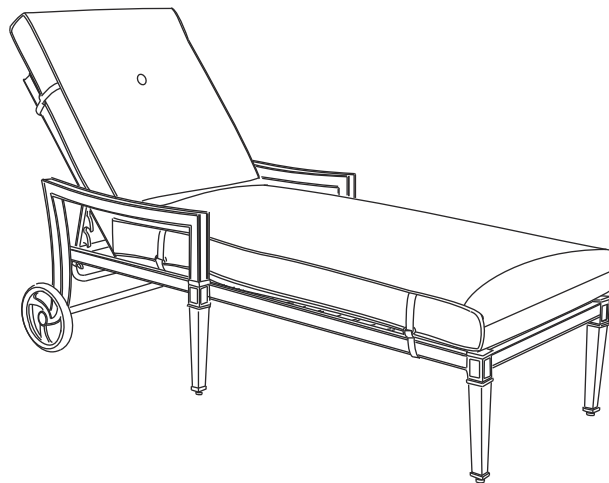

Questions, problems, missing parts? Before returning to the store,
call Home Decorators Collection Customer Service
8.00 a.m. - 6.00 p.m., EST, Monday - Friday

1-800-986-3460

HOMEDECORATORS.COM

THANK YOU

We appreciate the trust and confidence you have placed in Home Decorators Collection through the purchase of this chaise lounge. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Home Decorators Collection.

Table of Contents

Table of Contents.....	2	Pre-Assembly	3
Safety Information.....	2	Planning Assembly	3
Warranty.....	2	Hardware Included.....	3
Five Year Frame and Two Year Fabric Limited Warranty	2	Package Contents	4
What Is Covered	2	Assembly	5
What Is Not Covered	2		
Care Instructions	2		

Safety Information



DANGER: Please keep children out of the assembly area during assembly.



WARNING: Keep your fingers clear while switching the positions of the chaise lounge back.



CAUTION: Use the chaise lounge on flat ground only.



IMPORTANT: Please check the tightness of the bolts at least every 180 days.



NOTE: Level the chair with glides at the bottom of the middle legs and front legs.

Warranty

FIVE YEAR FRAME AND TWO YEAR FABRIC LIMITED WARRANTY

WHAT IS COVERED

We warrant the frame to be free of manufacturing defects to the original purchaser for five years and fabric for two years.

WHAT IS NOT COVERED

It remains the customer's responsibility for freight and packaging charges to and from our service center. This warranty does not cover commercial use, hardware, acts of nature, fire, freezing and abusive use. In addition, purchased parts are not covered under this warranty. We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

Care Instructions

Before using, wipe with a clean, dry cloth. Do not use bleach or solvents. Treat the frame with liquid wax for maximum protection against UV light and salty, damp air. When not in use, store furniture in a cool, dry place. If your set includes cushions or mesh fabric, they may be cleaned by hand with a mild solution of soap and water. Rinse cushions thoroughly and allow to drip dry. Do not machine wash or tumble dry, as cushions may shrink. Do not use bleach or solvents on fabrics.

You may contact our customer service department with any questions by phone at 1-800-986-3460 or visit www.homedecorators.com.

Pre-Assembly

 
PLANNING ASSEMBLY

It will take two people about 15 minutes to complete the assembly process.


HARDWARE INCLUDED




NOTE: Hardware not shown to actual size.



AA

 


BB

 


CC



 DD



EE

 


FF



GG



 HH



II




JJ

Part	Description	Quantity
AA	Bolt (M6x16)	2
BB	Bolt (M6x20)	4
CC	Bolt (M6x30)	2
DD	Hex wrench	1
EE	Washer	10
FF	Bolt cap	8

Part	Description	Quantity
GG	Bushing	2
HH	End cap	2
II	Bolt (M6x54)	2
JJ	Spacer	2

Pre-Assembly(continued)

PACKAGE CONTENTS

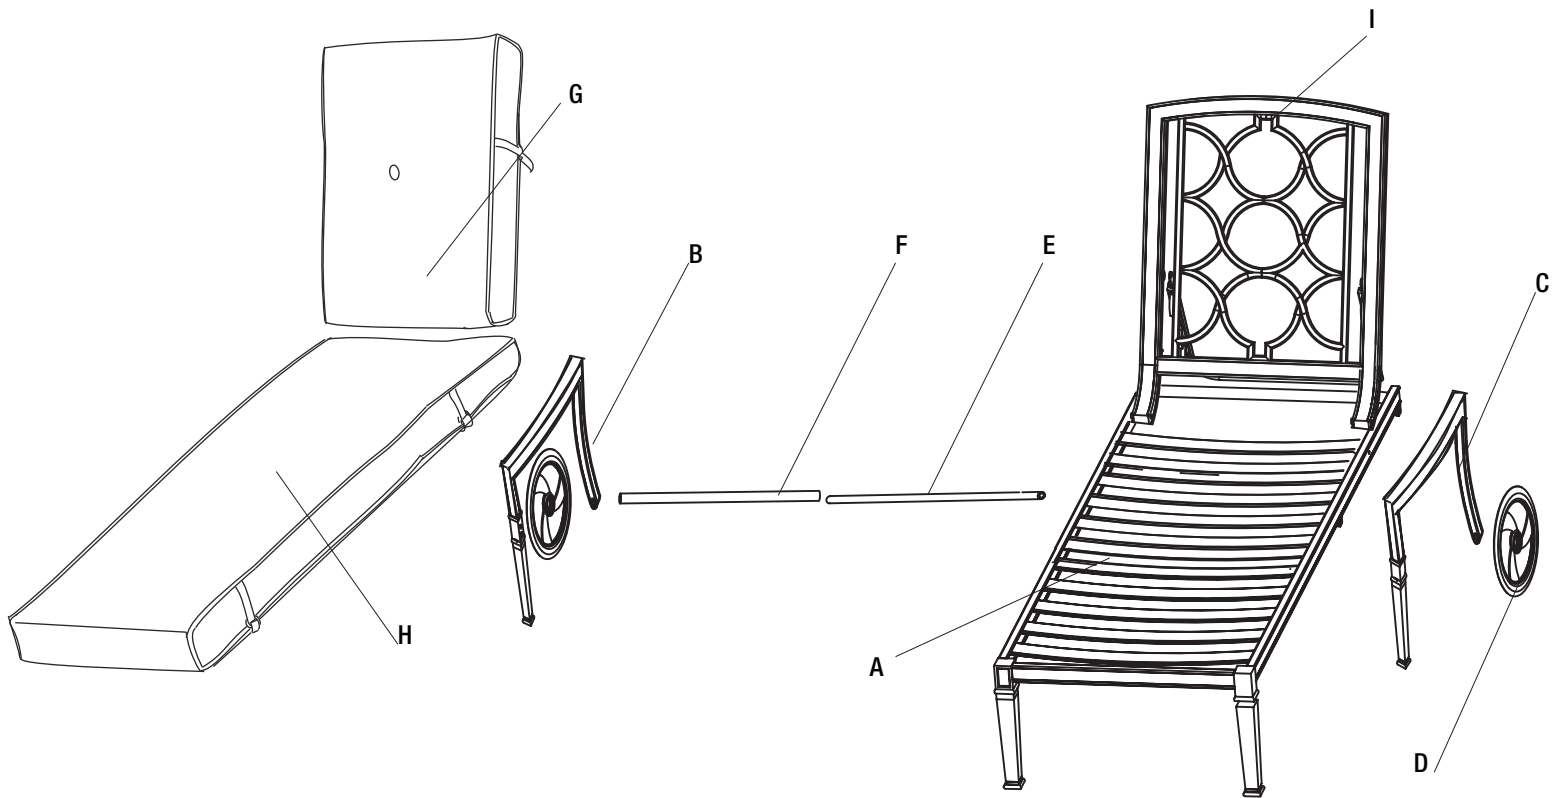


Part	Description	Quantity
A	Seat panel	1
B	Right armrest	1
C	Left armrest	1
D	Wheel	2
E	Axle	1
F	Cross bar	1
G	Back cushion	1
H	Seat cushion	1
I	Back panel	1

Assembly


1 Attaching the axle and the rear cross bar

- Attach the axle (E) to the left armrest (C). Tap the end of the axle (E) with the locking tab into the notch on the rear leg.
- Slide the cross bar (F) over the axle (E) to meet the left armrest (C).
- Attach the right armrest (B) to the other end of the axle (E) and the rear cross bar (F).

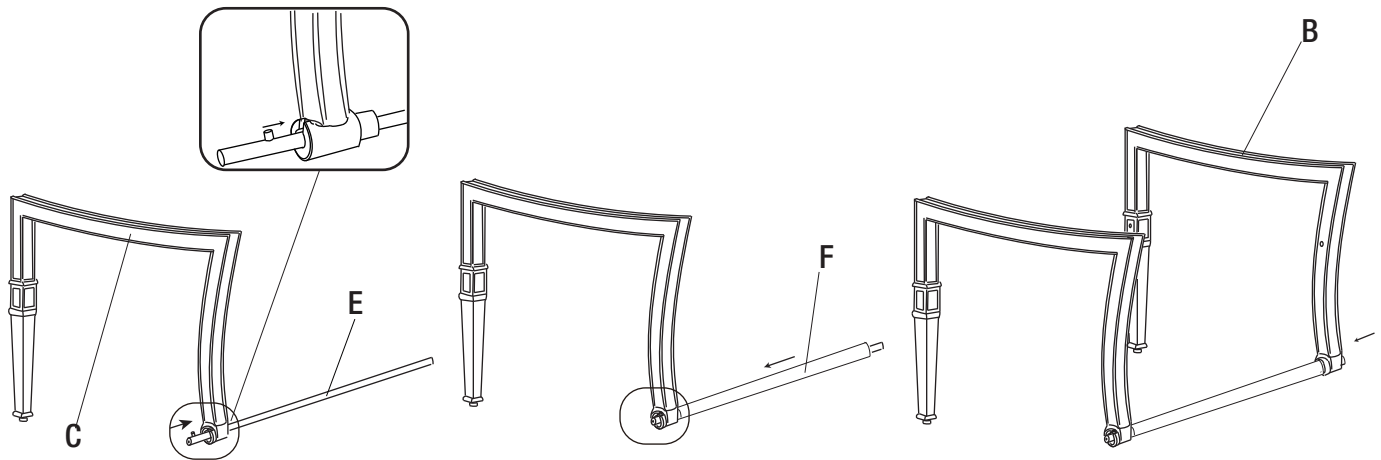

2 Attaching the wheels


- Attach one wheel (D) to each end of the axle (E) with one bushing (GG), one washer (EE), one bolt (AA) and one end cap (HH) using hex wrench (DD).

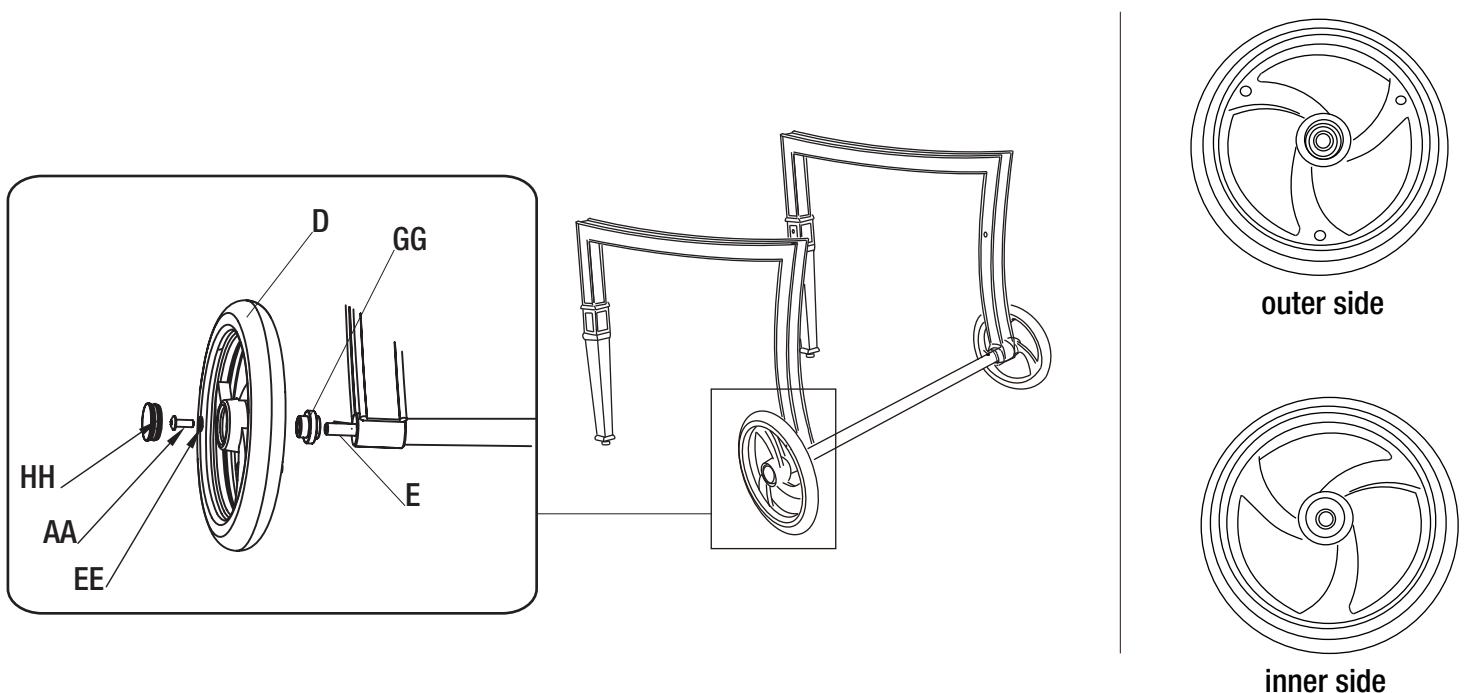

Assembly (continued)


3 Attaching the seat panel

- Place the armrests (B) and (C) together with the seat panel (A) upside down on a flat, smooth surface.
- Attach the rear part of the seat panel (A) to the rear legs of the armrests (B) and (C) with washers (EE) and bolts (BB) using hex wrench (DD). (Fig. 3.1)
- Attach the center part of the seat panel (A) to the middle legs of the armrests (B) and (C) with washers (EE) , bolts (BB) and (CC) using hex wrench (DD). (Fig. 3.2)

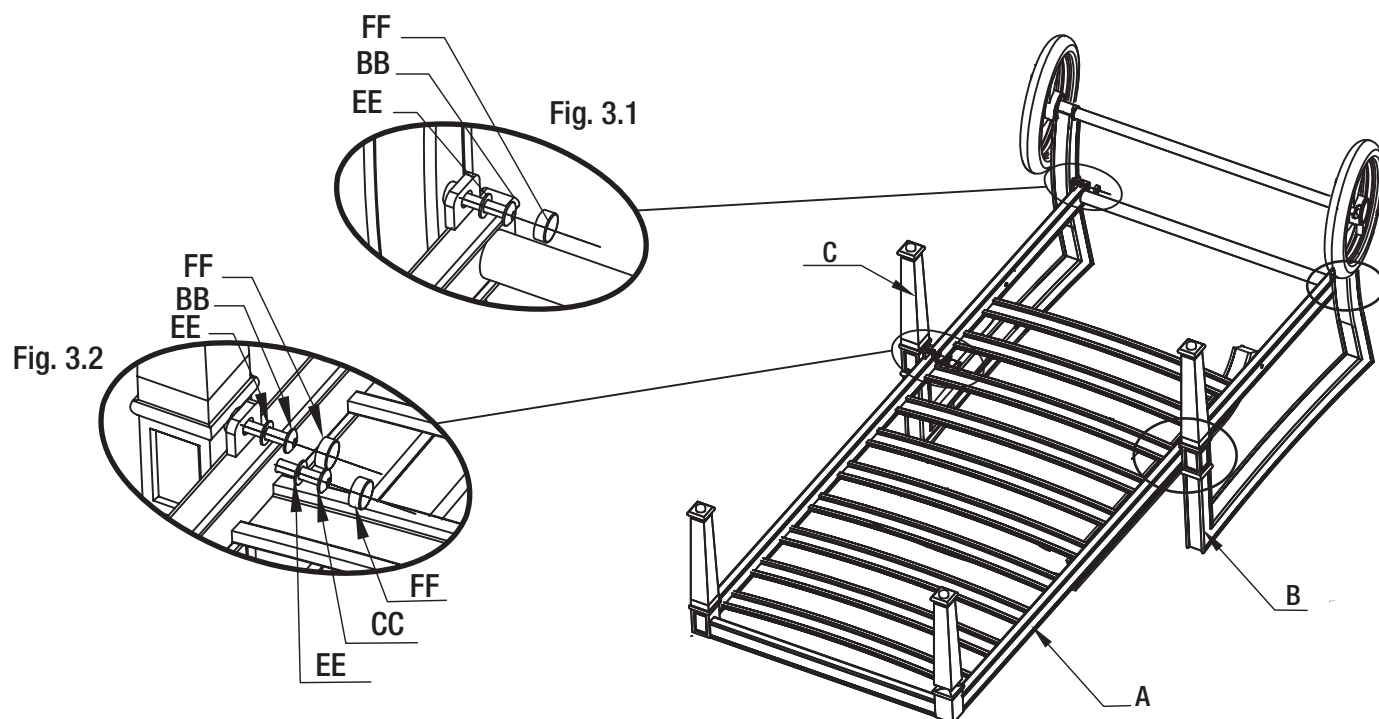

4 Attaching the back panel



- Attach the back panel (I) to the seat panel with spacer (JJ) , washers (EE) and bolts (II) using hex wrench (DD).
- Fully tighten all the bolts (AA, BB, CC, II) when all the bolts are in place and cover them with bolt caps (FF).

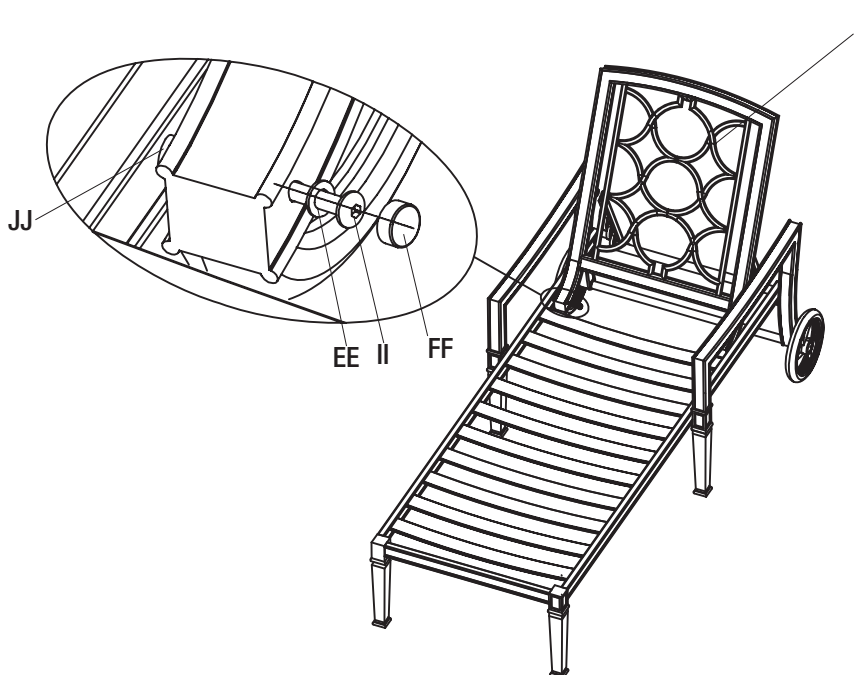

Assembly (continued)

5 Placing cushions

- Level the chaise lounge with foot glides.
- Place cushions (G) and (H) on the chaise lounge and secure cushions to the frame with fabric loops.
- Before using, confirm the back is firmly locked in place.

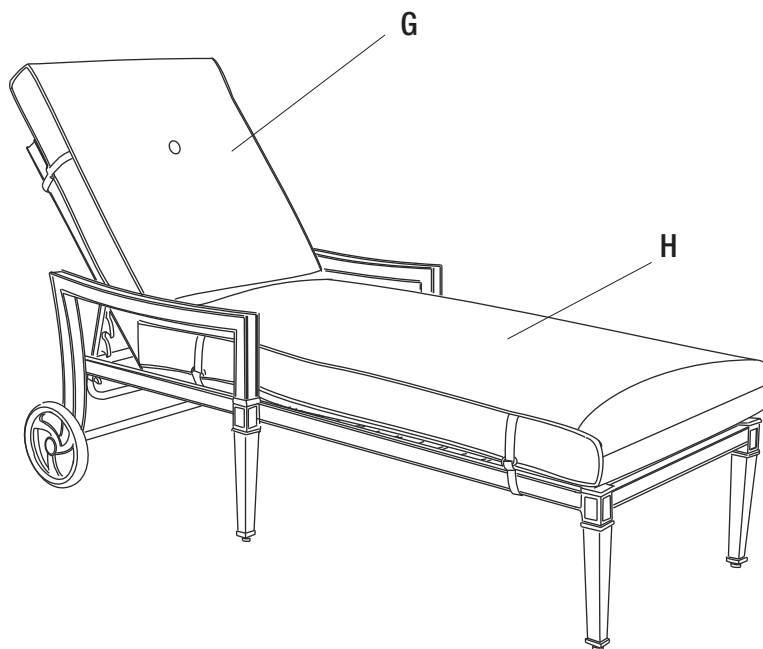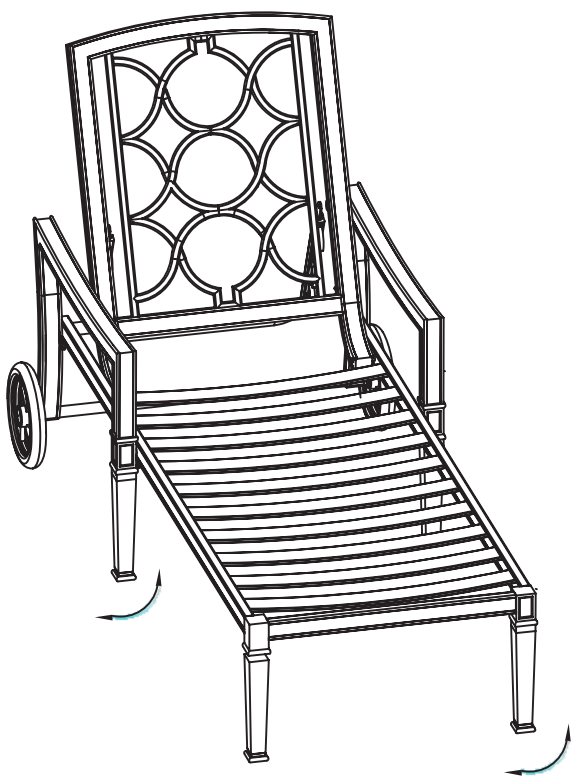

NOTE: You can lock the chaise back in four different positions.



WARNING: Never try to adjust the chaise back while sitting in the chaise.

HOME DECORATORS COLLECTION

Questions, problems, missing parts? Before returning to the store,
call Home Decorators Collection Customer Service
8.00 a.m. – 6.00 p.m., EST, Monday-Friday

1-800-986-3460

HOMEDECORATORS.COM

Retain this manual for future use.