USE AND CARE GUIDE

WALNUT COVE SQUARE 5PC DINING SET



Questions, problems, missing parts? Before returning to the store, call Hampton Bay Customer Service 8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-855-HD-HAMPTON

HAMPTONBAY.COM

THANK YOU

Table of Contents

Table of Contents	
Safety Information	
Warranty	
What is Covered	3
What is Not Covered	3
Pre-Assembly	4
Planning Assembly	

Care and Cleaning	9
Assembly	7
Package Contents	
Hardware Included	4

Safety Information

SAVE THESE INSTRUCTIONS READ ALL INSTRUCTIONS BEFORE USE

To reduce the risk of injury to persons:

- 1. Close supervision is necessary when this furnishing is used by or near children, or disabled persons, if applicable.
- 2. Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.



DANGER: Please keep children out of the assembly area at all times.



IMPORTANT: Please check the tightness of the bolts at least every 90 days.

Warranty

THIS IS A RESIDENTIAL WARRANTY AND DOES NOT APPLY FOR COMMERCIAL USE.

2 YEAR LIMITED WARRANTY

WHAT IS COVERED

Residential use of this furniture is warranted for a two (2) year limited warranty period for the frame construction. The warranty is valid from the date of purchase and applies only to the original purchaser. If your Hampton Bay outdoor furniture fails structurally during normal use (other than damage as a result of dropping or breaking a cast part) within two (2) years of purchase, the manufacturer will repair or replace the frame at its discretion with the same or similar product if the original product is discontinued, at no charge. Cushions are warranted for a one (1) year period against seams separating or tearing. Fabric is covered under the 2 year limited warranty. The finish is warranted against peeling, cracking or blistering for a period of one (1) year provided the product has not been scratched or abraded. Scratches and chips resulting from normal wear and tear are not covered. Straps and/or wicker weave are warranted for a period of one (1) year against separation or tearing. Fading of the finish, straps and/or wicker weave resulting from exposure to elements is not covered. Stains as a result of chemical spills and certain food items are not covered.

WHAT IS NOT COVERED

The following are expressly excluded from warranty coverage: failure caused by unreasonable or abusive use; furniture that was sold as clearance items, display models, or items purchased in "as is" condition; freight damage; furniture damaged by acts of nature, vandalism, fire, abuse, lack of proper care and maintenance, or improper assembly; normal fading of straps and fabric; discoloration of frame or fabric from exposure to elements, oils, spills, fluids or chemicals; table top breakage; hardware corrosion or rusting; buckling or splitting of tubing resulting from exposure to water and freezing temperatures; glass table tops; purchased or replacement parts; and plastics. Also excluded from warranty coverage is lost time of use and/or money, inconvenience, travel, packaging, or any other consequential or incidental damages. In no event shall the manufacturer's responsibility exceed the value of the replacement product. Warranty is to the original purchaser when items are purchased from one of our authorized retailers, and is not transferable. All warranty claims must be submitted with a dated register receipt within the warranty period. Should replacement of the warranted item be unavailable, the manufacturer reserves the right to substitute items of its choice similar in style, color and quality. For quality control purposes and verification, we reserve the right to request photographs of the damaged item(s). The terms of this warranty are subject to change without notice. Shipping and handling charges are at all times the responsibility of the claimant.

Contact the Customer Service Team at 1-855-HD-HAMPTON or visit www.Hamptonbay.com.

Pre-Assembly

PLANNING ASSEMBLY


PLEASE READ COMPLETE INSTRUCTION MANUAL PRIOR TO ASSEMBLY!

Identify all parts packed in the carton against the parts list. Remove all protective materials and place the parts on a non-abrasive surface to avoid scratching.

TOOLS REQUIRED




HARDWARE INCLUDED

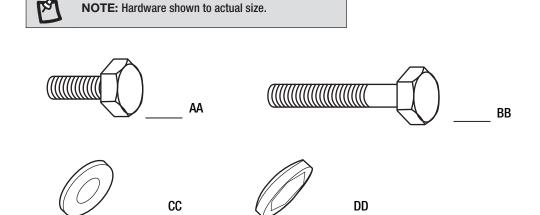

Part	Description	Quantity
AA	M6*15 Hex Bolt	44+2
BB	M6*35 Hex Bolt	8+1
CC	M6 Washer	52+2
DD	M6 Hex Bolt Cap	52+2
EE	Socket Wrench	2

Pre-assembly (continued)


TABLE PACKAGE CONTENTS

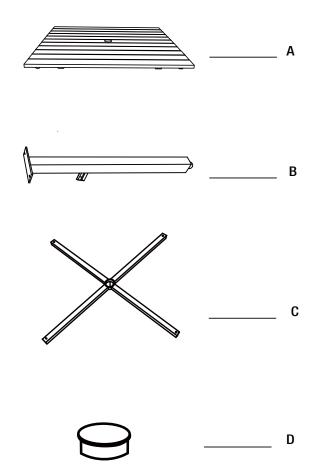

Part	Description	Quantity
Α	Table top	1
В	Table legs	4
С	Support bar	1
D	Umbrella hole cap	1

Pre-assembly (continued)

BENCH PACKAGE CONTENTS

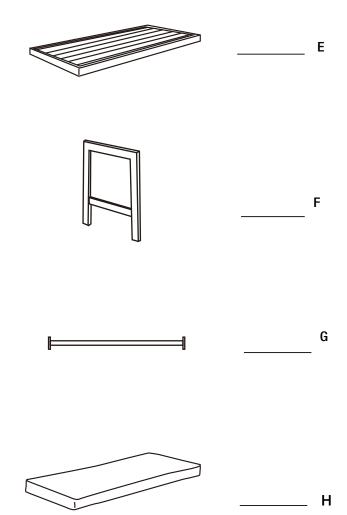

Part	Description	Quantity
E	Top frame	4
F	Leg	8
G	Support bar	4
Н	Seat cushion	4

Assembly


#

Attaching The Support Bar

- Place the table legs (B) and support bar (C) on a soft, flat non-abrasive surface
- Attach the support bar (C) to the table Iges (B) using the M6*15 Hex bolts (AA) and washers (CC).




IMPORTANT: Do not fully tighten the bolts, only hand tighten until assembly is complete.

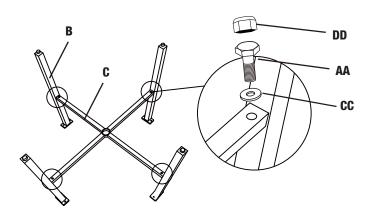


2 Attaching The Legs

- Attach the table legs (B) to the table top (A) using M6*15 Hex bolts (AA) and washers (CC).
- Please ensure all the botls are assembled correctly.
 Tighten all the hex bolts (AA) with the socket wrench (EE).
 Attach all the hex bolt caps (DD).

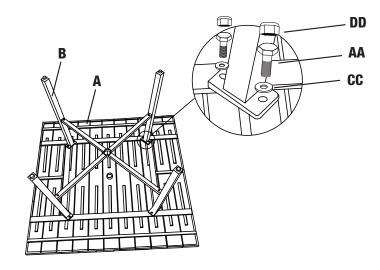

3 Attaching The Umbrella Hole Cap

- Turn the table over and set it down on its legs.
- □ Insert the cap to the umbrella hole.
- The table is now ready for use.

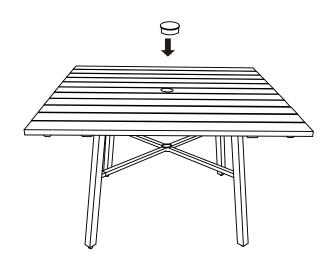

Assembly (continued)


4

Attaching The Legs

- Place the legs (B) and top frame (A) on a soft, flat non-abrasive surface
- Attach the legs (B) to top frame (A) using the M6*15 Hex bolts (AA), M6*35 Hex bolts (BB) and washers (CC).




IMPORTANT: Do not fully tighten the bolts, only hand tighten until assembly is complete.

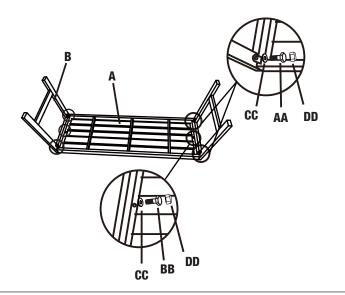

5

Attaching The Support Bar


- Attach the support bar (B) to the table top (A) using M6*15 Hex bolts (AA) and washers (CC).
- Please ensure all the botls are assembled correctly.
 Tighten all the hex bolts (AA) with the socket wrench (EE).
 Attach all the hex bolt caps (DD).

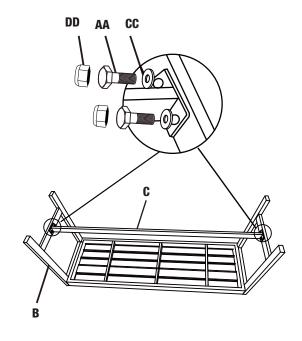

6

Attaching The Cushion

- □ Turn the table over and set it down on its legs.
- $\ \ \square$ Put the cushion onto the bench.
- □ Repeat step 4~6 for the left three bench.

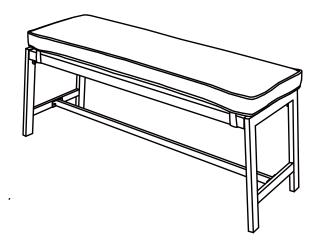

Care and Cleaning

- Clean the furniture frame with a wet towel using a mild soap and water solution, dry completely with a soft towel.
- Clean the cushions and the sling seat material with a mild solution of soap and water. Hang cushions to drip dry completely. It is recommended that cushions be stored in a dry area during rain and if they are not in use and indirect sunlight. Do not machine wash or dry. Do not use bleach or strong solvents to clean any of your patio furniture. It will harm both fabrics and metal finishes.
- Causion should be used when using oils, lotions and other chemicals such as chlorine or repeated exposure to extreme weather conditions (including heat), which may cause permanent discoloration to the fabric.
- To maintain and protect the furniture, always cover it with an outdoor furniture cover or store in a safe dry area when not in use for long periods of time.

HAMPTON BAY

Questions, problems, missing parts? Before returning to the store, call Hampton Bay Customer Service 8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

1-855-HD-HAMPTON

HAMPTONBAY.COM

Retain this manual for future use.