 




**YOW SKU # 725 042**  
**Model # TY449-1611-1**

## USE AND CARE GUIDE

### 36 in 60L LED Lighted White PVC Deer and 28 in 35L LED Lighted White

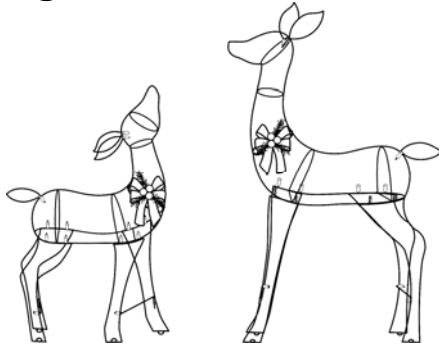

#### THANK YOU

We appreciate the trust and confidence you have placed in Home Accents through the purchase of this 36 in 60L LED Lighted White PVC Deer and 28 in 35L LED Lighted White PVC Doe. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Home Accents!

#### Guarantee

##### What is Covered

The product is intended for residential seasonal use for approximately 90 days per year. This product is covered by a 90 day limited guarantee due to defects in material and workmanship. Return the product with purchase receipt to the location of purchase for refund within 90 days of purchase.

##### What is Not Covered

This warranty does not cover commercial use, normal wear and tear, products not used in accordance with directions provided on or with the product, burn out of bulbs or LEDs, batteries, products that have been subjected to unauthorized repair and/or modification and damage caused by shipping and improper handling, alterations, misuse or accidents. Questions, problems, missing parts? Before returning to the store, call Home Accents Holiday Customer Service 8 a.m.-6 p.m., EST, Monday-Friday

1-877-527-0313


HOMEACCENTSHOLIDAY.COM

## Pre-Assembly

### PLANNING ASSEMBLY

Carefully remove all the parts from the box and place them on a flat surface. Read the entire manual prior to assembly and identify all the parts included in the package against the parts list. If any parts are missing or damaged do not attempt assembly. Contact our customer service center or return to place of purchase with proof of purchase receipt. Assembly of this product may require more than one person.

### PACKAGE CONTENTS

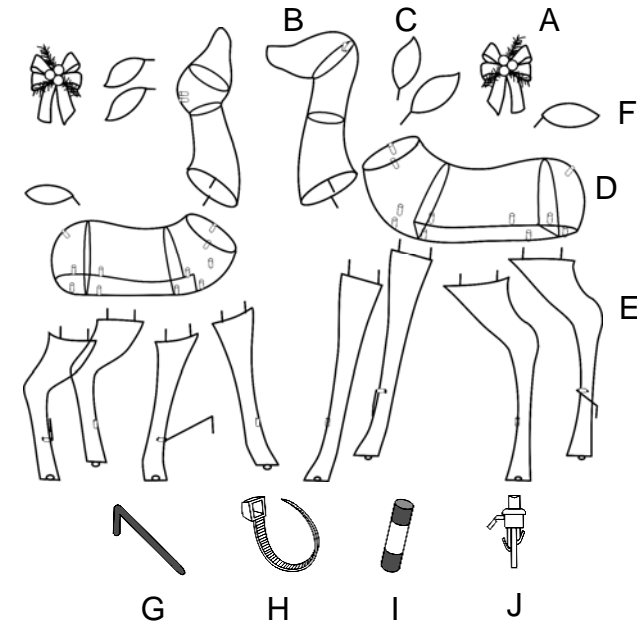


| Package Contents/Parts List |             |          |
|-----------------------------|-------------|----------|
| Part                        | Description | Quantity |
| A                           | Bow Tie     | 2        |
| B                           | Head        | 2        |
| C                           | Ear         | 4        |
| D                           | Body        | 2        |
| E                           | Legs        | 8        |

| Package Contents/Parts List |               |          |
|-----------------------------|---------------|----------|
| Part                        | Description   | Quantity |
| F                           | Tail          | 2        |
| G                           | Ground Stakes | 8        |
| H                           | Plastic Tie   | 15       |
| I                           | Spare Fuse    | 2        |
| J                           | Spare Bulb    | 3        |

## Assembly


### Assembling the Deer

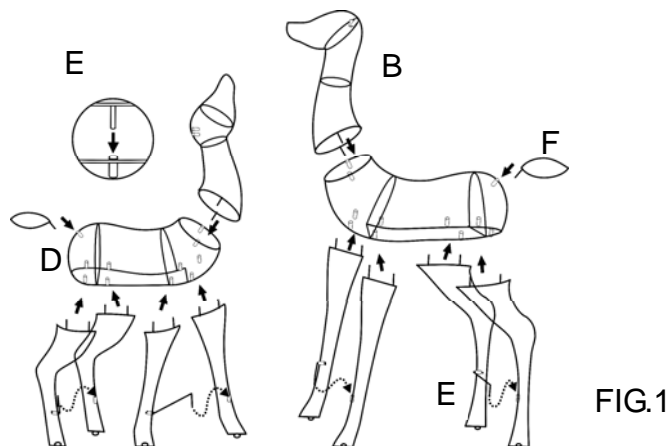

Step 1. Insert the rods at the top of the Legs (E) into the holes on the underside of the Bodies (D). (FIG.1)

Step 2. The Legs come with metal stabilizing bars attached. Insert the hooked end of the metal stabilizing bars into the metal nut on the opposite Leg. (FIG.1)

Step 3. Insert the rod on Tail (F) and Head (B) into the Body (D). (FIG.1)

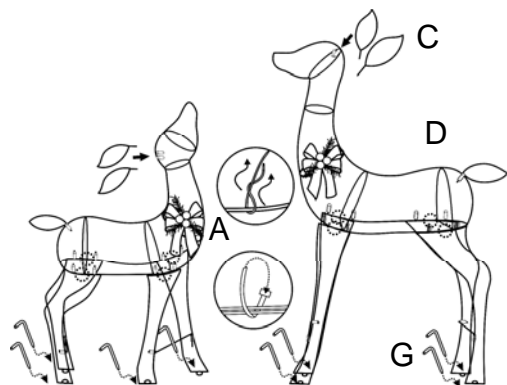

Step 4. Insert both Ears (C) into the matching holes at the top of Head (B). Attach the Bow Tie (A) to the Body (D). (FIG.2)

Step 5. Fasten all parts with the Plastic Tie (H) and secure the Deer to the ground with the Ground Stakes (G). (FIG.2)

## Pre-Operation

**CAUTION:** Grasp the plug to insert or remove from the power source. Do not unplug by pulling on cord.

**CAUTION:** The lighting string on this product is rated at 2.4 Watts(0.02Amps) for Little Deer and 4.8 Watts ( 0.04 Amps) for Doe. Do not overload. Do not connect to other lighting strings, decorative outfit or other electrical products. Before you use or re-use this product inspect it carefully. Return to place of purchase with receipt or discard if the product has cuts, damage or frayed wire insulation on cords, cracks in the socket enclosures, loose connections or exposed copper wire.

## Care and Cleaning

- Carefully remove the product from wherever it is placed. This helps to avoid any undue strain or stress on the product conductors, connections, and wires. If the product is placed somewhere other than the ground it should be well secure and stable.
- Wipe the product with a damp cloth and allow the product to dry before storing.
- Store the product neatly in a cool, dry location protected from sunlight.

## FOR INDOOR AND OUTDOOR USE