

AR Blue Clean Power Washer UPDATE: Please READ

The new Garden Hose Adapter is included with all AR Blue Clean Power Washers. The updated adapter is made up of two pieces. See the picture below:



The new adapter has two parts for a Quick-Connect system:

1. A clear plastic adapter (2 ½ inches long with a screen filter)
2. A blue/black collar adapter with a water check valve

Connection Instructions:

1. Attach CLEAR plastic adapter (2 ½ inches long) to power washer's water inlet.
Note: The water inlet on all AR power washers and the clear plastic adapter have METRIC threads. They must be used together for a water-tight connection.
2. Attach the Blue/Black collar adapter to the garden hose.
Note: The Blue/Black collar adapter and the garden hose have US threads. They must be connected together for a water-tight fit.
3. To connect the water to the power washer, slide the blue/black collar adapter onto the clear adapter. You will hear a "click" when they are connected.
4. Turn the water all the way ON at the water faucet to ensure full water pressure to the power washer.
5. To remove the garden hose from the power washer, simply pull back the blue collar and slide the adapter off the clear adapter.
Note: The blue/black collar has an added feature: A water check valve is incorporated into the adapter so water will flow from the garden hose **only** when it is connected to the clear adapter.

Cleaning screen filter in clear adapter:

- Each time, before using the power washer, visually inspect filter for dirt.
- If dirty, remove the black washer from the collar.
- Insert a pen or pencil into the nozzle end of the adapter and push the filter out.
- Rinse with water and reinsert filter into the adapter, replace washer and
- Reattach adapter to the power washer water inlet.