


COMPACT MULTI FUNCTION OVEN

Model No:KOC-1C2KDS

DAEWOO
ELECTRONICS

Please keep this guide next to your oven for easy reference.

QUICK REFERENCE: CONTROL PANEL

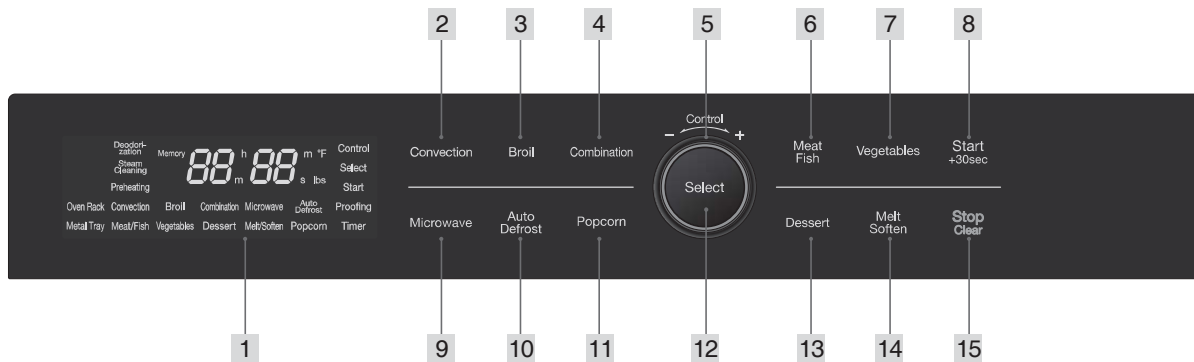

- 1 Display Window:** Display information such as cooking time, temperature, quantity, menu and mode icons.
- 2 Convection cook Button:** Press this button to select Convection cook.
- 3 Broil cook Button:** Press this button to select Broil cook.
- 4 Combination cook Button:** Press this button to select Combination cook.
- 5 Control Dial Knob:** Turn to search menu, cooking time, quantity, weight and temperature.
- 6 Meat/Fish Button:** Press this button to select Meat/Fish feature.
- 7 Vegetables Button:** Press this button to select Vegetables feature.
- 8 Start/+30sec Button:** Press for Express Cook, 30 seconds at maximum microwave power. Continue pressing to add 30 seconds up to 5 minutes. Press to start cooking after selection is confirmed.
- 9 Microwave cook Button:** Press this button to select Microwave cook.
- 10 Auto defrost Button:** Press this button to select Auto defrost cook.
- 11 Popcorn Button:** Press to pop either 3.0 or 3.5 ounces of popcorn.
- 12 Select button:** Press to select menu, cooking time, quantity, weight and temperature.
- 13 Dessert Button:** Press this button to select Dessert feature.
- 14 Melt/Soften Button:** Press this button to select Melt/Soften feature.
- 15 Stop/Clear Button:** Press to stop operation or clear settings.

QUICK REFERENCE: PRESET COOKING MODES

For detailed cooking information, see the Owner's Manual.

MEAT/FISH

MEAT/FISH MENU CHART		
CODE	CATEGORY	QUANTITY OPTION
01	Chicken Pieces	0.5 lb / 1.0 lb / 1.5 lb / 2.0 lb
02	Whole Chicken	3.0 lb / 3.5 lb / 4.0 lb / 4.5 lb
03	Steak	0.5 lb / 1.0 lb / 1.5 lb / 2.0 lb
04	Pork	2.0 lb / 2.5 lb / 3.0 lb / 3.5 lb
05	Fish Steak	0.5 lb / 1.0 lb / 1.5 lb / 2.0 lb
06	Sausages	2 links / 4 links / 6 links

VEGETABLES

VEGETABLES MENU CHART		
CODE	CATEGORY	QUANTITY OPTION
01	Fresh Vegetables	0.5 lb / 1.0 lb / 1.5 lb / 2.0 lb
02	Frozen Vegetables	0.5 lb / 1.0 lb / 1.5 lb / 2.0 lb
03	Baked Potato	1pcs/2pcs/3pcs/4pcs/5pcs

MELT/SOFTEN

MELT/SOFTEN MENU CHART		
CODE	CATEGORY	QUANTITY OPTION
01	Ice Cream	1 pint / ½ gallon
02	Cream Cheese	3 oz / 8 oz
03	Butter	2 tbsp / ½ cup
04	Chocolate	4 oz / 8 oz

DESSERT

DESSERT MENU CHART		
CODE	CATEGORY	QUANTITY OPTION
01	Bundt Cake	1 pcs
02	Muffins	6 cups
03	Cookies	1 sheet

MEMORY COOK

See the Owner's Manual to change the factory presets.


MEMORY COOK FACTORY PRESETS		
CODE	COOKING TIME	MICROWAVE POWER LEVEL
01	0:40	P-HI (100%)
02	1:20	P-HI (100%)
03	2:00	P-HI (100%)

ACCESSORIES

This is a commercial grade oven with rack holders on each side of the inside of the oven. With the long side parallel to the door, slide the metal tray into one of the rack positions. Be sure the tray slides into the same position on each side of the oven so it is level.



 METAL TRAY: Place food or cookware on tray and slide into either lower, middle or upper shelf.



OVEN RACK: Place food or cookware on rack. Always place on the metal tray.

IMPORTANT: Place the metal tray in one of the three shelf positions when cooking. Do NOT place anything directly on the bottom of the oven during operation.