

1 YEAR LIMITED WARRANTY*:

Your small kitchen appliance is warranted to the original consumer purchaser to be free from any manufacturing defects under normal use and conditions for one (1) year from the date of purchase, except as noted. During that period, if you need to exchange the unit, please return the item with your sales receipt to the store where you purchased it. If you are no longer within the store's return policy period, please read the following for warranty details:

WARRANTY IS ONLY VALID WITH A DATED SALES RECEIPT.

To guarantee repair or replacement without charge, a dated sales receipt showing purchase within the limited warranty period* must accompany the appliance. Without a sales receipt, warranty will be estimated according to the appliance's manufactured date. A comparable appliance should arrive within 2-3 weeks. However, in case an appliance is not covered by warranty, correspondence offering alternatives will be mailed to you.

During the one-year warranty period, we will either repair or replace this product with either a new or remanufactured product, at our discretion. If the product is no longer available, a similar product will be sent that is of equal or greater value to replace the defective product. (See the "Returns" section below). The repaired or replacement product will be in warranty for the remaining balance of the one-year warranty period and an additional one-month period.

This limited warranty covers appliances purchased and used within the U.S.A. plus the District of Columbia and does NOT cover:

- Damages caused by unreasonable use, neglect, normal wear and tear, commercial use, improper assembly of product, or Acts of God, such as fire, flood, hurricanes and tornadoes.
- Damages caused in shipping.
- Defects other than manufacturing defects.
- Breakage caused by misuse, abuse, accident, alteration, lack of proper care and maintenance, or incorrect current or voltage.
- Damages of parts that are not electrical; including but not limited to the following: cracked or broken plastic or glass, cutters/strainers, cutting blades, etc.
- Damage from service or repair by unauthorized personnel.
- Extended warranties purchased via a separate company or reseller.
- Consumer's remorse is not an acceptable reason to return a product to our Service Center.

*The consumer is responsible for any delivery charges for all replacement units provided for exchange under the warranty.

RETURNS: To return a defective product, please contact customer service to obtain an RA # (Return Authorization Number). We will not accept any returns of merchandise without an applicable RA #. For your protection, always carefully package the product for shipment and insure it with the carrier as we cannot assume responsibility for lost or damaged returns. Be sure to enclose the following items with your return: any accessories related to the problem, your full address and daytime phone number, a note describing the problem, a copy of the dated sales receipt or other proof of purchase and a valid RA#. C.O.D shipments cannot be accepted.

Maxi-Matic, USA expressly disclaims all responsibility for consequential damages or incidental losses caused by the use of this appliance. Some states or provinces do not allow this exclusion or limitation of incidental or consequential losses, so the foregoing disclaimer may not apply to you. This warranty gives you specific legal rights, and you may also have other legal rights which vary from state to state, or province to province.

*One Year Limited Warranty valid only within the U.S.A. **plus the District of Columbia, excluding** Puerto Rico and the Virgin Islands.

This warranty is effective only if the product is purchased and operated in the USA; product usage which is in violation of the written instructions provided with the unit will void this warranty.

For international warranty, please contact the local distributor.

**Any instruction or policy included in this manual may be subject to change at any time.

Model EG-1220G 12" Non-stick Skillet with Glass Lid

Distributed by: **MAXI-MATIC**[®], USA

18401 E. Arenth Ave. Building B. City of Industry, CA 91748

Customer Service Department: (626) 912-9877 Ext. 120 MON-FRI 10am-5pm PST

Email: info@maxi-matic.com Website: www.maxi-matic.com

Elite
BY MAXI-MATIC
Gourmet

12" Non-Stick Electric Skillet with Glass Lid

Model EG-1220G



INSTRUCTION MANUAL

Before operating your new appliance, please read all instructions carefully and keep for future reference.

IMPORTANT SAFEGUARDS


When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before operating.
2. Do not touch hot surfaces. Use handles or knobs if applicable.
3. Remove all packaging plastics and other materials from unit before operating.
4. Wash all removable accessories before using for the first time.
5. To protect against electrical shock, do not immerse cord, plug or appliance itself in water or other liquids.
6. Close supervision is necessary when appliance is used by or near children.
7. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
8. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
9. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
10. Do not use outdoors.
11. Do not let cord hang over edge of table or counter or touch hot surfaces.
12. Do not place on or near a hot gas or electric burner, or in a heated oven.
13. Always attach plug to appliance first, then plug cord into wall outlet. To disconnect, turn any control to OFF position, then remove plug from wall outlet.
14. Oversized foods or metal utensils must not be inserted in the appliance as they may cause a fire or risk of electrical shock.
15. A fire may occur if the appliance is covered or touching flammable material including curtains, draperies, walls and the like when in operation.
16. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, involving a risk of electrical shock.
17. Extreme caution should be exercised when using containers constructed of other material other than metal or glass.
18. Do not store any materials other than manufacturer's recommended accessories in this unit when not in use.
19. Do not place any of the following materials in the unit: Paper, cardboard, plastic and the like.

SAVE THESE INSTRUCTIONS

THIS PRODUCT IS FOR HOUSEHOLD USE ONLY!

PARTS & FEATURES

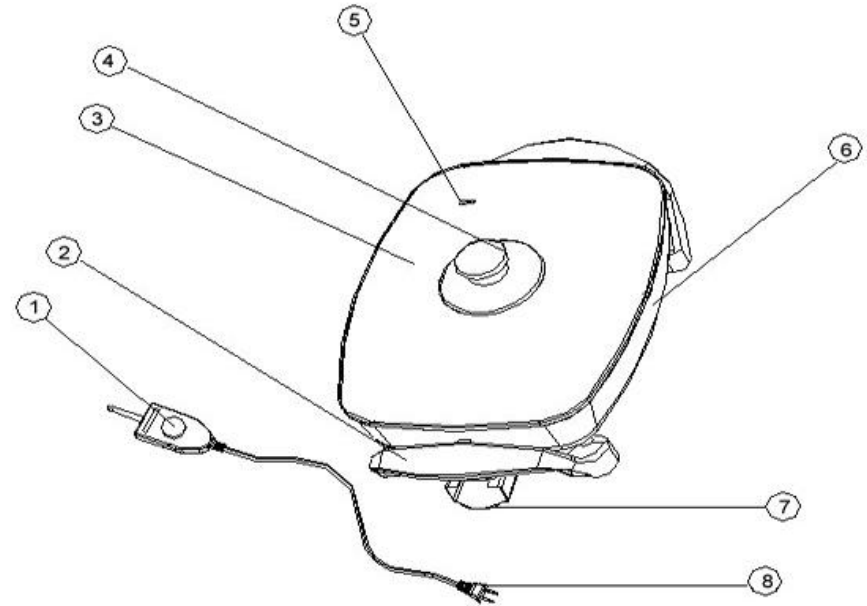

- 1) 450°F Temperature Control Knob.
- 2) Cool-Touch Handles.
- 3) Tempered Glass Lid.
- 4) Cool-Touch Knob.
- 5) Ventilation Hole.
- 6) Die-Cast Aluminum body.
- 7) Power socket for Temperature control.
- 8) Power cord.

HOW TO USE

Before using your skillet for the first time, remove all packaging materials and wash all the parts EXCEPT for the thermostat and power cord in warm soapy water. Dry completely before using.

ASSEMBLY & OPERATION:

Always operate the skillet on a stable leveled surface to avoid any accidental spills.

- 1) Insert thermostat control and power cord into the side of the unit where it is indicated by a small rectangular opening. Line up the metal conductor and push in gently.
- 2) Always make sure that the thermostat is set to the OFF position before plugging the power cord into a wall outlet.
- 3) Set thermostat to desired temperature. Wait few minutes for skillet to heat up and place prepared food into the skillet.
- 4) Cook either with or without the cover as indicated in recipes.
- 5) For roasting: Prepare foods and place into skillet.
- 6) Set thermostat to indicated temperature.
- 7) Place cover over the skillet and keep covered to prevent heat from escaping.
- 8) When cooking cycle is complete, turn the thermostat control to OFF.
- 9) Unplug power cord from wall outlet.
- 10) Remove thermostat control from the skillet by pulling gently.
- 11) Serve food directly from the skillet while it is still hot OR simply remove the meal from the skillet and serve on your own platter or dishes.

CARE & CLEANING

Always make sure the unit is in the OFF position and the power cord is UNPLUGGED before washing any parts of the 12" skillet.

- 1) The cover of the skillet is dishwasher safe or can simply be cleaned w/ a damp soapy cloth or sponge.
- 2) The main base of the skillet can be cleaned with a damp soapy cloth or sponge.
NEVER IMMERSE THE BASE OF THE SKILLET INTO WATER OR ANY OTHER LIQUIDS FOR THIS MAY DAMAGE IT SEVERLY!
- 3) Dry thoroughly before storing away the unit.
- 4) **NEVER USE ABRASIVE CLEANSERS OR MATERIALS TO CLEAN ANY PARTS OF THE SKILLET FOR THIS MAY DAMAGE THE SURFACES AND NON-STICK COATING!**

Short Cord Purpose

- 1) A short power-supply cord is provided to reduce risks of injuring yourself from becoming entangled in or tripping over a longer cord.
- 2) Longer extension cords are available and may be used if you exercise caution during use.
- 3) If a longer cord is used please note the following:
 - The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.

The longer cord should be arranged so that it will not drape over the counter top of tabletop where it can be pulled on by children or tripped over unintentionally.

Polarized Plug

If this appliance has a **polarized plug** (meaning one blade is wider than the other one), please follow the below instructions:

To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only in one direction. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

This appliance is intended for Household Use Only.