



OMS THD SKU # 1002 455 695

Model # TY613-1711



Thank you!

We appreciate the trust and confidence you have placed in Home Accents through the purchase of this 63in 160 Light LED WHITE PVC DEER. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home decoration needs. Thank you for choosing Home Accents!

1-877-527-0313

HOMEACCENTSHOLIDAY.COM

Parts List		
Locater	Name	Qty.
A	Antler	2
B	Head/Neck	1
C	Ear	2
D	Body	1
E	Front Leg	2
F	Hind Leg	2
G	Tail	1

Hardware List		
Locater	Name	Qty.
H	Ground Stake	4
I	Plastic Tie	10
J	Spare Fuse	2
K	Spare Bulb	4

ASSEMBLY INSTRUCTIONS

63in 160 Light LED WHITE PVC DEER

USE AND CARE GUIDE

PLANNING ASSEMBLY

Carefully remove all the parts from the box and place them on a flat surface. Please note that many of the parts are connected by the lighting string that runs throughout the item. Remove the parts with care not to damage the lighting string or parts. Read the entire manual prior to assembly and identify all the parts included in the package against the parts list. If any parts are missing or damaged do not attempt assembly. Contact our customer service center or return the item to place of purchase with purchase receipt. Assembly of this product may require more than one person.

Pre-Operation

CAUTION: Grasp the plug to insert or remove from the power source. Do not unplug by pulling on cord.

CAUTION: The lighting string on this product is rated at 9.6 Watts (0.08Amps). Do not overload. Do not connect to another lighting string, decorative outfit or other electrical products. Before you use or re-use this product, inspect it carefully. Discard or return to place of purchase with purchase receipt if the product has cuts, damage, frayed wire insulation on cords, cracks in the socket enclosures, loose connections or exposed copper wire.

Care and Cleaning

- Carefully remove the product from wherever it is placed. This helps to avoid any undue strain or stress on the product connections and wires. If the product is placed somewhere other than the ground it should be well secured and stable.
- Wipe the unit with a damp cloth and allow the unit to dry before storing.
- Store the product neatly in a cool, dry location protected from sunlight.

Guarantee


What is Covered

The product is intended for residential seasonal use for 90 days per year. This product is covered by a 90 days limited guarantee due to defects in material and workmanship. Return the product with purchase receipts to the location of purchase for refund within 90 days of purchase.

What is Not Covered


This warranty does not cover commercial use, normal wear and tear, products not used in accordance with directions provided on or with the product, burn out of bulbs or LEDs, batteries, products that have been subjected to unauthorized repair and/or modification and damage caused by shipping and improper handling, alterations, misuse or accidents. Questions, problems, missing parts? Before returning to the store, call Home Accents Holiday Customer Service 8 a.m.-6 p.m., EST, Monday-Friday

 Diagram of Parts

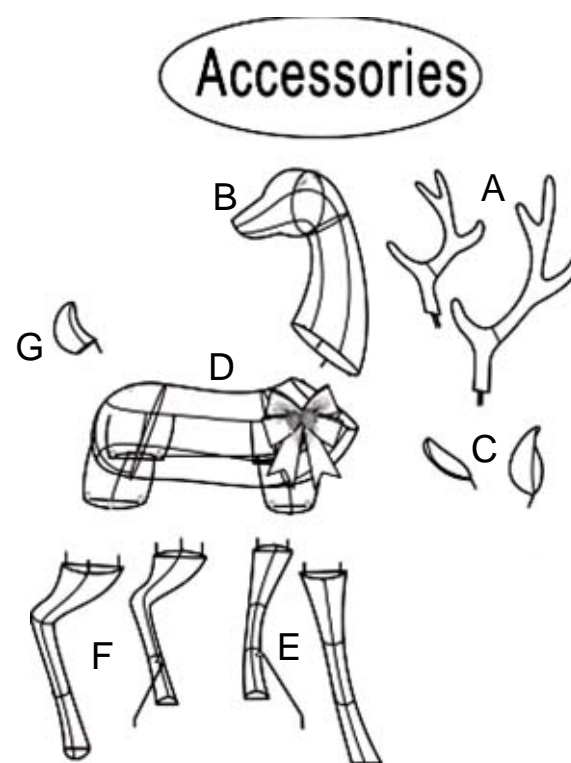

Accessories

 Hardware

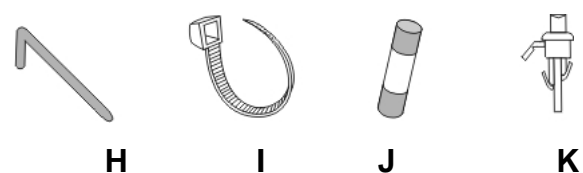


ASSEMBLY

1. Assembling the Legs to the Body


Insert the metal connecting rods attached to each Leg (E & F) into the matching holes on the underside of the Body (D) and fasten them together at the connecting loops with Plastic Tie (I). The Legs come with metal bars attached to stabilize the Deer. Insert the hooked end of the metal bars into the metal nut on the opposite Leg.

 Notes: The Bow is pre-assembled on the Body.

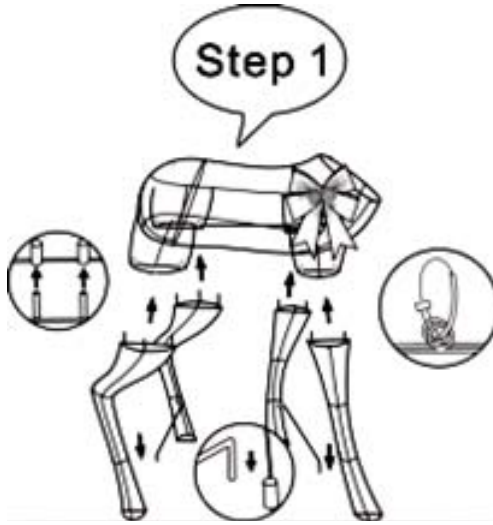

2. Assembling the Tail and Head to the Body

 Insert the connecting rod on the Tail (G) into the connecting hole at the rear of the Body (D). Insert the connecting rods on the bottom of the Head/Neck (B) into the matching holes on the front of the Body and fasten them together at the connecting loops with Plastic Tie (I).

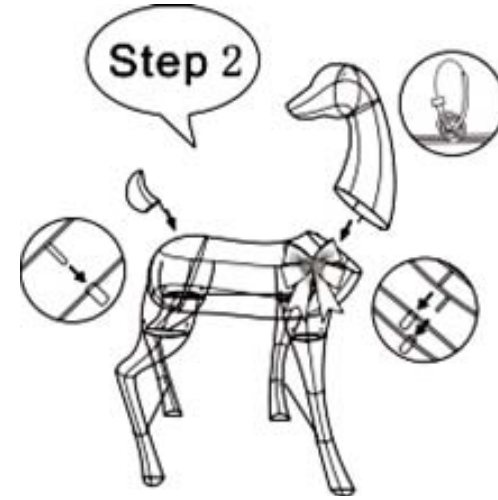

3. Assembling the Antlers and Ears to the Head

Insert the connecting rods on both Antlers and Ears (A&C) into the connecting holes at the top of Head (B). Note: The ears go to the outside of the Antlers



4. Securing the Deer to the Ground

Secure the Deer to the ground with the Ground Stakes (H).

