


Item # 1002558518 Model #181-935-3CS

### **USE AND CARE GUIDE**

#### **RICHMOND HILL 3 PIECE CHAT SET**

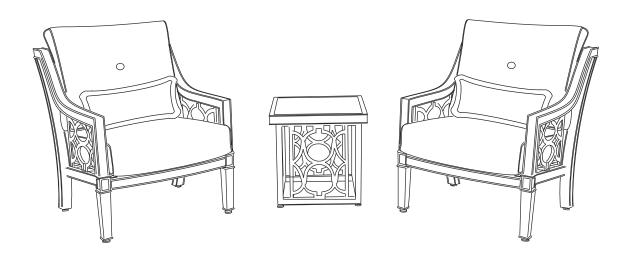

Questions, problems, missing parts? Before returning to the store, call Home Decorators Collection Customer Service 8.00 a.m. - 6.00 p.m., EST, Monday - Friday

1-800-986-3460

#### **HOMEDECORATORS.COM**

#### THANK YOU

#### Table of Contents

Table of Contents	2
Safety Information	2
Warranty	2
Five Year Frame, Two Year Fabric & One Year Table Top	
Limited Warranty	2
What Is Covered	2
What Is Not Covered	2
Care Instructions	

Pre-Assembly	3
Planning Assembly	3
Hardware Included	3
Package Contents	4
Assembly	

### **Safety Information**



**DANGER:** Please keep children out of the assembly area during assembly.



WARNING: Do not sit or stand on the table.



**CAUTION:** Use the table on flat ground only.



**IMPORTANT:** Please check the tightness of bolts at least every 180 days.

### Warranty

#### FIVE YEAR FRAME, TWO YEAR FABRIC AND TABLE TOP LIMITED WARRANTY

#### WHAT IS COVERED

We warrant the frame to be free of manufacturing defects to the original purchaser for five years, fabric for two years and table top for one year.

#### WHAT IS NOT COVERED

It remains the customer's responsibility for freight and packaging charges to and from our service center. This warranty does not cover commercial use, hardware, acts of nature, fire, freezing and abusive use. In addition, purchased parts are not covered under this warranty. We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

Fading, staining of the table surface is not included under warranty.

All warranties are to the original purchaser from authorized dealers only. Warranties are not transferable.

#### **Care Instructions**

Before using, wipe with a clean, dry cloth. Do not use bleach or solvents. Treat the frame with liquid wax for maximum protection against UV light and salty, damp air. When not in use, store furniture in a cool, dry place. If your set includes cushions or mesh fabric, they may be cleaned by hand with a mild solution of soap and water. Rinse cushions thoroughly and allow to drip dry. Do not machine wash or tumble dry, as cushions may shrink. Do not use bleach or solvents on fabrics.

When cleaning the tabletop make sure to use a soft, clean cloth that doesn't bleed color. Tables must not be stored upside down.

You may contact our customer service department with any questions by phone at 1-800-986-3460 or visit www.homedecorators.com.

### **Pre-Assembly**


#### **PLANNING ASSEMBLY**

It will take two people about 20 minutes to complete the assembly process.

#### **HARDWARE INCLUDED**




NOTE: Hardware not shown to actual size.

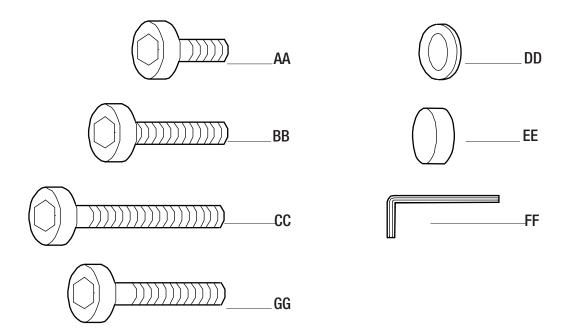



Part	Description	Quantity
AA	Bolt (M6x18)	4
BB	Bolt (M6x30)	2
CC	Bolt (M6x45)	4
DD	Washer	26
EE	Bolt cap	26
FF	Hex wrench	1
GG	Bolt (M6x35)	16

## **Pre-Assembly(continued)**
 
#### **PACKAGE CONTENTS**

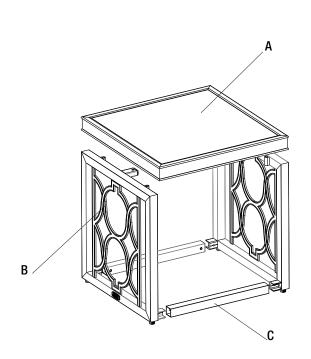



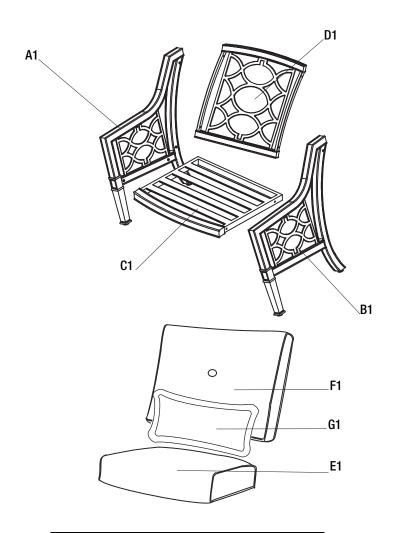

Part	Description	Quantity
A1	Right armrest	2
B1	Left armrest	2
C1	Seat panel	2
D1	Back panel	2
E1	Seat cushion	2
F1	Back cushion	2
G1	Breakfast pillow	2


### **Assembly**

## Assembling the table base

- □ Put side panels (B) upside down on a flat, smooth surface.
- Plug the tabs of side panels into cross bars (C) and secure them with washers (DD) and bolts (AA) using hex wrench (FF).




**NOTE:** Do not tighten bolts completely until the end of Step 2.

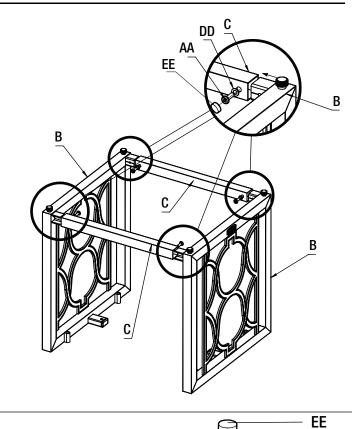

# **2** Attaching the table base


- □ Place the table top (A) upside down on a flat, smooth surface.
- Attach the table base to the table top with washers (DD)
  and bolts (BB) and (CC) using hex wrench (FF).
- □ Fully tighten all the bolts once all bolts are in place.
- □ Cover all the bolts with bolt caps (EE).

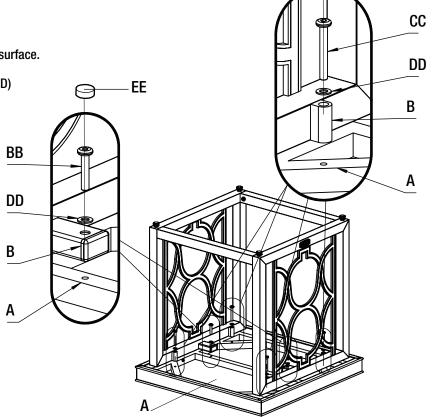

# **Assembly (continued)**


# 3 Stabilizing the table

- Turn the table upright.
- □ Level the table with foot glides if necessary.

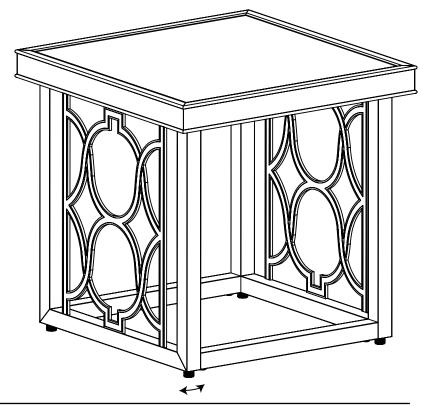

# 4 Attaching the seat panel and the back panel


- □ Place the armrest (A1) on its side on a flat, smooth surface.
- □ Attach the seat panel (C1) and the back panel (D1) to the armrest (A1) with washers (DD) and bolts (GG) using hex wrench (FF).
- □ Follow the above procedure to assemble the other armrest (B1).

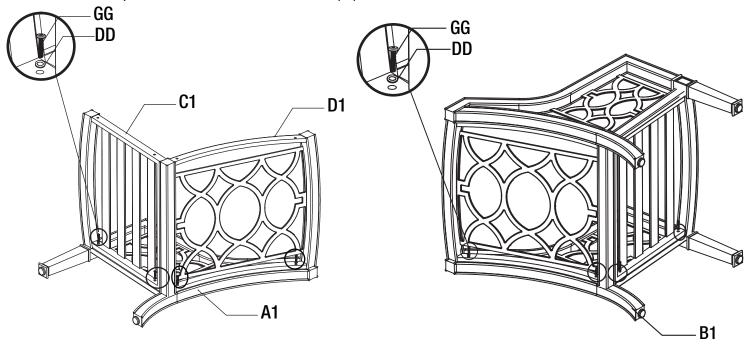

## **Assembly (continued)**

## **5** Attaching bolt caps


- □ Fully tighten all the bolts and cover them with bolt caps (EE).
- □ Turn the chair upright.
- □ Repeat step 4~5 for the other chair.

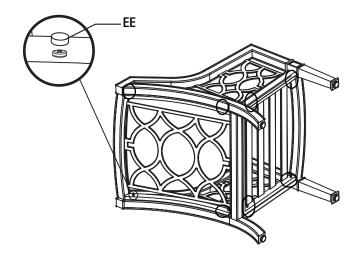



# 4 Stabilizing the chairs

- Place cushions (E1) and (F1), and breakfast pillows (G1) on the chairs.
- □ Level the chairs with foot glides at the bottom of chair legs.

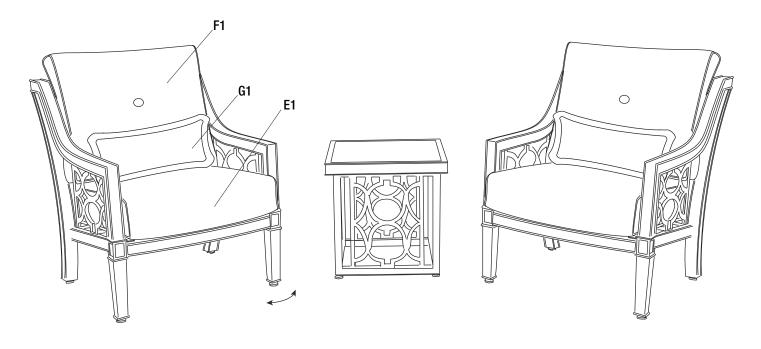



Questions, problems, missing parts? Before returning to the store, call Home Decorators Collection Customer Service 8.00 a.m. – 6.00 p.m., EST, Monday-Friday

1-800-986-3460

**HOMEDECORATORS.COM** 

Retain this manual for future use.