

 


Item #FPW-101143

# USE AND CARE GUIDE

---

## 29" WOOD BURNING FIRE PIT

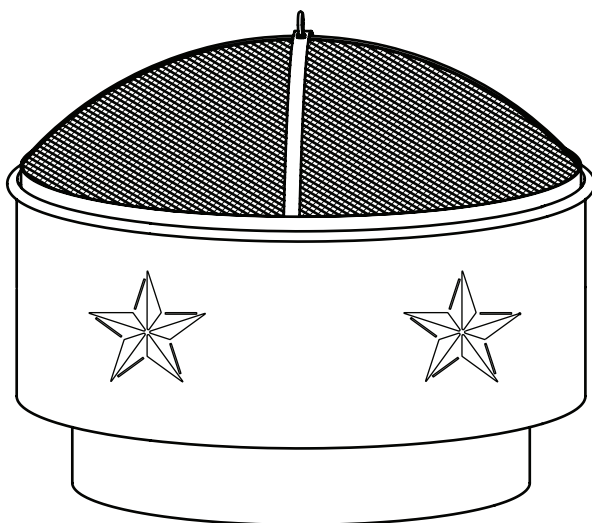

Questions, problems, missing parts? Before returning to the store,  
call Hampton Bay Customer Service  
8 a.m. - 6 p.m., EST, Monday - Friday

1-855-HD-HAMPTON

[HAMPTONBAY.COM](http://HAMPTONBAY.COM)

---

### THANK YOU

*We appreciate the trust and confidence you have placed in Hampton Bay through the purchase of this wood burning fire pit. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Hampton Bay!*

# Table of Contents

Table of Contents .....	2	Pre-Installation .....	3
Safety Information .....	2	Planning Installation .....	3
THD - TOC2		Installation .....	5
Warranty .....	2	Care & Cleaning .....	6
What is covered .....	2	Service Parts .....	7
What is not covered .....	2		

## Safety Information

1. For outdoor use only. Do not use the fire pit indoors. Carbon monoxide fumes, due to lack of ventilation, can cause death.
2. Do not use gasoline or kerosene to start fires in the fire pit. Keep all flammable liquids away from the fire pit.
3. This unit is designed to burn charcoal and untreated wood only. Fill the bottom of the bowl with sand until the surface of sand is 0.2 inches below the grid.
4. Do not use under or on combustible structures/ surfaces including wooden decks. Assemble the fire pit on a non-abrasive surface.
5. Use protective gloves and long-handled tools when fire pit is in use.
6. Fire pit remains very hot for a period of time after using. Be sure fire pit is cool before attempting to move it. Don't touch the ash tray handle during use until the fire is completely out and cooled down.
7. The handles of the tools may become hot during and after use. The fire pit should be placed no closer than 24 in. from walls during use.



**DANGER:** Keep all flammable liquids away from the fire pit.



**WARNING:** Keep children away from hot fire pit.



**CAUTION:** Do not burn over 1.6 lbs. of charcoal or 3 lbs. of untreated wood at one time.



**IMPORTANT:** Do not use it under or on a combustible structures/surfaces.

## Warranty

### 90 DAY WARRANTY

#### WHAT IS COVERED

This product is covered under a manufacturer's 90-day warranty from date of purchase against defects in materials and workmanship.

#### WHAT IS NOT COVERED

This warranty does not cover damage due to neglect, abuse or weather related damage. For full warranty disclosure, visit [www.hamptonbay.com](http://www.hamptonbay.com).

Contact the Customer Service Team at 1-855-HD-HAMPTON or visit [www.hamptonbay.com](http://www.hamptonbay.com).

Pre-Installation

PLANNING INSTALLATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list. If any part is missing or damaged, do not attempt to assemble the product or return to the place of purchase.

 


**NOTE:** Contact our customer service toll free at 1-855-HD-HAMPTON for replacement parts or further instructions.

HARDWARE INCLUDED




**NOTE:** Hardware not shown to actual size.

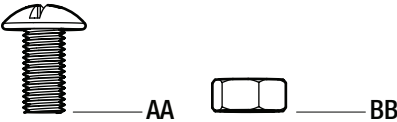

Part	Description	Quantity
AA	M6x15 Bolt	3
BB	M6 Nut	4

# Pre-Installation (continued)
 
## PACKAGE CONTENTS

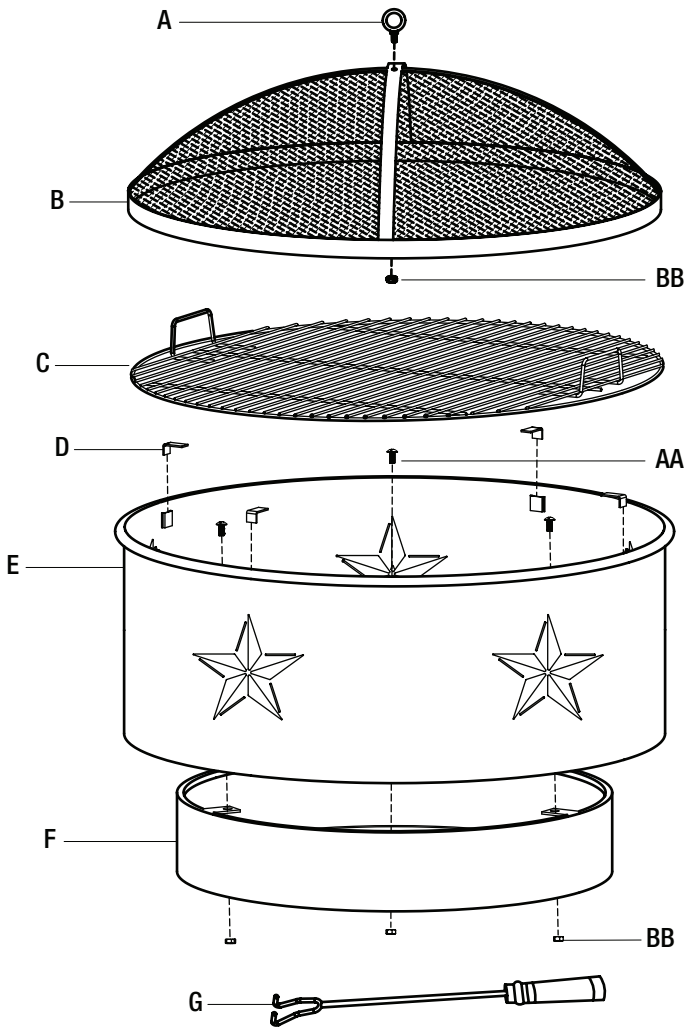


Part	Description	Quantity
A	Poker Ring	1
B	Spark Guard	1
C	Cooking Grate	1
D	Cooking Grate Support	4
E	Fire Pit Body	1
F	Fire Pit Base	1
G	Poker	1

# Installation

 
## 1

- Connect the Poker Ring (A) to the Spark Guard (B) with M6 Nut (BB).

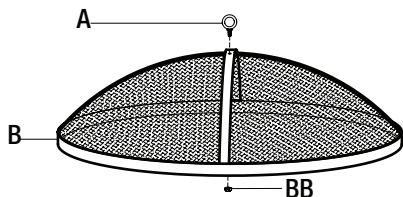


## 2

- Connect the Fire Pit Base (F) to the Fire Pit Body (E) with 3pcs of M6x15 Bolts (AA) and M6 Nuts (BB).
- Place the Cooking Grate Support (D) into the Fire Pit Body (E). The short side of the Support shall be inserted into the body.

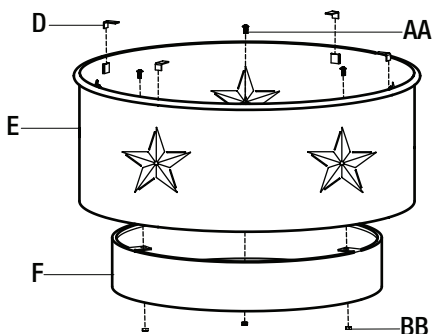

## 3

- Place the Cooking Grate (C) onto the Cooking Grate Support (D), then place the assembled Spark Guard (B) onto the Fire Pit Body (C).

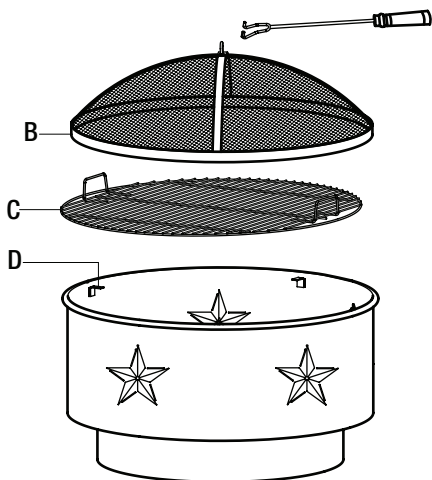


## Care and Cleaning

---

Clean this outdoor fire pit on a regular basis to promote safer use and longer product life. After repeated use, the finish may discolor slightly.

- Do not attempt to clean, move or store this outdoor fire pit until the fire is completely out and cooled down.
- Do not use oven cleaner or abrasive cleaners as they will damage this product. Do not clean any part of this outdoor fire pit in a self-cleaning oven as it may damage this finish.
- Once the fire is out, coals are cold and outdoor fire pit is cool to touch, remove ashes and properly dispose.
- Wipe exterior surfaces with a mild dish-washing detergent or baking soda.
- For stubborn stains use a citrus-based degreaser and a nylon scrubbing brush. Rinse clean with water.
- Remove built-up creosote from components with a chimney cleaning product.
- When not in use, store the fire pit fully assembled in a location away from children and pets.

MODEL TYPE

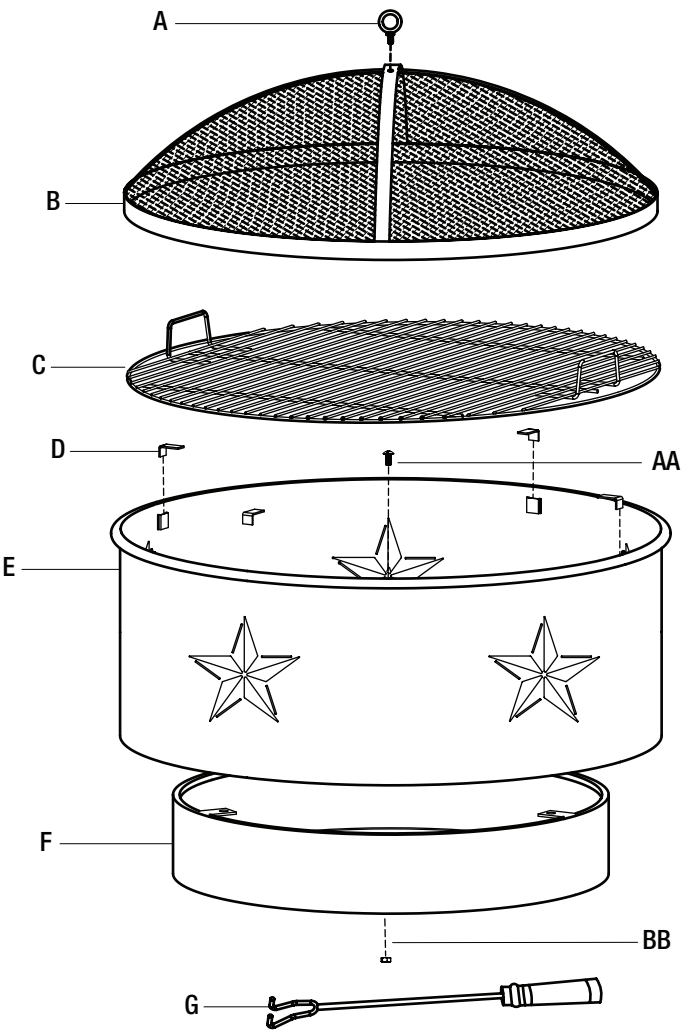

Part Numbers	Description	Quantity	Part Numbers	Description	Quantity
A: FPW-101142-PR-BLK	Poker Ring	1	F: FPW-101143-FPB-BRZ	Fire Pit Base	1
B: FPW-101142-SG-BLK	Spark Guard	1	G: FPW-101142-PK-BLK	Poker	1
C: FPW-101142-CG-BLK	Cooking Grate	1	AA: FPW-101142-BOLT-BLK	M6x15 Bolt	3
D: FPW-101142-CGS-BLK	Cooking Grate Support	4	BB: FPW-101142-NUT-BLK	M6 Nut	4
E: FPW-101143-FPB-BRZ	Fire Pit Body	1			



Questions, problems, missing parts? Before returning to the store,  
call Hampton Bay Customer Service  
8 a.m.-6 p.m., EST, Monday-Friday

**1-855-HD-HAMPTON**

**HAMPTONBAY.COM**

Retain this manual for future use.