88 5524 943 Kitchen Island


IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occurring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.



Part List

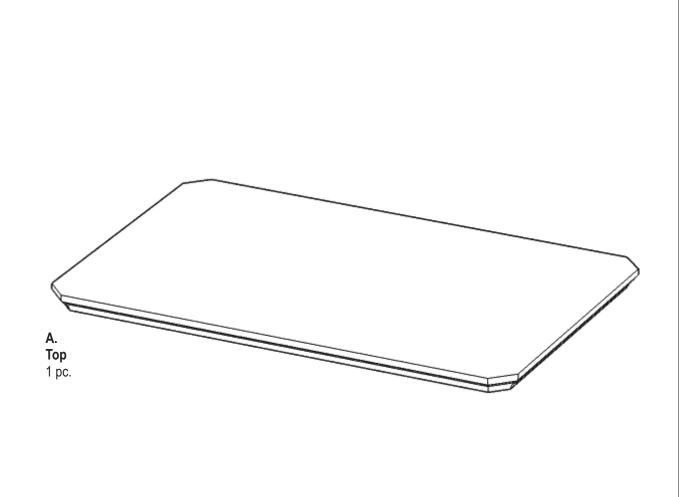

For assembly see instructions in carton 88 5524 942

Home Styles Consumer Assistance Line 888-680-7460 and 877-831-0319 servicedesk@homestyles-furniture.com

88 5524 941 Kitchen Island


IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occurring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.



Part List

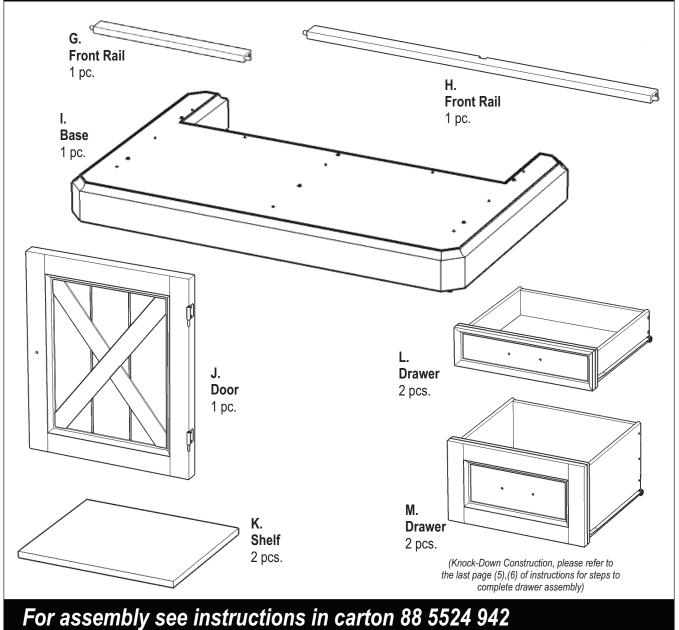

Home Styles Consumer Assistance Line 888-680-7460 and 877-831-0319 servicedesk@homestyles-furniture.com

88 5524 942 Kitchen Island


IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occurring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.



Part List

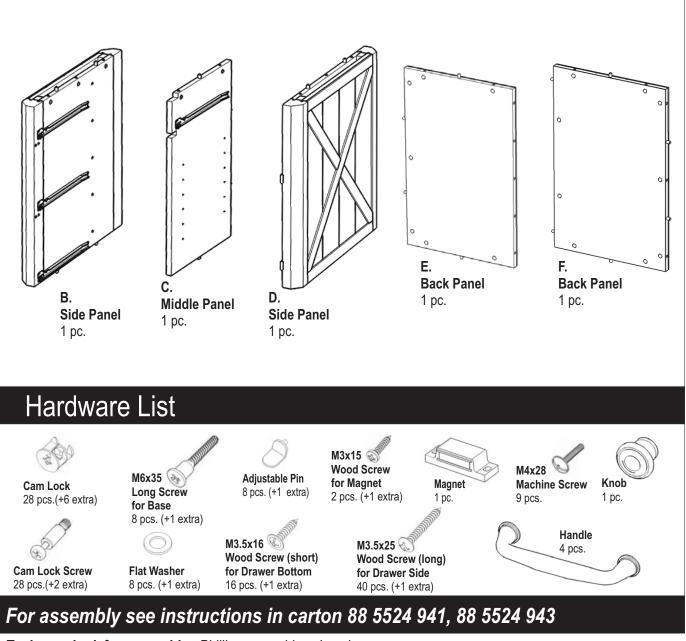


Tools required for assembly: Phillips screwdriver, Level Home Styles Consumer Assistance Line 888-680-7460 and 877-831-0319 servicedesk@homestyles-furniture.com

Assembly Instructions 2/6


IMPORTANT

- * Do not tighten up all the screws until each part is properly assembled.
- * Use a soft cloth between these parts and the floor.

* After assembly, item must be level to work properly. Use the included adjustable levelers to level.

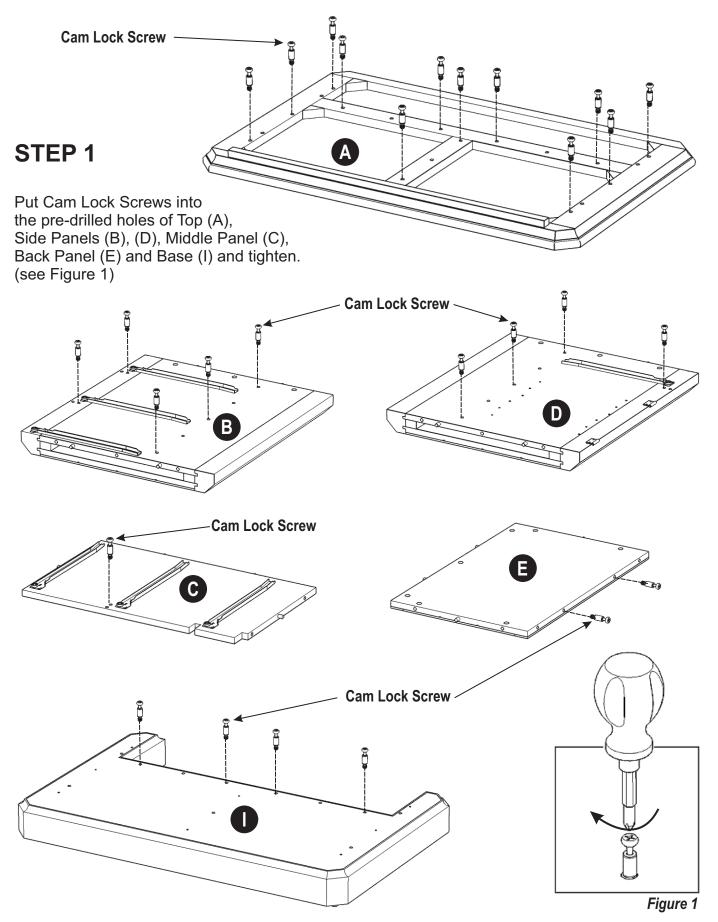

Assembly Instructions 3/6

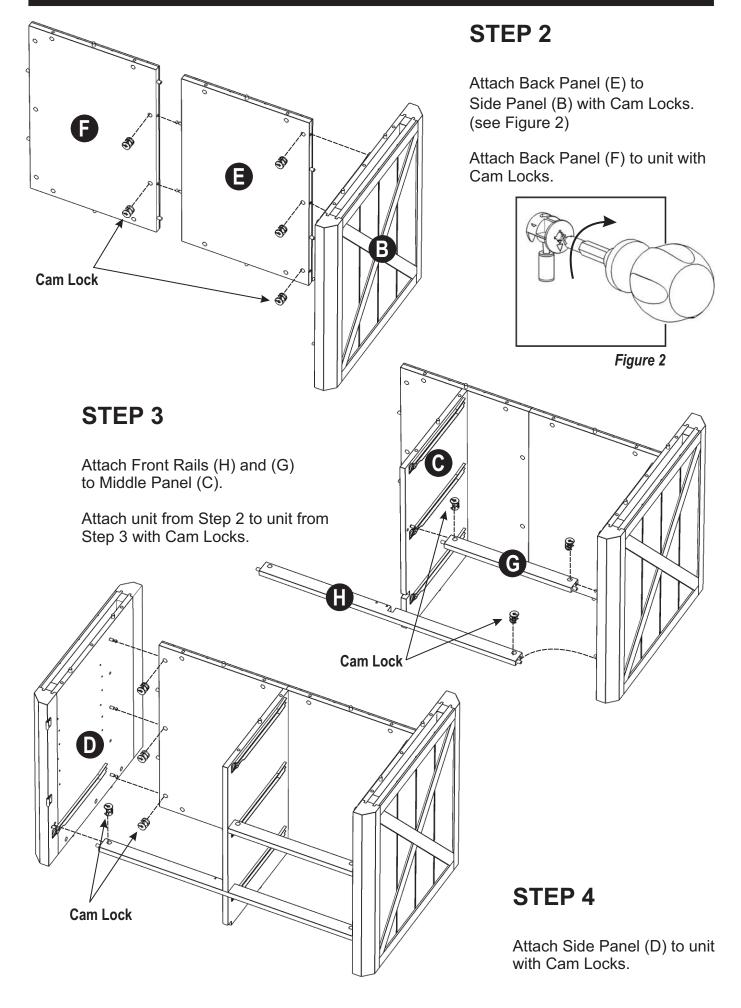

Assembly Instructions 4/6

STEP 5

Long Screw Flat Washer Attach Base (I) to unit with Washers, Long Screws and Cam Locks. (see Figure 3) Attach Magnet to unit with Wood Cam Lock Screws for Magnet. (see Figure 4) Wood Screw Magnet for Magnet Figure 4 Figure 3 ¢ Figure 5 Figure 6 Figure 7 **STEP 6**

Cam Lock **Adjustable Pin**

Turn the unit upright position, attach Top (A) to unit with Cam Locks.

Slide Drawers (L) and (M) into position.


Insert Adjustable Pins into side panel and middle panel at desired level, then place Shelves (K) into position.

Attach Door (J) by sliding the door lift hinges into the side panels lift hinges. (see Figure 5)

Assemble Knob to Door (J) with Machine Screws. (see Figure 6)

To level the unit, adjust the adjustable levelers on the bottom of unit. (see Figure 7)

Note: Unit must be level to work properly.

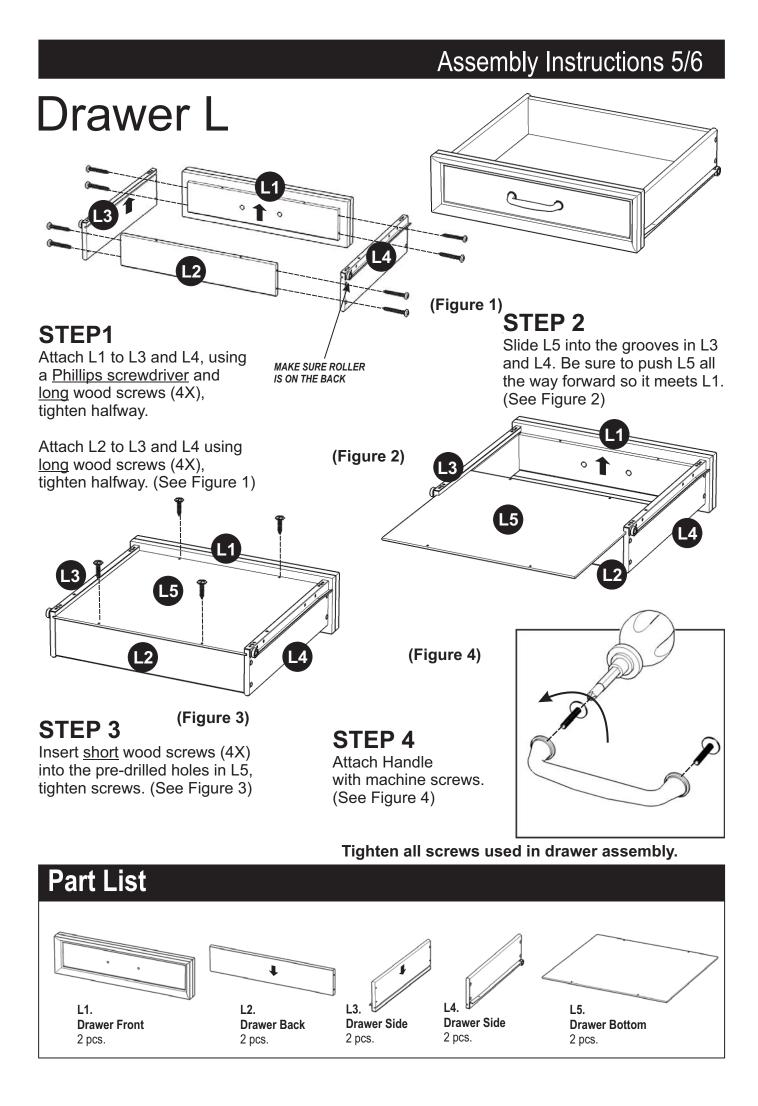

Assembly Instructions 6/6

