


# REPLACEMENT PARTS - MODEL TB27B EC ELECTRIC START CAPABLE 2-CYCLE BLOWER

PPN 41AS27BA766

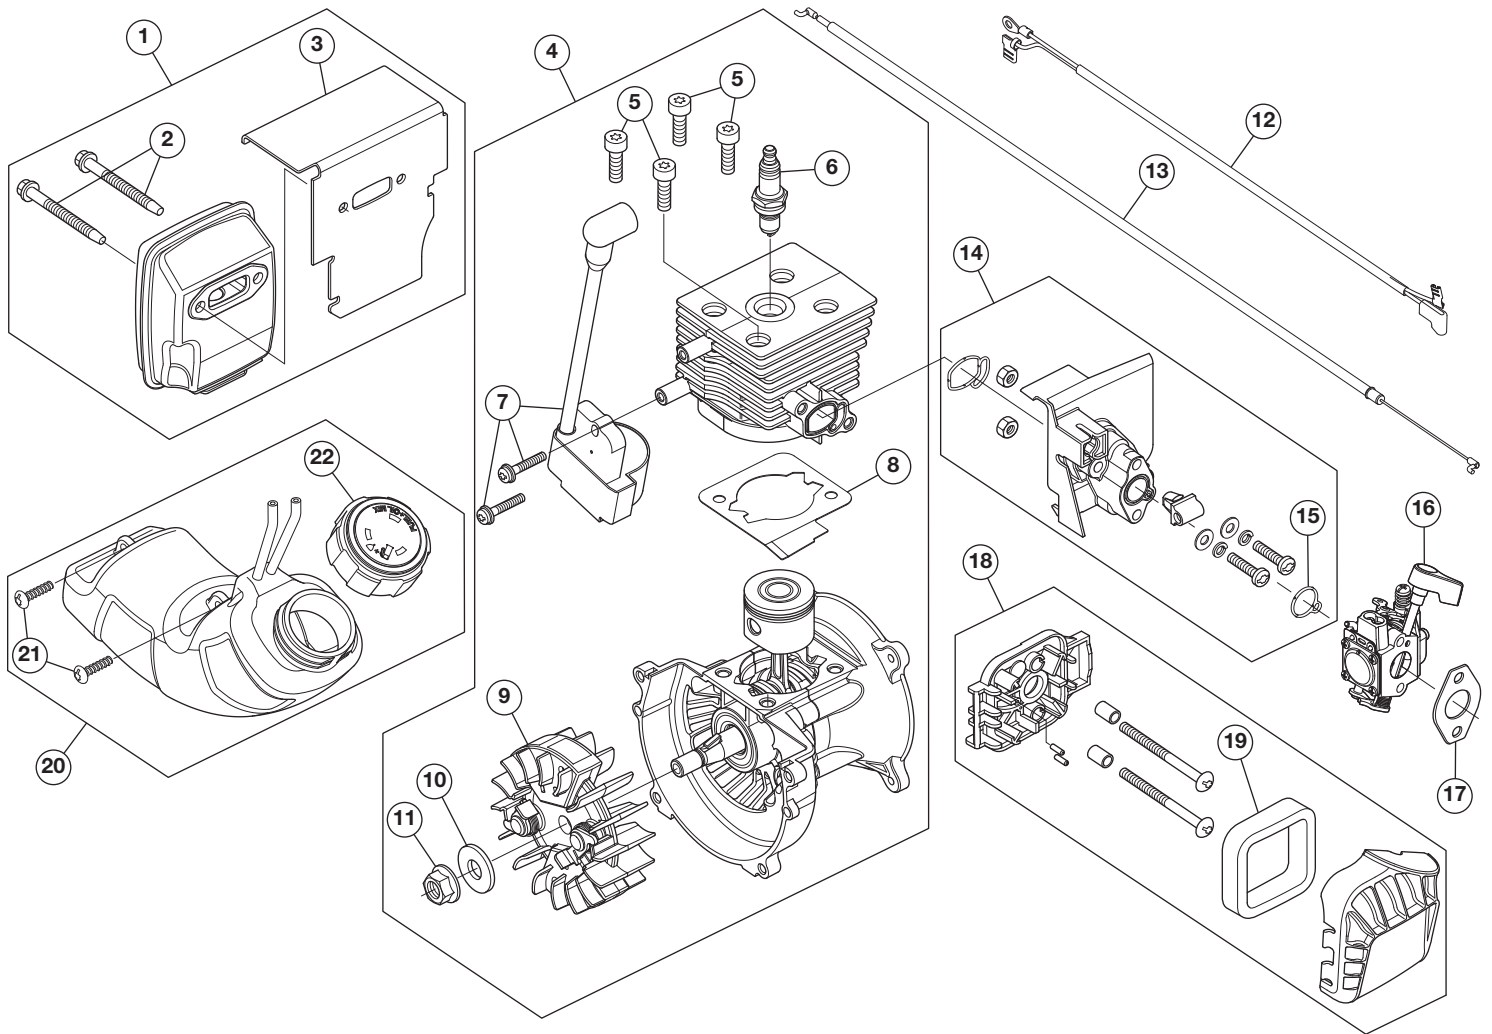


Item	Part No.	Description	Item	Part No.	Description
1	753-06027	Muffler Assembly (includes 2 & 3)	12	753-05949	Lead Wire
2	753-06294	Muffler Screws	13	753-06690	Throttle Cable
3	753-05946	Muffler Gasket	14	753-06189	Insulator Assembly (includes 15)
4	753-09004	Shortblock Assembly (includes 5 - 11)	15	753-06185	Insulator O-Ring
5	753-05703	Screw	16	753-08517	Carburetor Assembly (includes 17)
6	753-06847	Spark Plug	17	753-06253	Carburetor Gasket
7	753-08516	Module Assembly	18	753-08507	Aircleaner Assembly (includes 19)
8	753-06827	Cylinder Gasket	19	9653	Air Filter
9	753-06175	Flywheel Assembly	20	753-06720	Fuel Tank Assembly (includes 21 & 22)
10	736-04107	Washer	21	710-04194	Screw
11	753-05687	Nut	22	791-182529	Fuel Cap

# REPLACEMENT PARTS - MODEL TB27B EC

## ELECTRIC START CAPABLE 2-CYCLE BLOWER

PPN 41AS27BA766

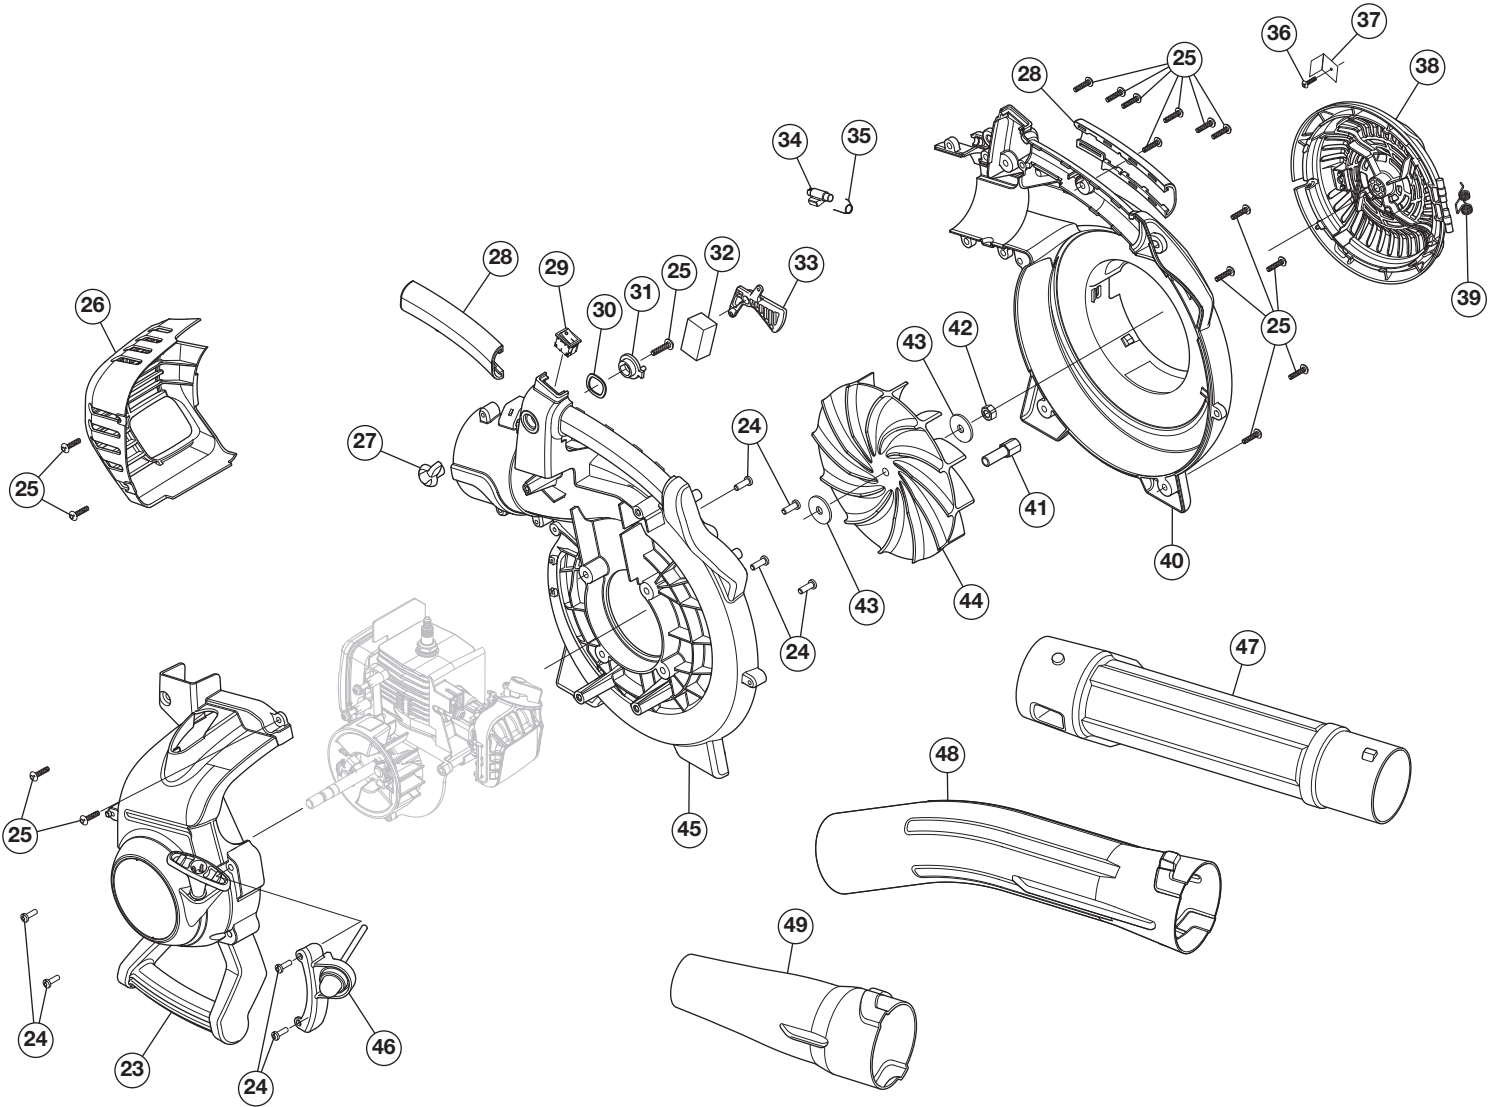

Item	Part No.	Description
23	753-08679	Engine Cover Assembly (includes 24 & 25)
24	791-181862	Screw
25	710-04194	Screw
26	753-06694	Muffer Cover Assembly (includes 25)
27	753-05932	Outer Trigger Lock
28	753-05919	Handle Grips
29	791-182405	Switch
30	753-05925	Wavey Washer
31	753-05924	Inner Trigger Lock
32	753-05254	Air Filter
33	753-05930	Throttle Trigger
34	753-05926	Latch Tube
35	753-05939	Latch Spring
36	1755	Screw

Item	Part No.	Description
37	753-06696	Door Lock
38	753-06678	Intake Cover
39	753-05918	Spring
40	753-06679	Impeller Housing
41	753-06700	Adapter
42	753-06701	Nut
43	753-05928	Washer
44	753-06807	Impeller
45	753-06693	Impeller Housing
46	753-09024	Remote Primer Bracket
47	753-05936	Upper Blower Tube
48	731-06576B	Curved Lower Tube
49	753-06000	Nozzle