 
 


Assembly Instructions

ITEM: L-GZ288PST-4D



 
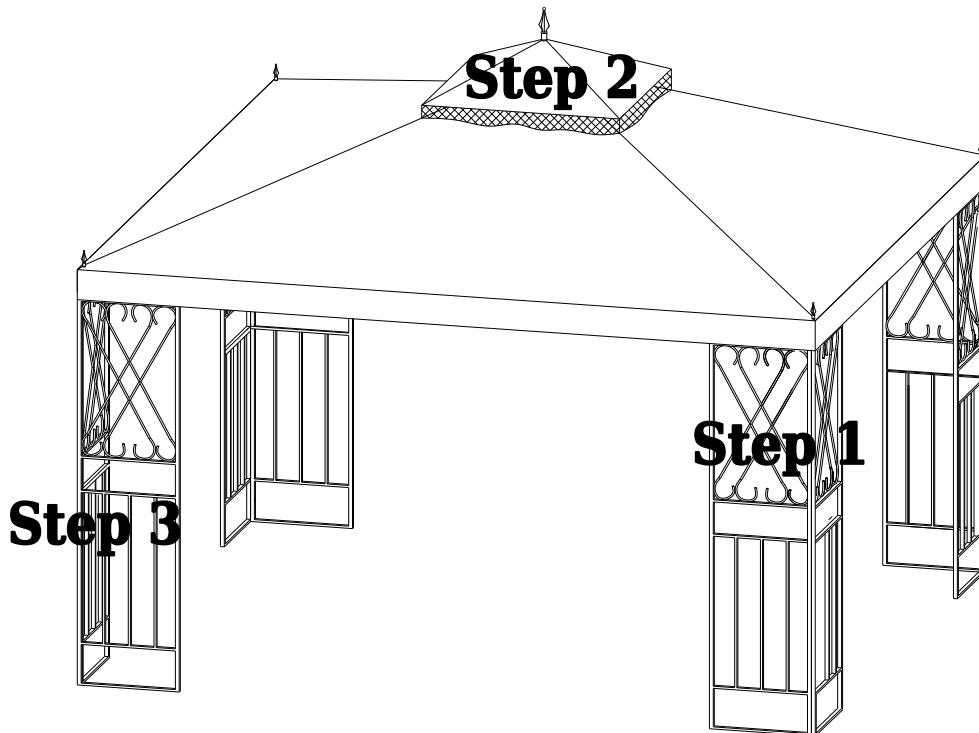 


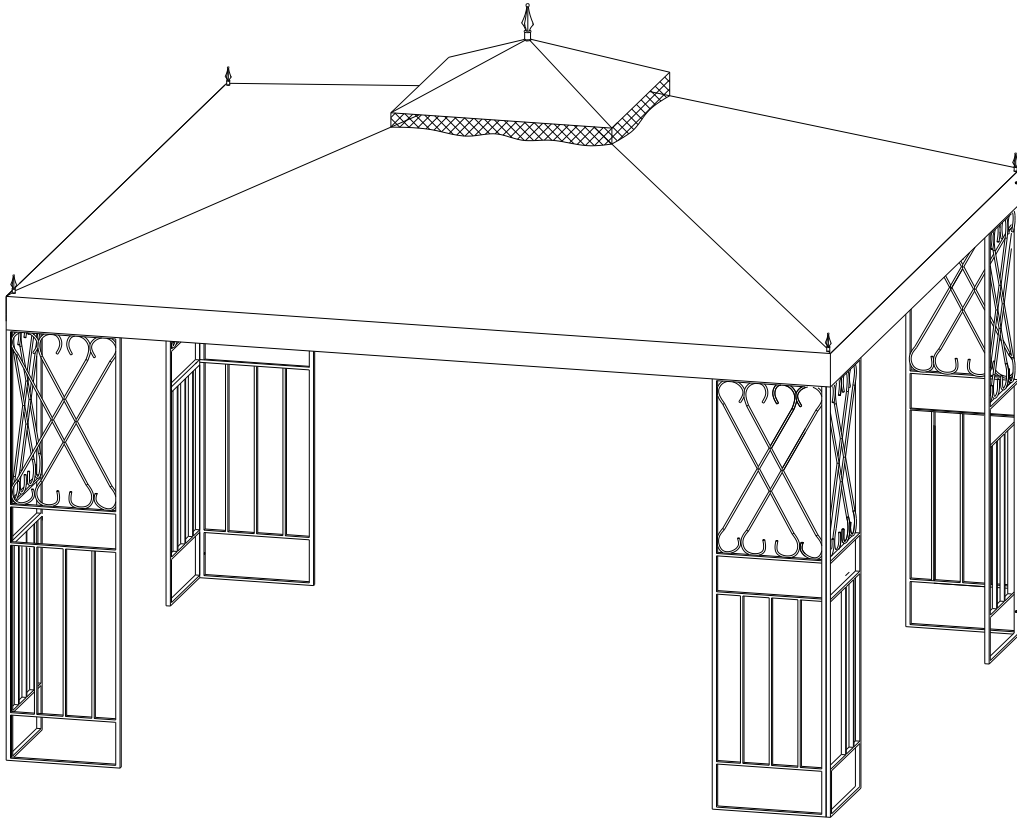


 
 


 
 
 


 
 
IMPORTANT:

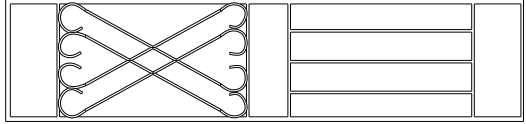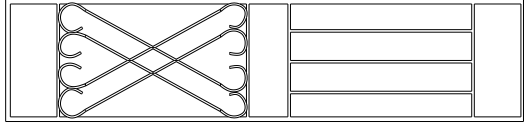Please read and follow all safety statements, warnings, assembly instructions, use & care directions, before attempting to assemble.

 
 

 
 
WARNINGS:

1. Assembly Instructions must be followed.
2. Pegs supplied must be used to hold this gazebo in place when upright.
3. Warranty does not cover damage due to extreme weather conditions.
4. Do not use candles, matches or open flames of any kind in or near a tent.
5. Do not cook inside the tent.
6. Build campfires downwind and several meters away from a tent and be sure to fully extinguish campfires before leaving a campsite or before retiring for the night.
7. Exercise extreme caution when using fuel-powered lanterns or heaters inside a tent and use battery-operated lanterns whenever possible.
8. Do not refuel lamps, heaters or stoves inside a tent.
9. Extinguish or turn off all lanterns before going to sleep.
10. Do not smoke in a tent.
11. Do not store flammable liquids inside a tent.
12. KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. This tent is made of flame-resistant fabric. It is not fireproof. The fabric will burn if left in continuous contact with a flame source.

Parts List

Panel	A	4	
Panel	B	4	
Short side support pole	C	2	
Long side support pole 1	D	2	
Long side support pole 2	E	2	
Pole	F	4	
Pole	G	2	
Pole	H	2	
Pole	I	4	
Center Connector	J	1	
Center Connector	K	1	
Top Hook	L	1	
Corner Connector 1	M	2	
Corner Connector 2	N	2	
Center Finial	O	1	
Corner Finial	P	4	
Big Canopy	Q	1	
Small Canopy	R	1	

Hardware Pack

AA	M6X15 Bolt	12PCS	
BB	M6X32 Bolt	32PCS	
CC	M6 Flat Washer	64PCS	
DD	M6 Wrench	2PCS	
HH	M6 Nut	20PCS	

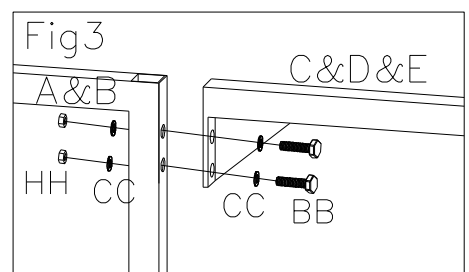 
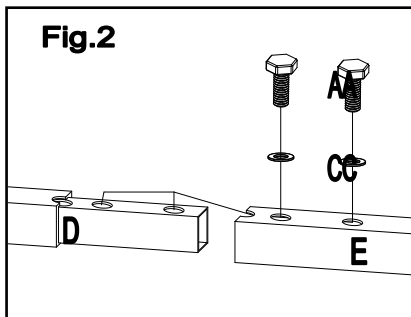 
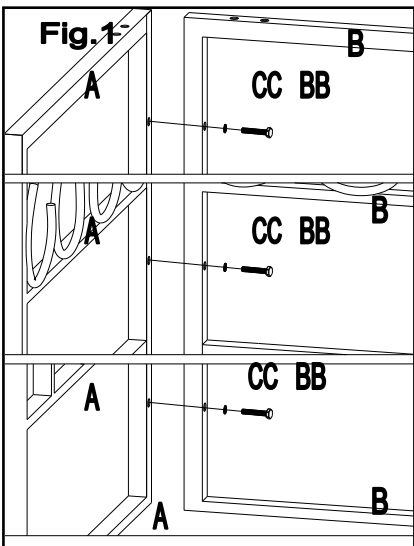 
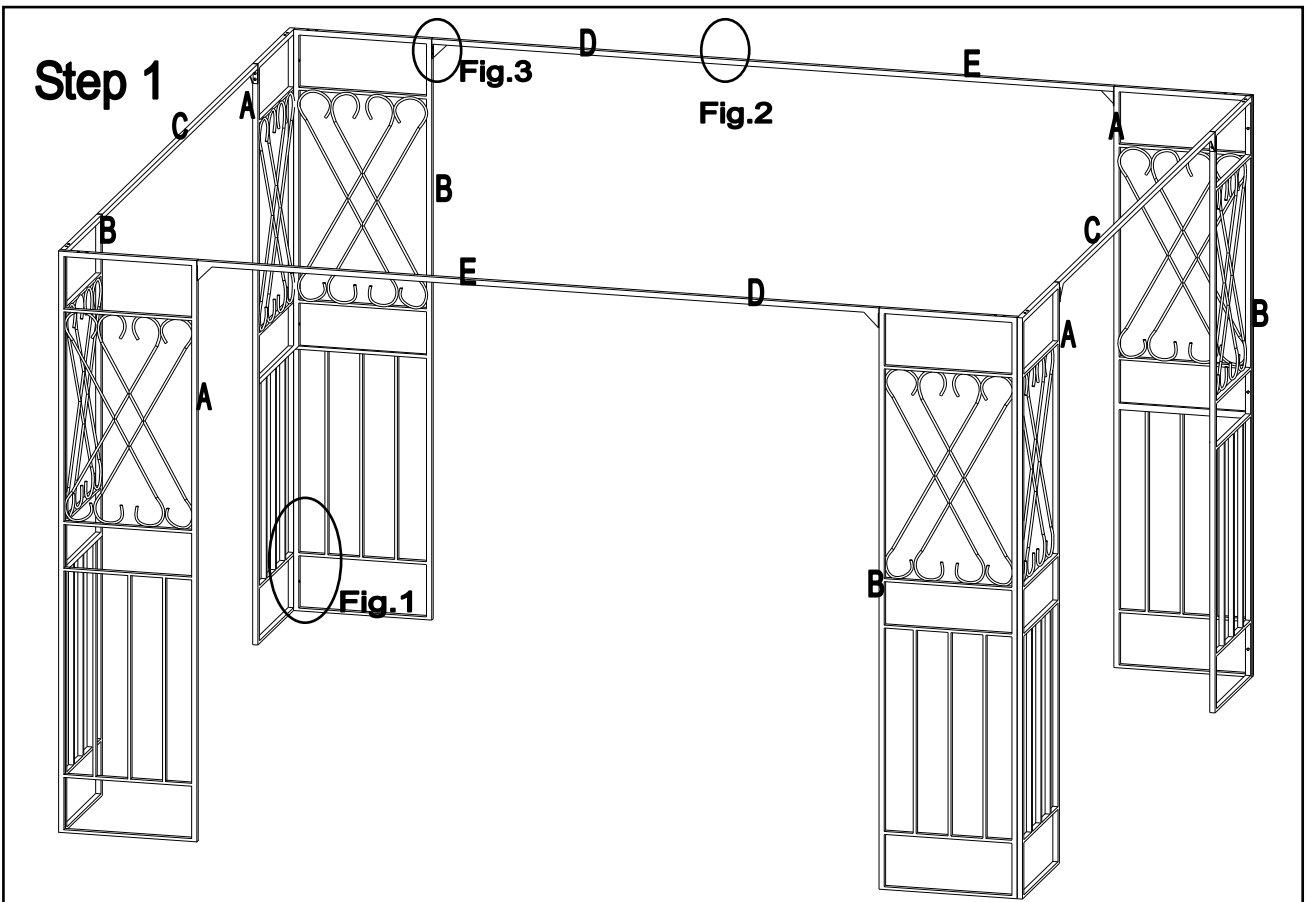 


Fig.1: Use Bolt (BB) and Flat Washer (CC) to fix Panel (B) and Panel (A).

Fig.2: Insert Long side support pole (D) into pole (E), attach pole (D) and (E) by using Bolt (AA) and Flat Washer (CC).

Fig.3: Attach Pole C&D&E to Panel (A) and Panel (B) by using Bolt (BB) and Flat Washer (CC).

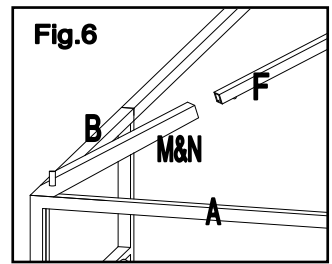 
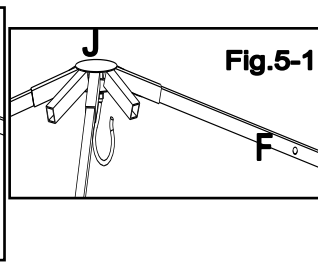 
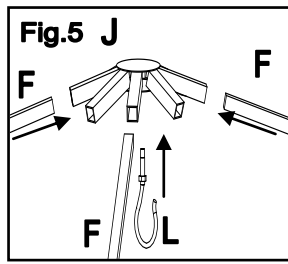 
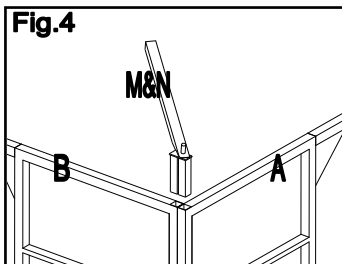 
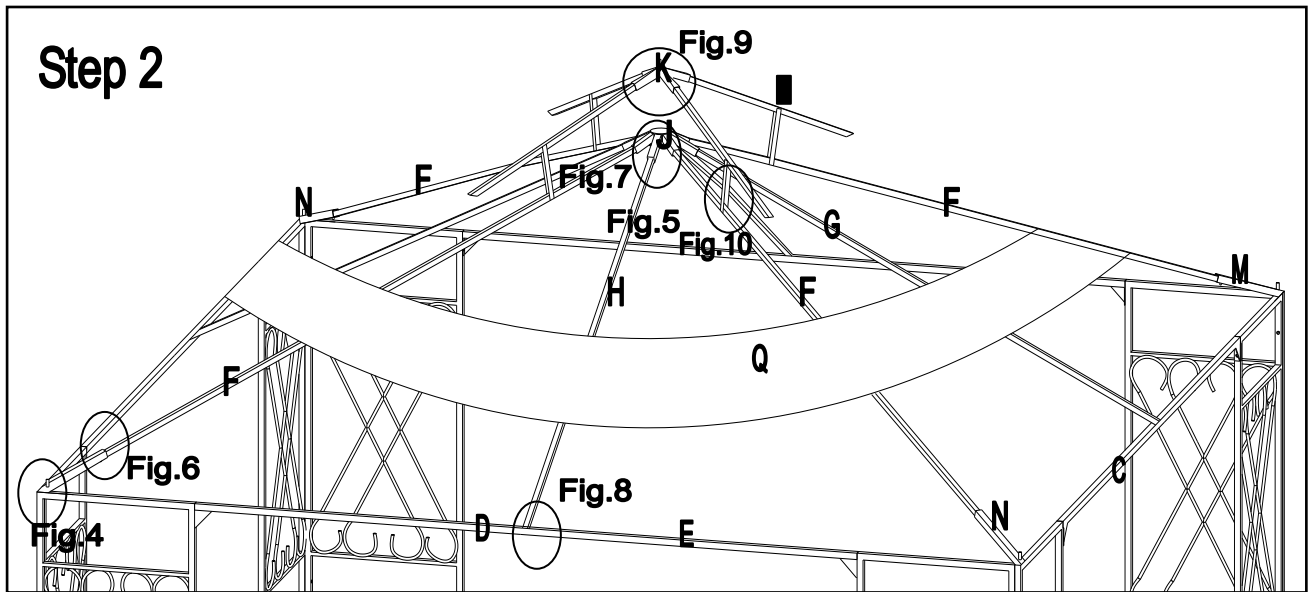 


Fig.4: Insert Corner connector (M&N) into panel (A) and (B).

Fig.5: Insert Pole (F) into Center Connector (J). (Notes: put the pole end with hole upwards as Fig 5-1)

Fig.6: Insert end of Pole (F) into Corner Connector (M&N).

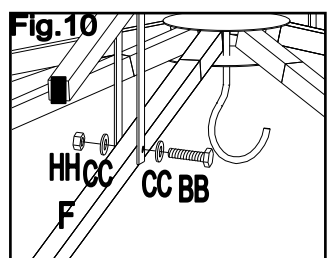 
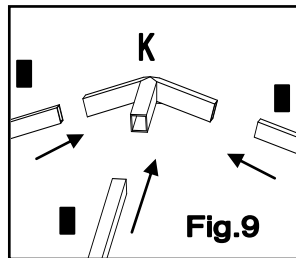 
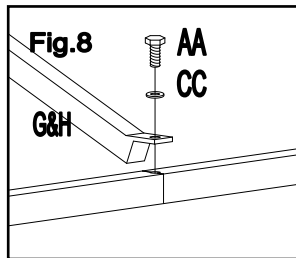 
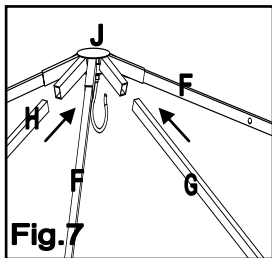 


Fig.7: Insert Pole (G&H) into Center connector (J).

Fig.8: Fix Pole (G) to Short side Support Pole (C) and Fix Pole (H) to Long side Support Poles (D&E). Put Big Canopy (Q) onto the Big Top, do not fully spread.

Fig.9: Insert Pole (I) into Center Connector (K).

Fig.10: Fix Pole (I) to Pole (F) by using Bolt (BB), Flat Washer (CC) and Nut (HH)

Hardware Pack

EE	∅ 6*180*7"Stake	16 PCS	
----	-----------------	--------	--

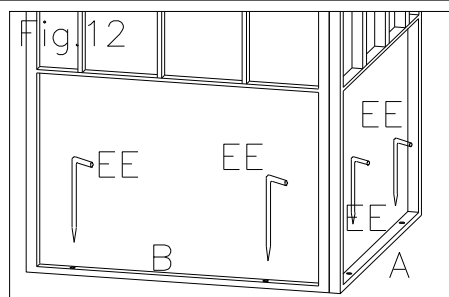 
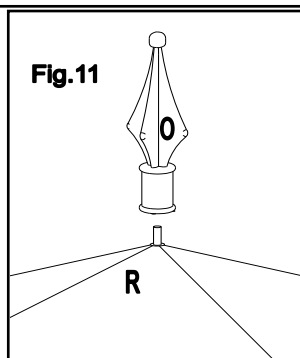 
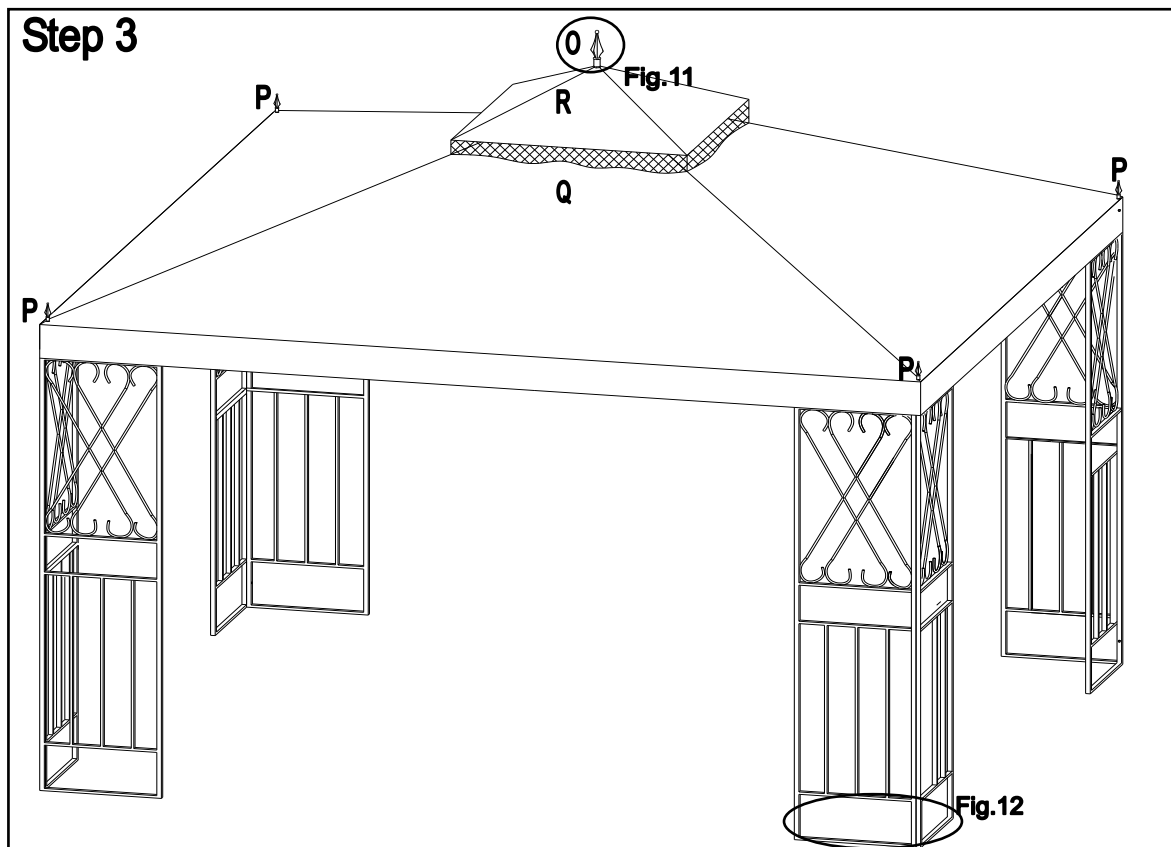 


Fig.11: Put Small Canopy (R) to small top, put Centre Finial (O) to small top connector. Put fully spread Big Canopy (Q) to the big top, screw Corner Finial (P) into four corner on the big top.

Fig.12: Fix the completely assembled gazebo by Stake (EE).

USE & CARE:

1. This gazebo is not a permanent structure and should be disassembled & stored away after use.
2. Do not repack your gazebo until completely dry.
3. This gazebo must be assembled by two adults or more.
4. This gazebo must not be left erect in windy conditions.
5. Loading limit of the hook is 33 lbs.
6. Loading limit of the ring is 25 lbs.
7. Steel components for garden accessories and furniture are treated with rust inhibiting paint that protects them from rust. However, due to the nature of steel, surface oxidation (rusting) will occur if this protective coating is scratched. This is a natural process. To minimize this condition, it is recommended that care be taken when assembling and handling the product in order to prevent the paint from being scratched. If scratching or damage occurs, it is recommended that the area be touched-up immediately with rust inhibiting paint, which is convenient to purchase from your local shop. Surface rust can be removed easily using a very light application of common cooking oil. If surface oxidation (rusting) occurs and no measures are taken to correct it, the oxidation may start dripping onto the deck or patio, which may cause damaging stains that may be difficult to remove.

Limited Warranty:

This limited warranty is extended to the original purchaser and applies to defects in materials and workmanship of your item provided the item is maintained with care and used only for personal, residential purposes.

The item is warranted to be free from defects in material or workmanship for a period of **one (1) year**. We don't reimburse for transportation or delivery costs, or compensate the individual or any outside party for assembling or disassembling the product.

Exclusions:

Items used for commercial, contract, or other non-residential purposes, or items damaged due to acts of nature, vandalism, misuse, or improper assembly are not covered. Corrosion or rusting of hardware is not covered. Proof of purchase (dated register receipt) is required for warranty claims. Warranty is to the original purchaser and is non-transferable. Any replacement of warranted items will be in the original style and color, or a similar style and color if the original is unavailable or has been discontinued. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply. This warranty gives you specific rights, and you may also have other rights, which vary from state to state.

Maintenance:

Our iron/steel components for garden accessories and patio items are coated with rust inhibiting paint that protects it from rusting. However, due to the nature of iron, surface oxidation (rusting) will occur once these protective coatings are scratched. This is a natural process and is not a defect! To minimize this condition, we recommend care when assembling & handling the product to prevent scratching the paint. Should any scratching or damage occur, we recommend immediate touch-up with rust inhibiting paint. Surface rust can also be easily removed with a very light application of common cooking oil. If surface oxidation (rusting) occurs and if no measure is taken to prevent this, the oxidation may start dripping on to deck or patio and cause damaging stains, which may be difficult to remove. This can be prevented if measure is taken to keep the product from oxidizing.

Important: For technical assistance on assembly or replacement parts. Please call Sunjoy Industries at 1(866) 578-6569 from 8:30 AM to 5:30 PM EST Monday to Friday or fax the replacement part form which is in the box to (740)-283-3549 or Email customer.care@sunjoydirect.com for assistance.