

USE AND CARE GUIDE

10'X 10' Square Pergola

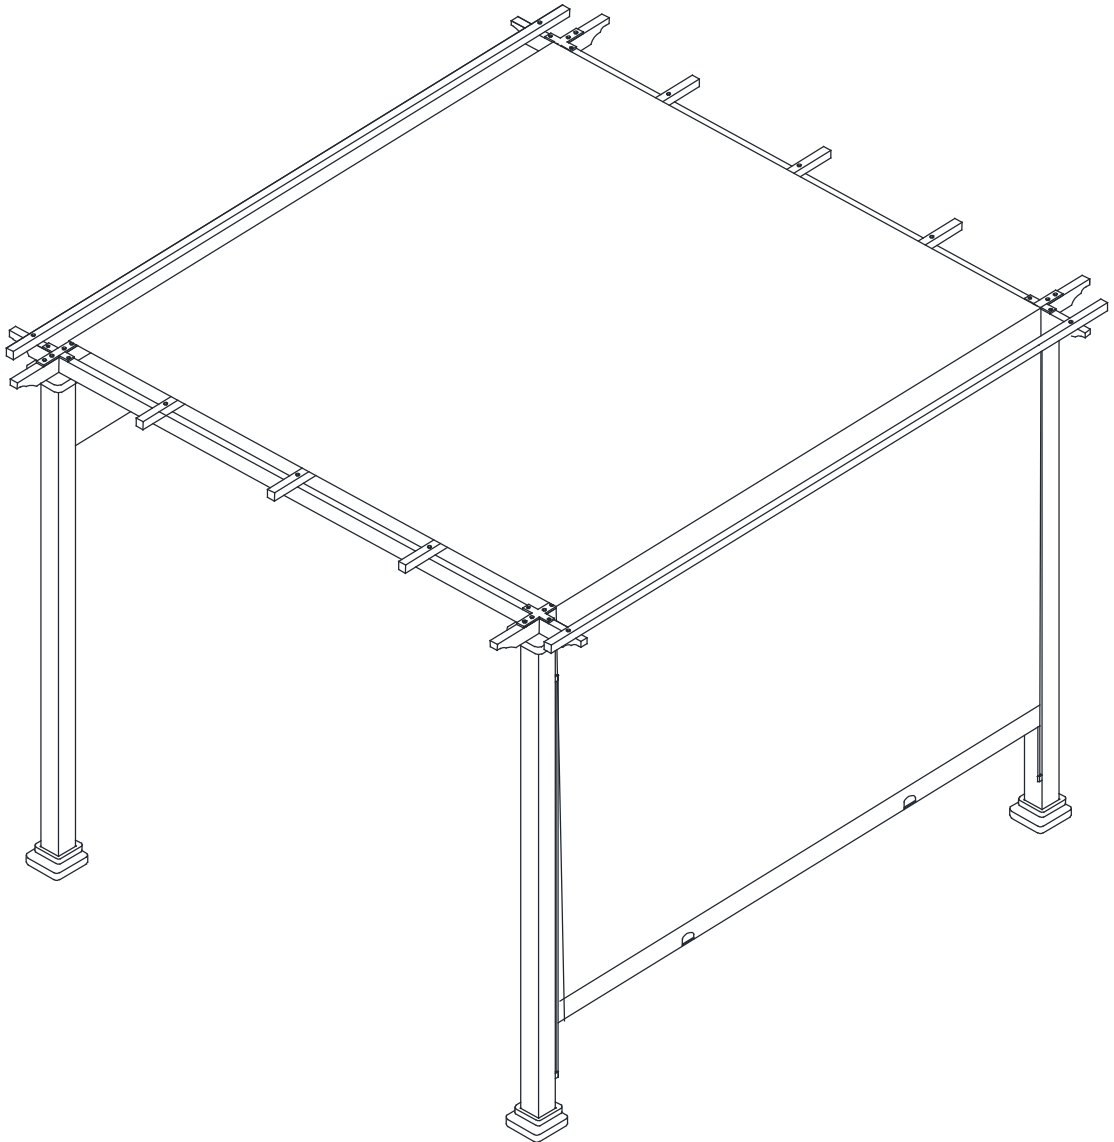



Table of Contents


Table of Contents.....	2	Tools required.....	3
Safety Information.....	2	Hardware Included.....	3
Warranty.....	2	Package Contents.....	4
What is Covered.....	2	Operation.....	6
What is Not Covered.....	2		
Warning.....	2		
Pre-installation.....	3		
Planning Installation.....	3		


Safety Information

1. SET UP YOUR PERGOLA PROPERLY

- This unit is heavy. Do not assemble this item alone. 4 people are recommended for safe assembly.
- Please read and understand this entire manual before attempting to assemble, operate, or install the product.
- Keep all children, pets and other obstructions away from assembly area.
- If any part is missing or damaged, do not attempt to assemble the product.
- In order to avoid damage to the gazebo and its components please use appropriate tools.
- Do not use the structure as support.
- Check all bolts on a regular basis to maintain the solidity of the structure.
- Keep instructions for future use.

 **DANGER:** This unit is heavy! Do not assemble this item alone.

 **WARNING:** Do not leave the gazebo where there is a risk of high wind, as possible damage will occur to the structure.

 **CAUTION:** Do not climb on top of the gazebo. Falling off the gazebo can result in serious injury, possibly even death.

2. EXAMINE YOUR PERGOLA

- Examine occasionally to ensure there are no loose parts. If loose parts are found, they should be retightened immediately.

Warranty

1 YEAR WARRANTY FOR FRAME, 1YEAR WARRANTY FOR FABRIC

WHAT IS COVERED

We provide warranty to the original purchase for 1 year for frame and 1 year for fabric from the date of purchase, and the fabric and frame will be replaced at no charge due to manufacturing defects.

WHAT IS NOT COVERED

We do not reimburse for transportation costs. This warranty does not cover the damage caused by commercial use, acts of nature, fire, freezing, and abusive use. Discoloration or fading of the finish or fabrics as a result of chemicals or spills is not covered.

Warning



WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.

This tent meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

Pre-installation

PLANNING INSTALLATION

To prevent damage, place all parts on a soft surface during assembly.

Tools required for assembly (not included): Allen wrench (included), hammer, screwdriver, stepladder, level and other safety items such as gloves, safety goggles and hardhat.



NOTE: Tools and protective articles below are not provided.

TOOLS REQUIRED



Hammer



Screwdriver



Safety goggles



Gloves



Hardhat



Stepladder






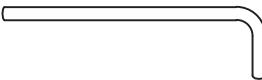
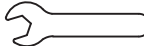



Level

HARDWARE INCLUDED










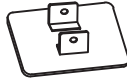
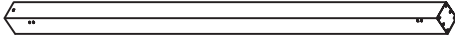
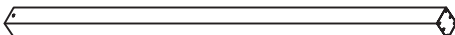
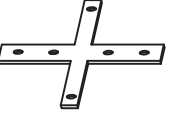






NOTE: Hardware not shown to actual size.

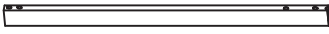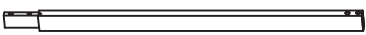AA	Bolt\Flat Washer M6*15		67
BB	Bolt\Flat Washer M6*40		10
CC	Bolt\Flat Washer M6*80		24
DD	Bolt\Flat Washer M6*15		8
EE	Bolt\Flat Washer M6*75		8
FF	Stake		16
GG	Wrench		1
HH	Allen Wrench		1





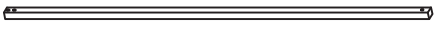

Pre-installation (continued)

PACKAGE CONTENTS


A1	Left Crossbar		2
A2	Right Crossbar		2
B1	Left Crossbar		2
B2	Right Crossbar		2
C	Crossbar decoration		4
D1	Roof Tube		5
D2	Roof Tube		5
E	Roof Cap		4
F	Base Cover		4
G	Base		4
H1	Post		2
H2	Post		2
I	Connector		4
J1	Outer Connector		4
J2	Outer Connector		5
K	Fabric tube		2
K1	Fabric tube 1		2

Pre-installation (continued)

PAC KAG E CONTENTS


L1	Rail tube connector 1		4
L2	Rail tube connector 2		2
L3	Rail tube connector 3		2
M	Fabric tube connector		4
N	Rail tube		4
O	Canopy		1

1

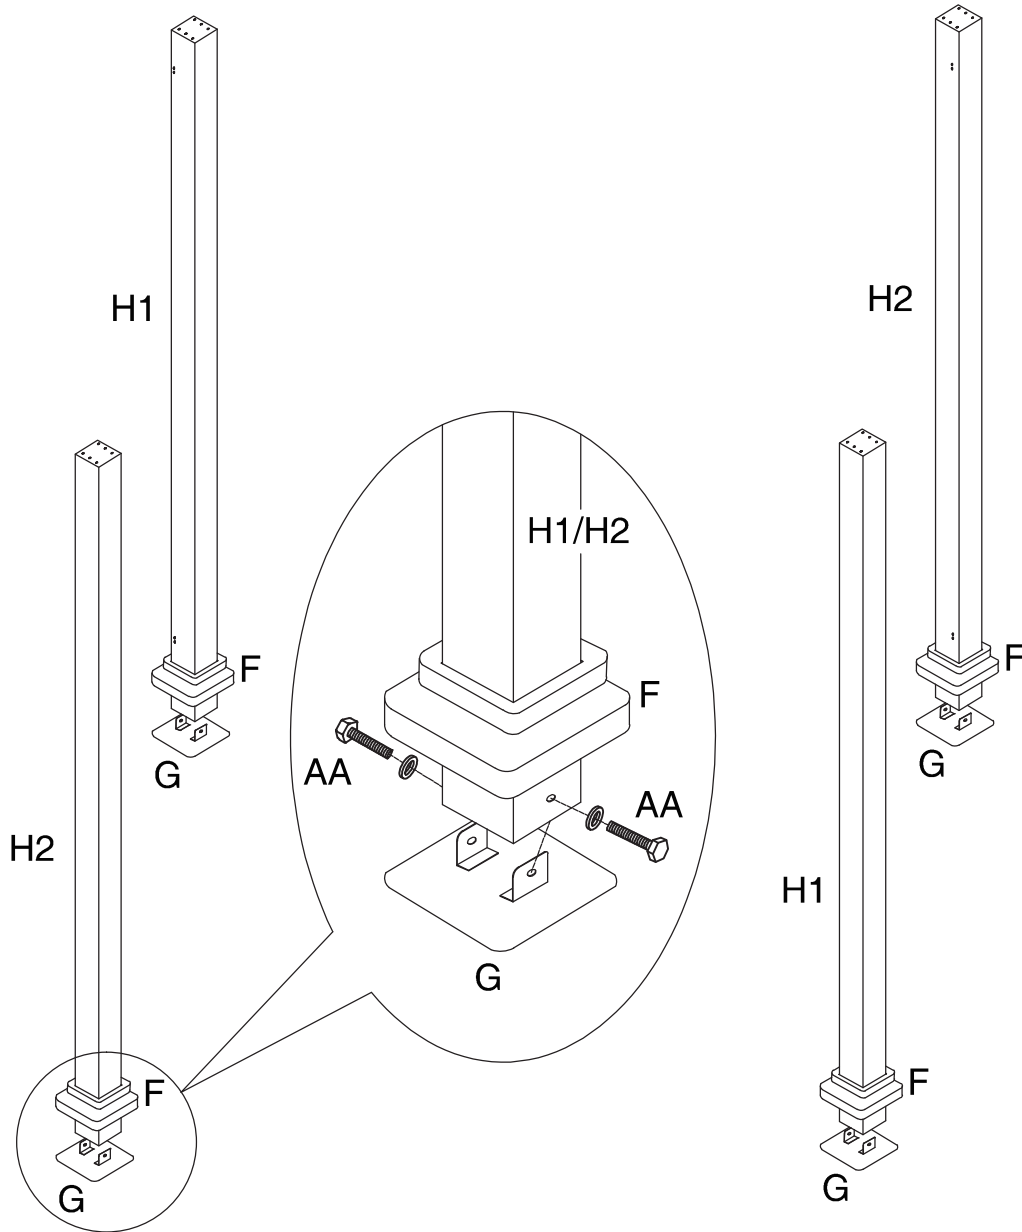


1. Insert the Base Cover (F) into the Post (H1/H2), and then connect the Base (G) to the Post (H1/H2) by Bolt (AA). Connect the other Posts in the same way. When all the Posts are ready, place them in position as shown.

2

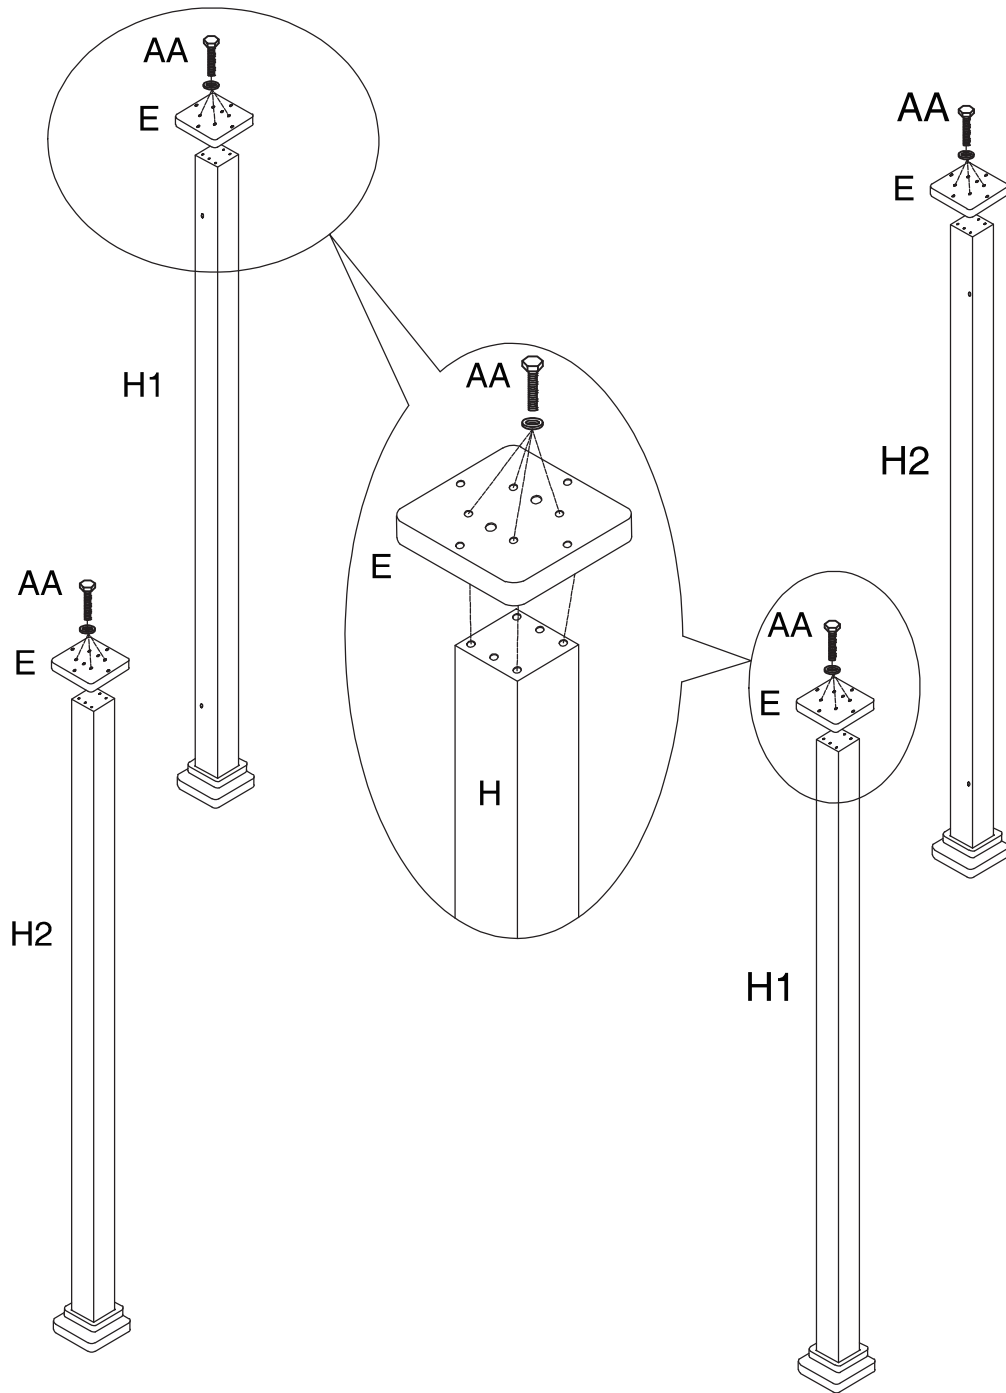


2.Connect the Roof Cap (E) to the Post (H1/H2) by Bolt (AA) .

Operation (continued)

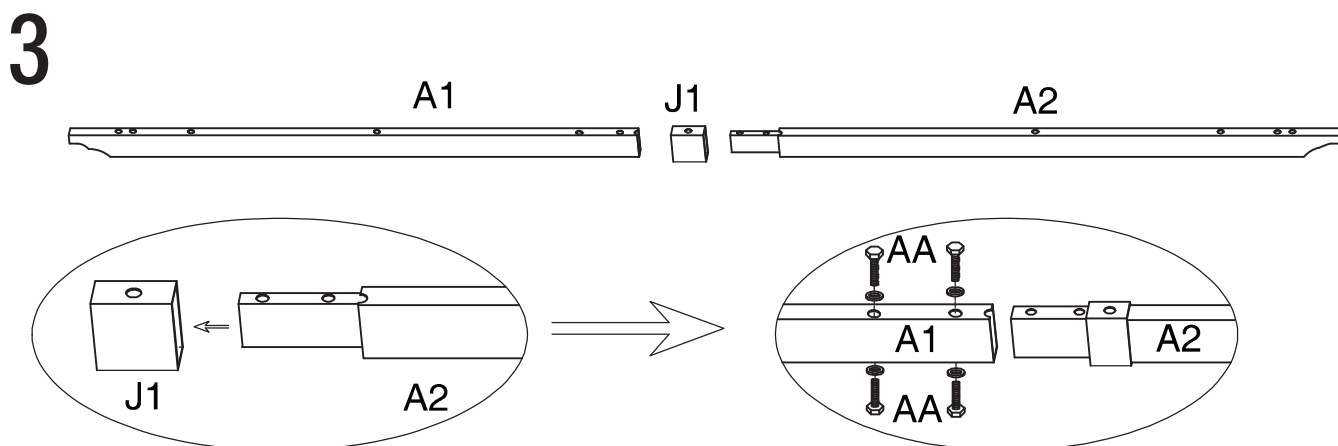


3.Insert the Right Crossbar (A2) into the Outer Connector (J1).

4.Attach the Left Crossbar (A1) to the the Right Crossbar (A2) with the Bolt (AA).

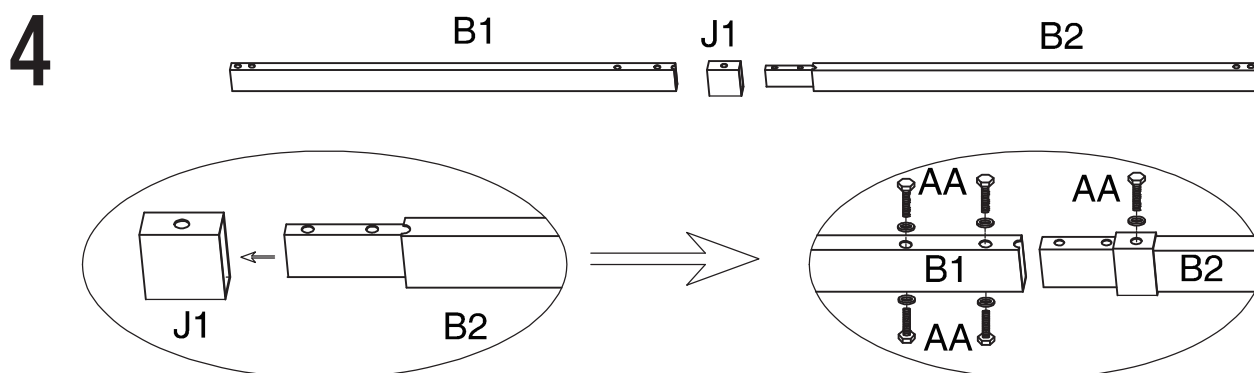

5.Insert the Right Crossbar (B2) into the Outer Connector (J1).


6.Attach the Left Crossbar (B1) to the the Right Crossbar (B2) with the Bolt (AA).

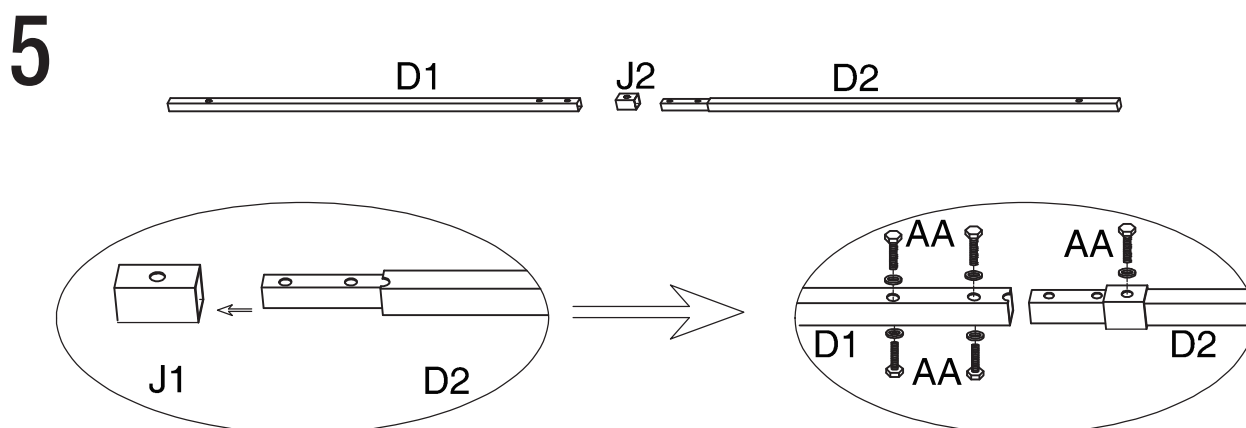

7.Insert the Roof Tube (D2) into the Outer Connector (J2).


8.Attach the Roof Tube (D1) to the Roof Tube (D2) with the Bolt (AA).

6

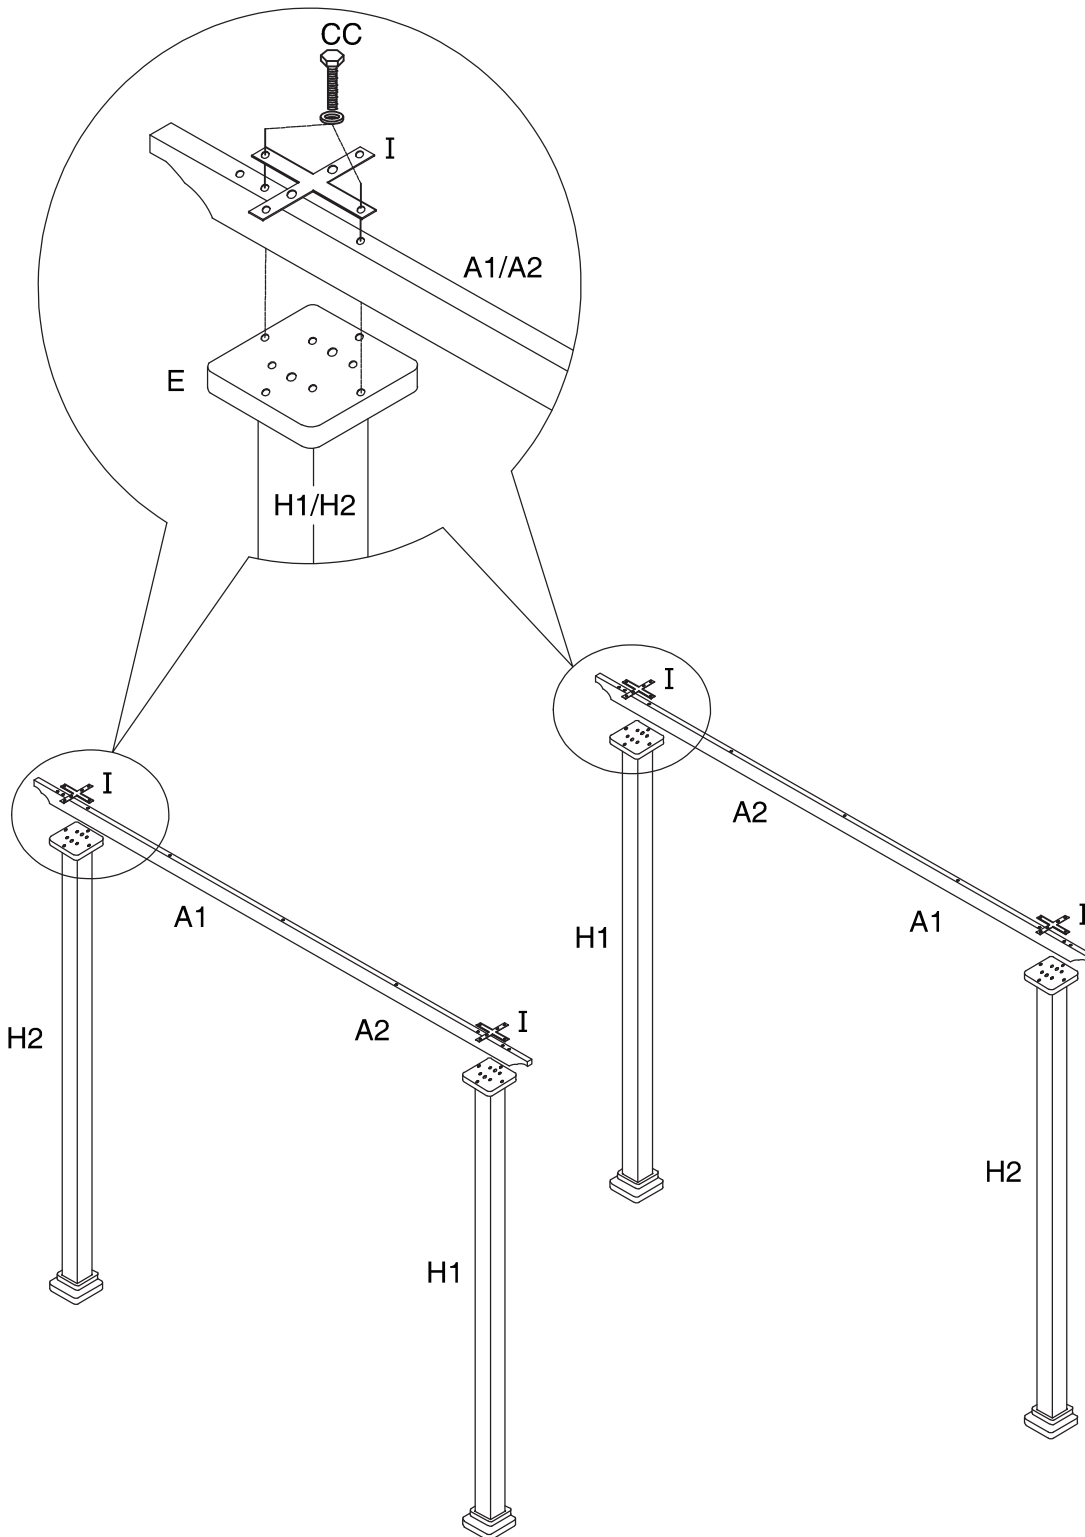


9. Attach the Connector (I), the Left Crossbar (A1) and the Right Crossbar (A2) to the Post (H1/H2) with the Bolt (CC). (Note: Do not over-tighten)

7

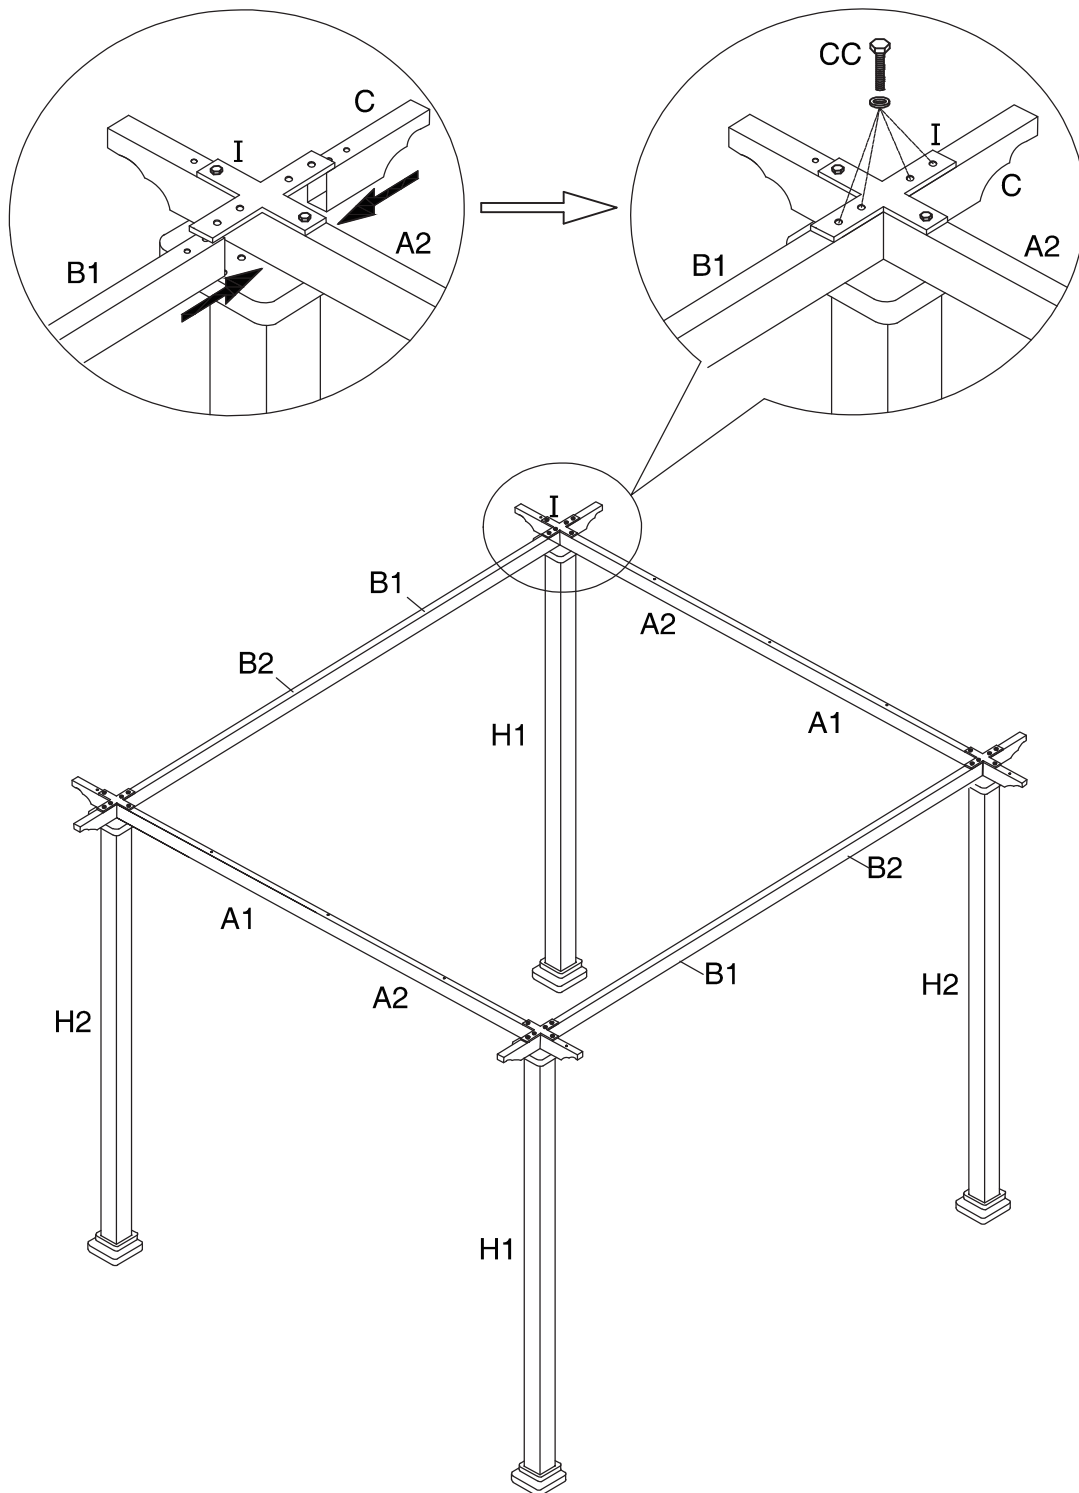

10. Place the assembled Crossbar (A1/A2) over the Post (H1/H2), then secure Connector (I), Crossbar (B1/B2) and Crossbar decoration (C) through roof cap (E) onto post (H1/H2) with the Bolt (CC) as figure shown. (**Tighten all bolts**)


8

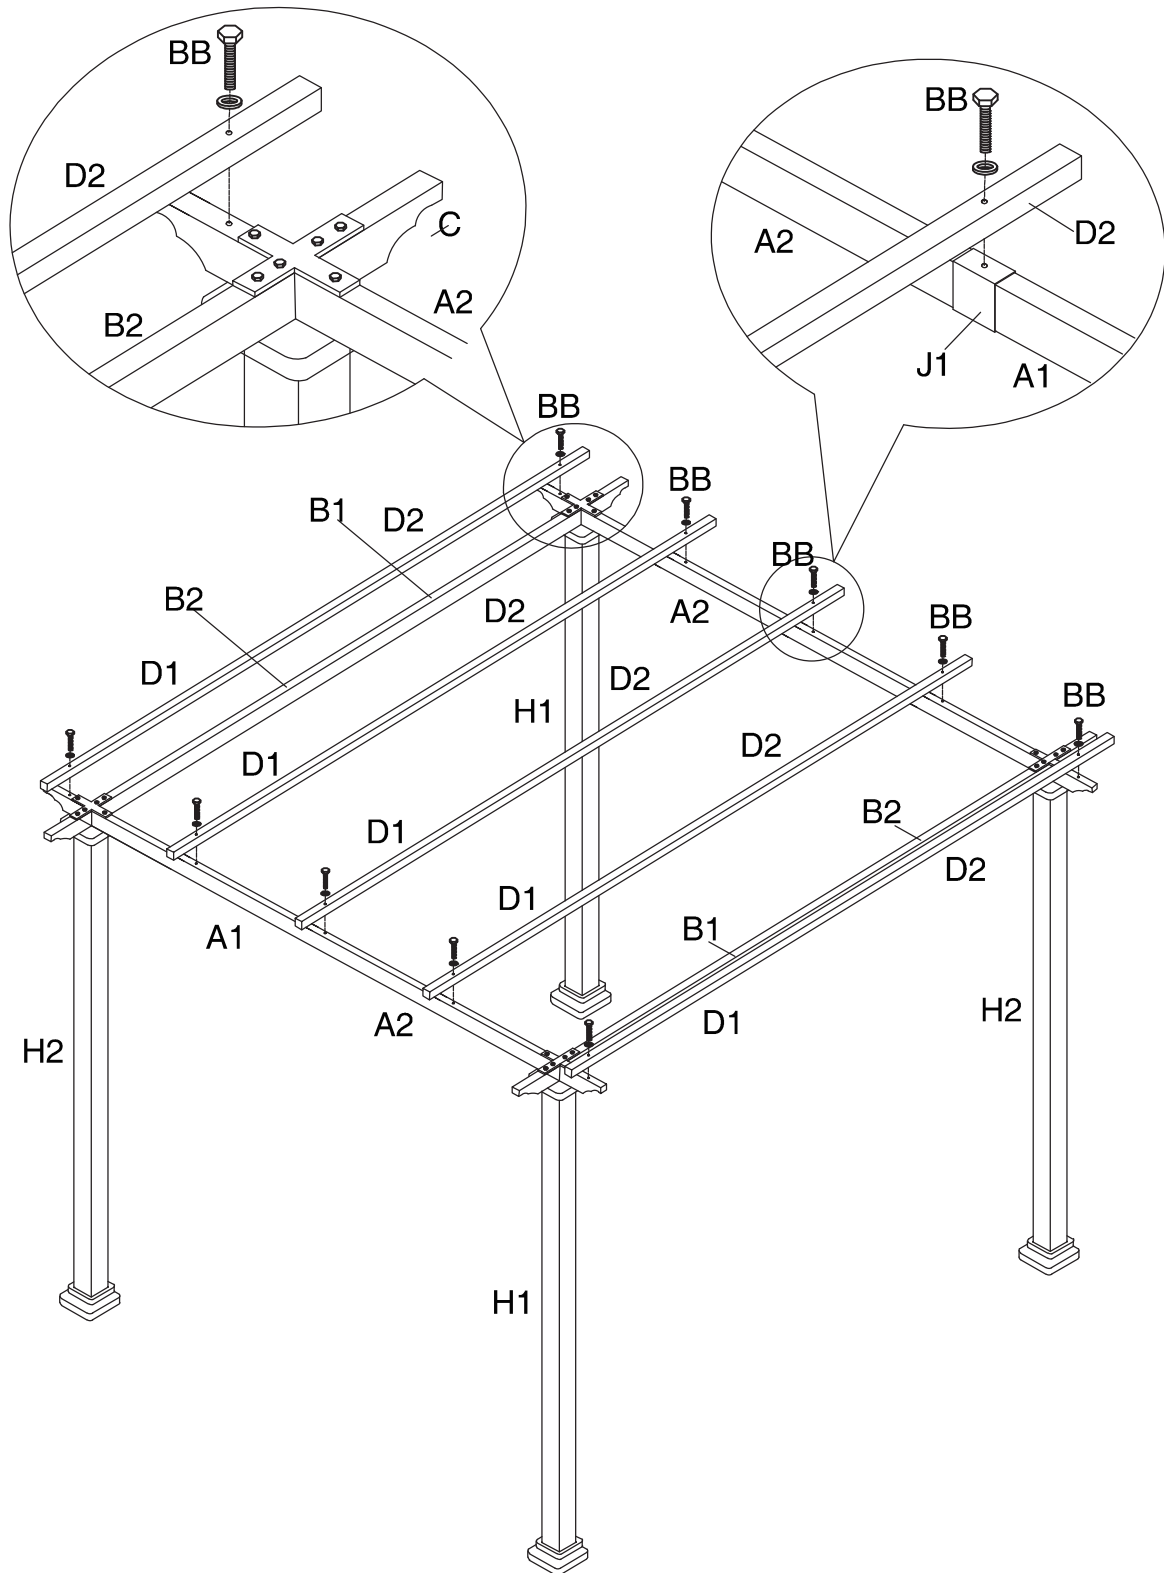

11. Attach the Roof Tube (D1/D2) to the Crossbar (A1/A2) with the Bolt (BB) as figure shown.


Operation (continued)

9

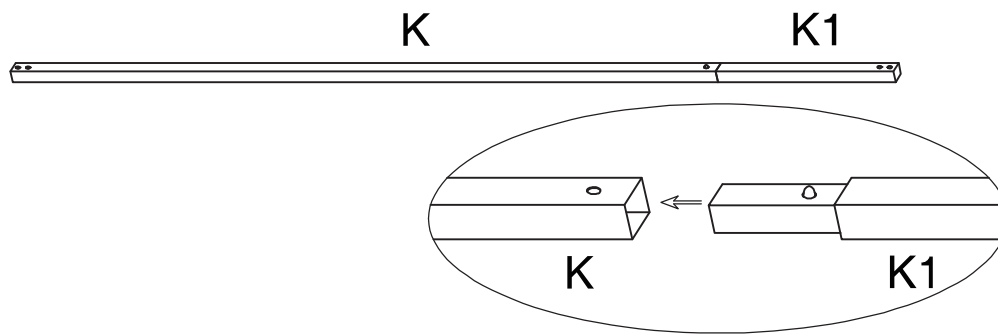


12. Insert the Fabric tube 1 (K1) into the Fabric tube (K).

10

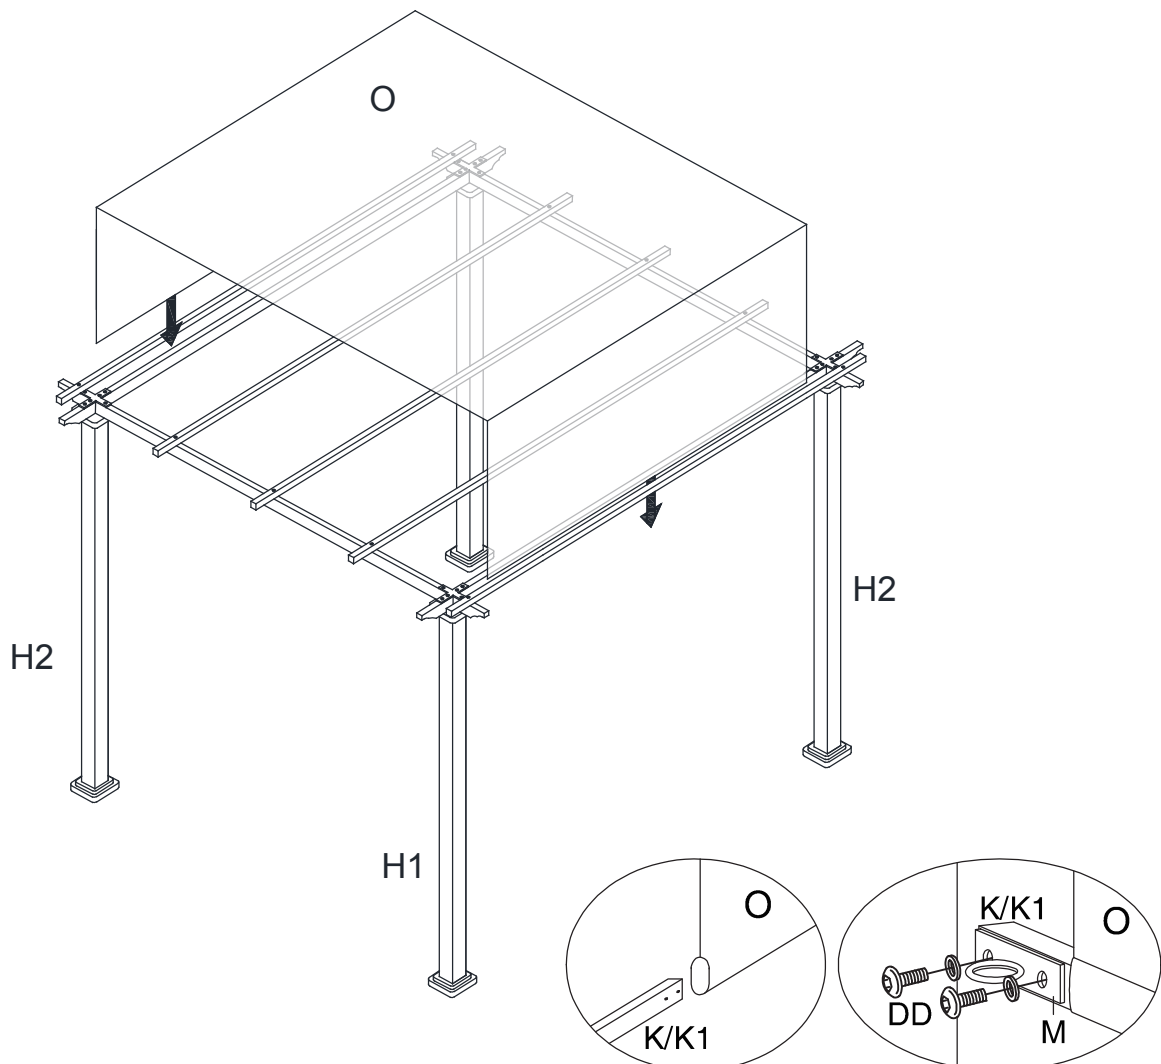

13. Put the Canopy (O) onto the top as showed in the picture. Insert the
14. assembled Fabric tube (K/K1) into the hole of the Canopy (O).
15. Attach the Fabric Tube connector (M) to the Fabric tube (K/K1) by Bolt (DD).


11

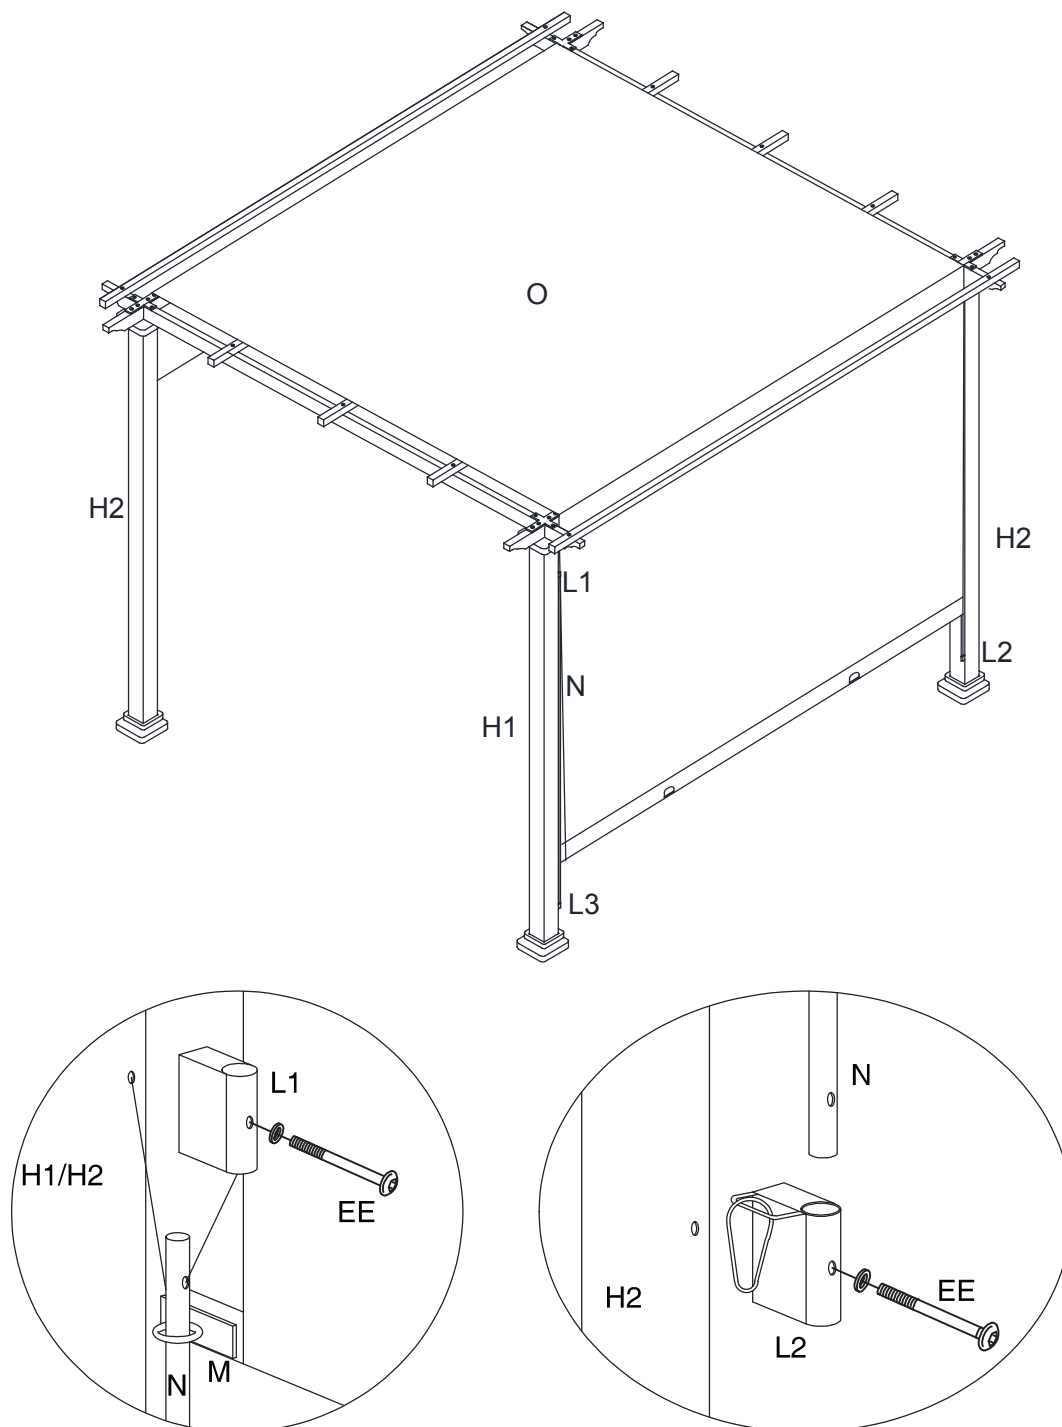

16. Insert the Rail Tube (N) into the ring of Fabric Tube connector (M). Then insert the Rail Tube (N) into the hole of Rail tube connector 1 (L1) and attach it to the upper end of Post (H1/H2) by Bolt (EE).

17. Insert the Rail Tube (N) into the hole of Rail tube connector 2 (L2), attach it to the lower end of Post (H2) by Bolt (EE). Use the same way to assemble Rail tube connector 3 (L3).

Operation (continued)

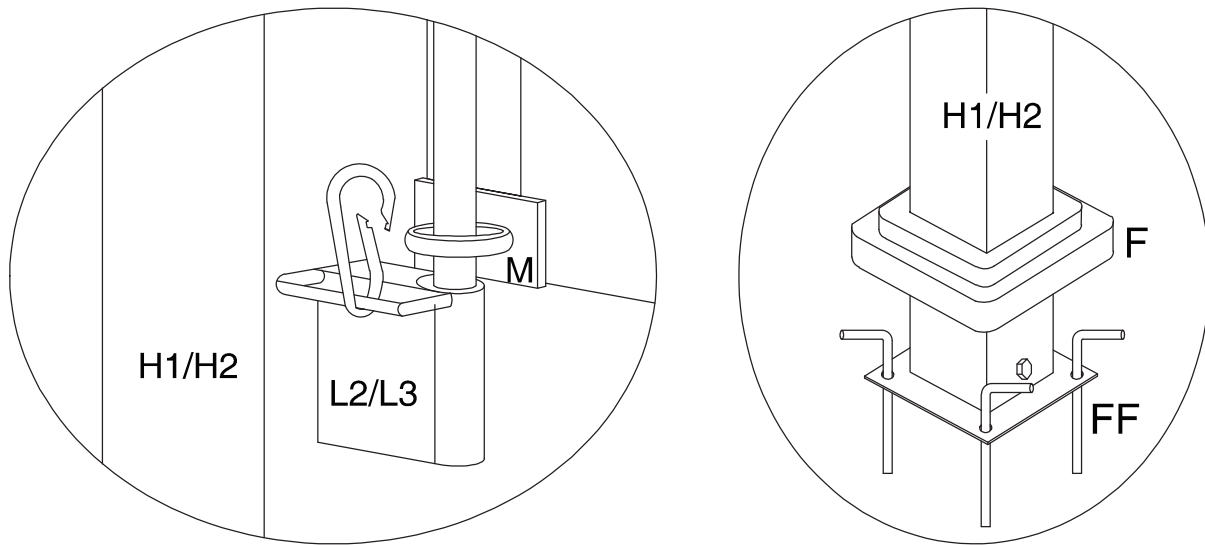

18. When pulling the Fabric tube (K/K1) down, you could insert the metal buckle of Rail tube connector (L2,L3) into the hole of Fabric Tube connector (M) to prevent the Canopy (O) from being blown away.

19. Insert stakes (II) through the holes in the post bottom plates (B) and into the ground to secure the gazebo.

Note: This gazebo can be secured to the deck (wood or concrete), but customers need to prepare the appropriate hardware (expansion bolts or sheet metal screws) for fixing.