

E-Commerce by Enitial Lab

ASSEMBLY INSTRUCTIONS

MODEL#

HFW-18810C1

Questions?

GIVE US A CALL: 1-888-980-5122 MON - FRI 8:30AM - 5:30PM (PST)

TOOLS REQUIRED



(Not Included)



Philips Screwdriver

(Not Included)




2 - Persons Recommended

ASSEMBLY RATING



EASY— → DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.

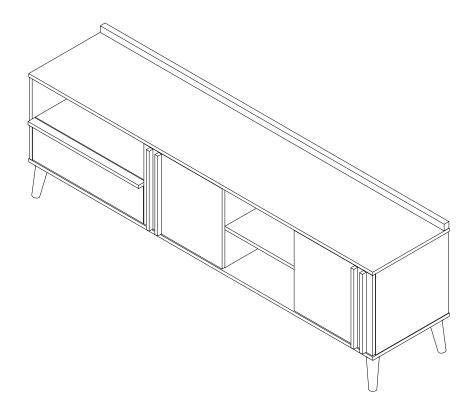

VERSION # 19-01-15





Thank you for your purchase!

We hope you enjoy this new addition to your home for many years to come.

Our commitment to providing quality products does not simply end when you purchase our product. We fully stand behind our products from start to finish. Our customer service department is available Monday – Friday 8:30 AM – 5:30 PM Pacific and can help with assembly questions as well as, if necessary, replacing damaged or missing parts. To help expedite our service, please have these assembly instructions readily available, along with your order receipt.



Consumer Hotline Toll-Free 1-888-980-5122



WEBSITE www.foagroup.com



Monday to Friday 8:30AM- 5:30PM (PST)



E-MAIL cs.ec@foagroup.com









foagroup



FurnitureOfAmerica



Are you missing anything?	Check out our Quick Tips!
Double-check all parts, hardware and accessories listed on Page 6 are accounted for.	We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!
Should we send any replacements?	Prep Time!
Are there any irregularities or flaws in the parts? We can send replacements!	Please review the assembly instructions and all diagrams prior to assembling. Arrange parts as recommended on Page 7 and group identical hardware together to make assembling easier.

PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.





Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.





Suitable Location

Assembling near the area of the intended location is highly recommended.





Sufficient Space

Make sure you have enough space to move around during the assembly.





Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches.





Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

ASSEMBLY AND CARE ADVICE




FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.



Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.

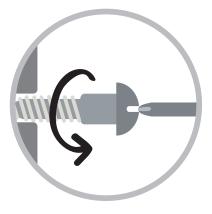

Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



Save the instructions and store any supplied tools for later maintenance.



After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

CAM LOCK FASTENER ASSEMBLY INSTRUCTIONS

Note:


Every cam lock bolt must have a cam lock connector in order to fasten the parts together.




cam loc




cam lock screwdriver

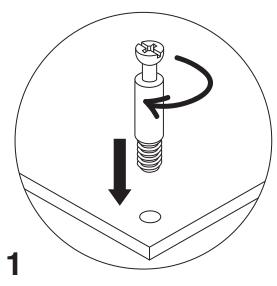


Screw the cam bolt into panel.

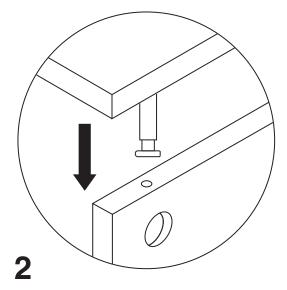

Insert the cam bolt into the bolt hole of joint panel.

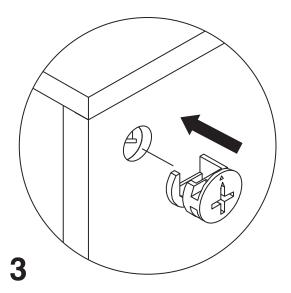

Align the cam lock with its side opening (or arrow) pointing to cam bolt.

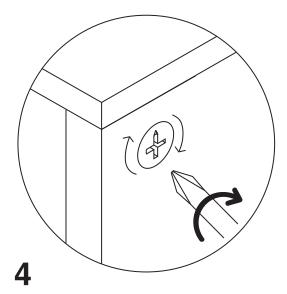


Turn the cam lock clockwise gently until it will not turn any more.

TV STAND HFW-18810C1



P 1PC

- · Please keep instructions for future reference.
- · Check the quantity and irregularity of parts and hardware before you start.

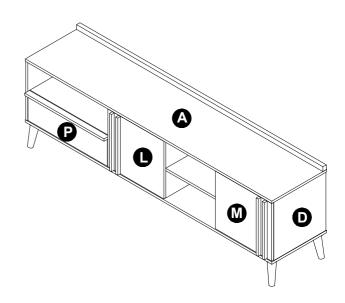

1PC

ACCESSORIES

 
(A2) 4SETS

 
(A4) 2SETS

(pum) (pum) Jum Jum Jum

① 1PC

PARTS










S 1PC

A1 1PC

(A3) 5PCS

 R 1PC




HARDWARE

Q 1PC








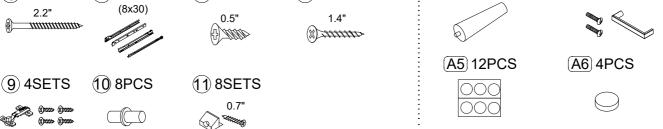

GET READY

Please group boards as below.

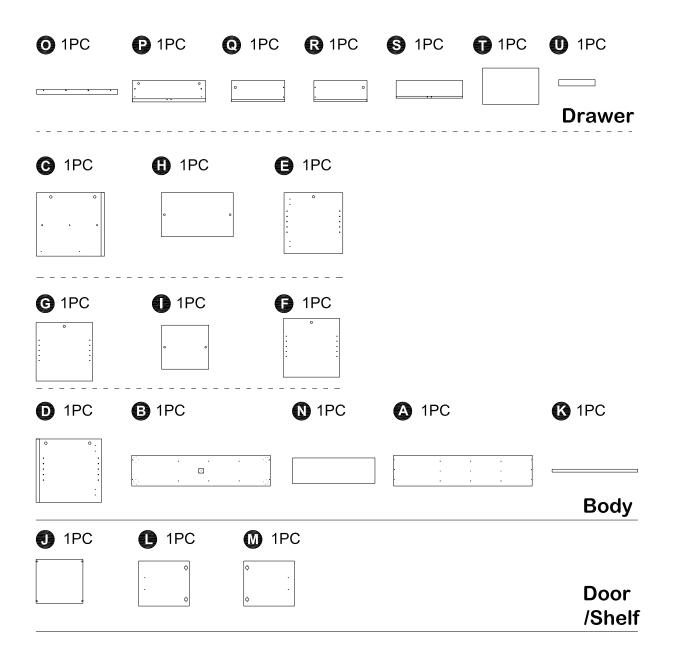

Identifying Drawer Rails

Each drawer requires a set of 4 rails. Please review the below instructions to help identify the different rails. Left and right determined from the viewpoint of opening the drawer.

Right/Left Panel Rail:

(C-shaped frame)

Align the drawer rails horizontally, with the oval and round holes resting flat against a surface. Rotate as needed so the rollers are located on your right-hand side. If the roller is closer to the bottom corner, this is the RIGHT panel rail. If the roller is closer to the top corner, this is the LEFT panel rail.

Right Panel Rail					○ 0
0	00	0	00	0	<u></u>
0	00	0	00	0	<u>-</u>
Left Panel Rail					<u> </u>

Right Drawer Rail

000	0 0	000
000	0 0	000


Left Drawer Rail


Right/Left Drawer Rail:


(S-shaped frame)

Align the panel rails horizontally. Rotate as needed so the rollers are located on your right-hand side. If the roller faces away from you, this is the RIGHT drawer rail. If the roller faces towards you, this is the LEFT drawer rail.

When grouped together, the right drawer rail and right panel rail will interlock with rollers at opposite ends. Likewise for the left drawer and left panel rails.

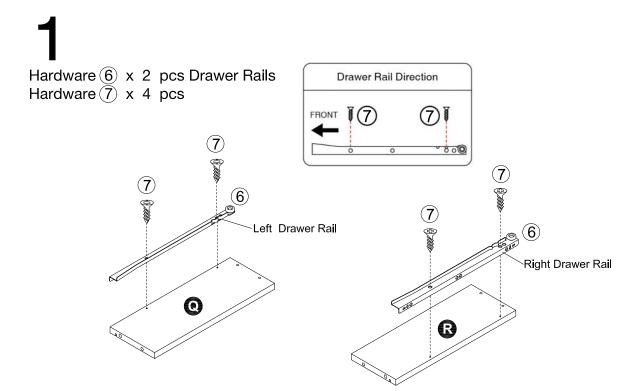


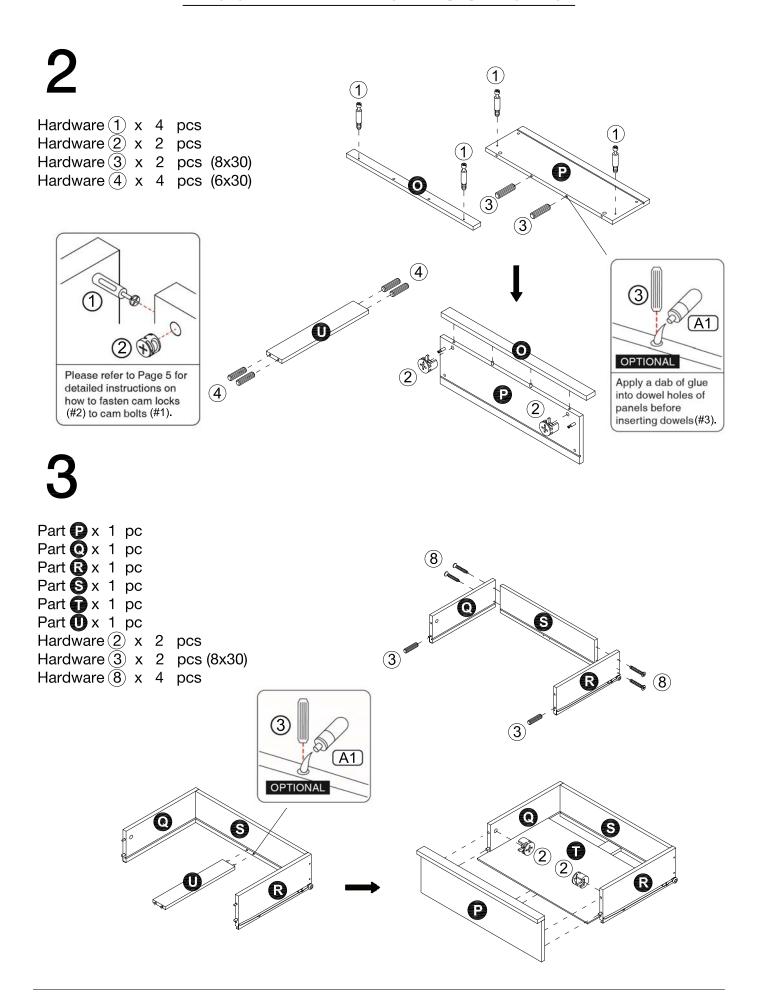


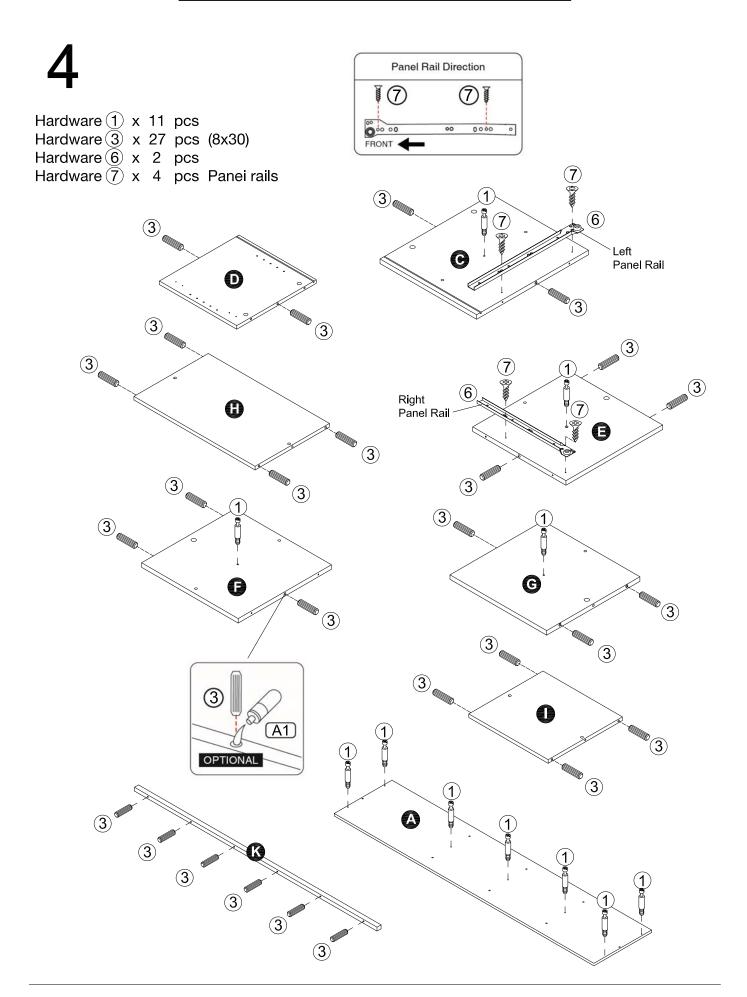

5


Part ② x 1 pcs
Part ③ x 1 pcs
Part ① x 1 pcs
Hardware ② x 2 pcs

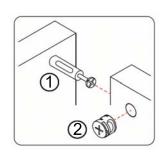


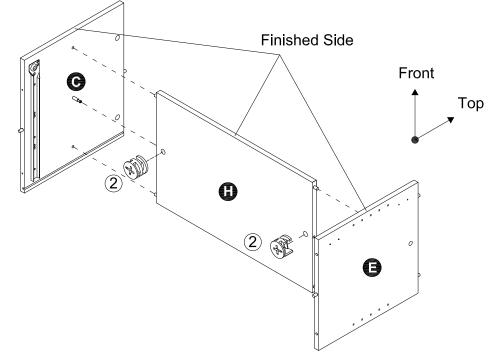


6

Part **G** x 1 pcs Part **G** x 1 pcs Part **G** x 1 pcs Hardware ② x 2 pcs

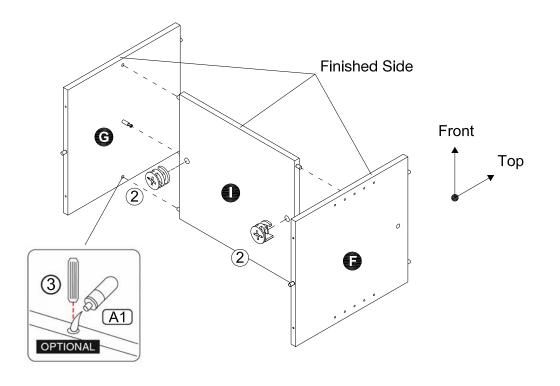

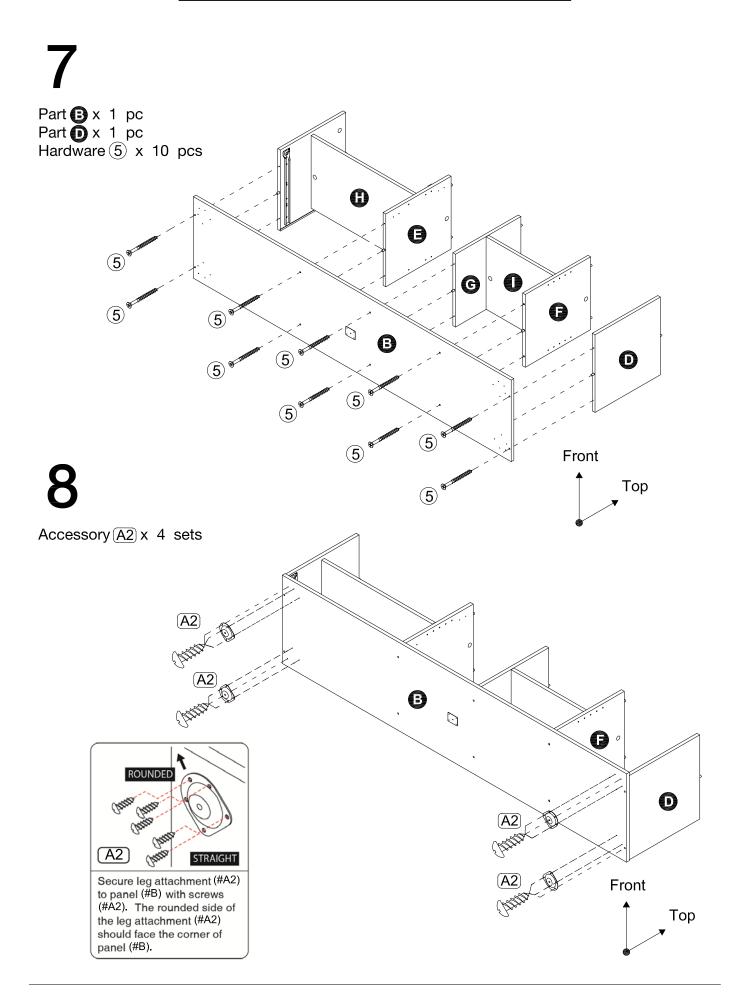


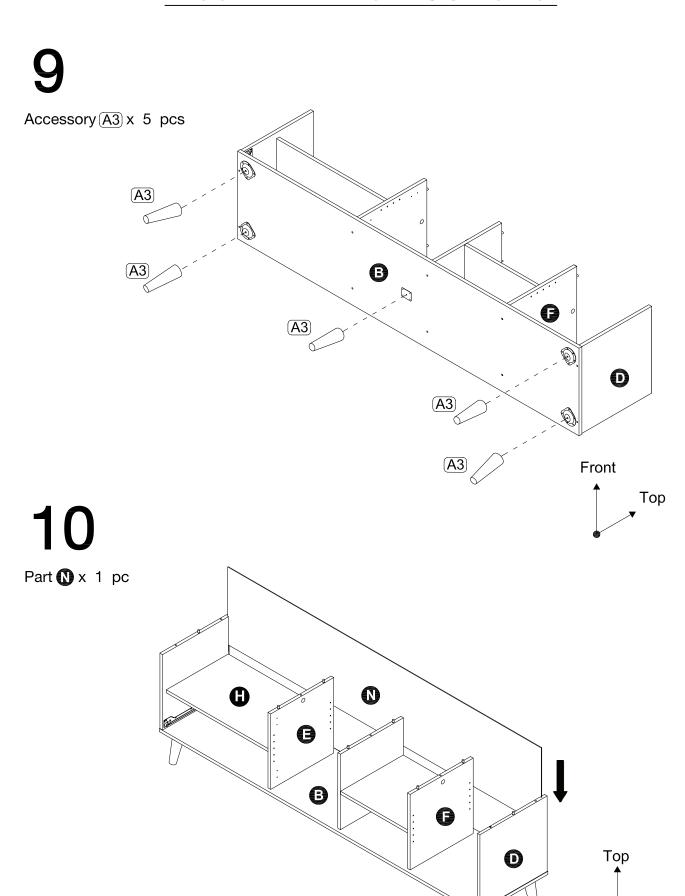


Front[▲]

11


Part A x 1 pc Hardware 2 x 7 pcs

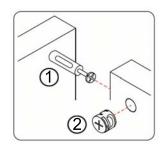


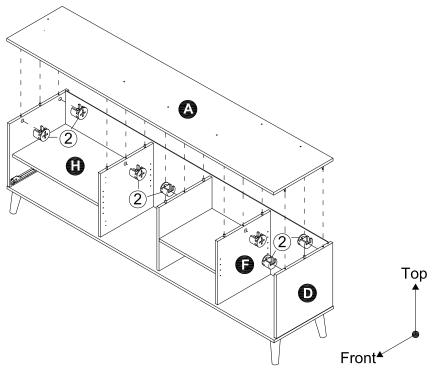

12


Part x 1 pc Part x 1 pc Hardware 9 x 4 sets Accessory 4 x 2 sets Accessory 4 x 4 pcs

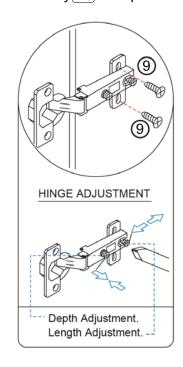


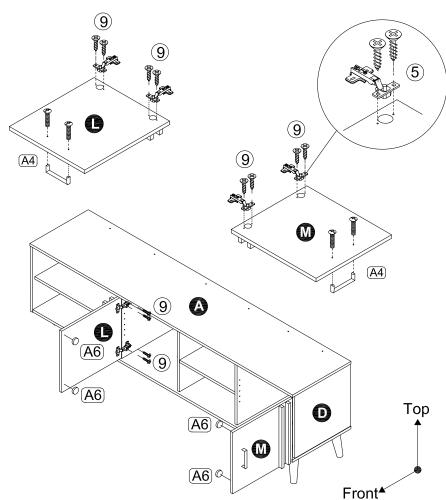

13

Part ① x 2 pcs
Part ⑥ x 1 pc
Hardware ① x 8 pcs

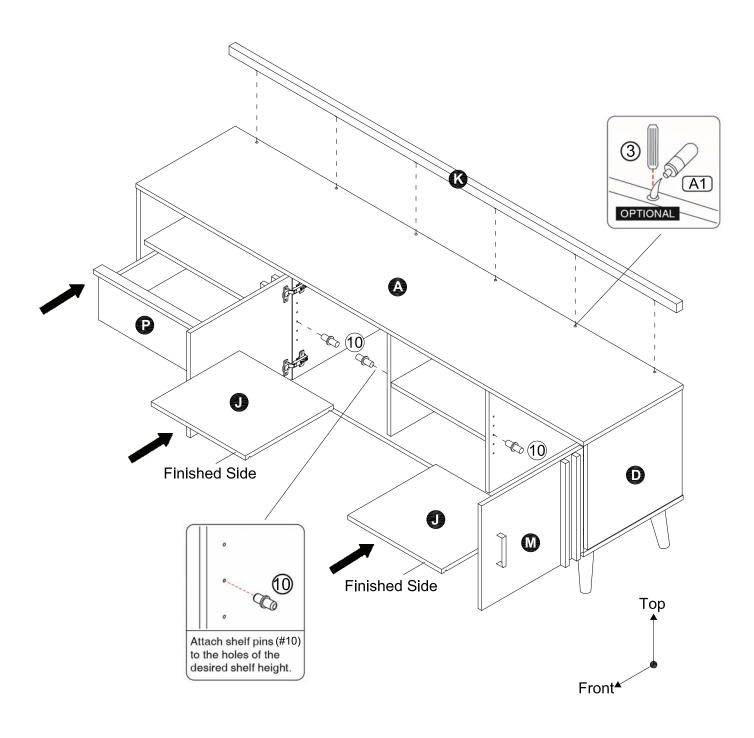

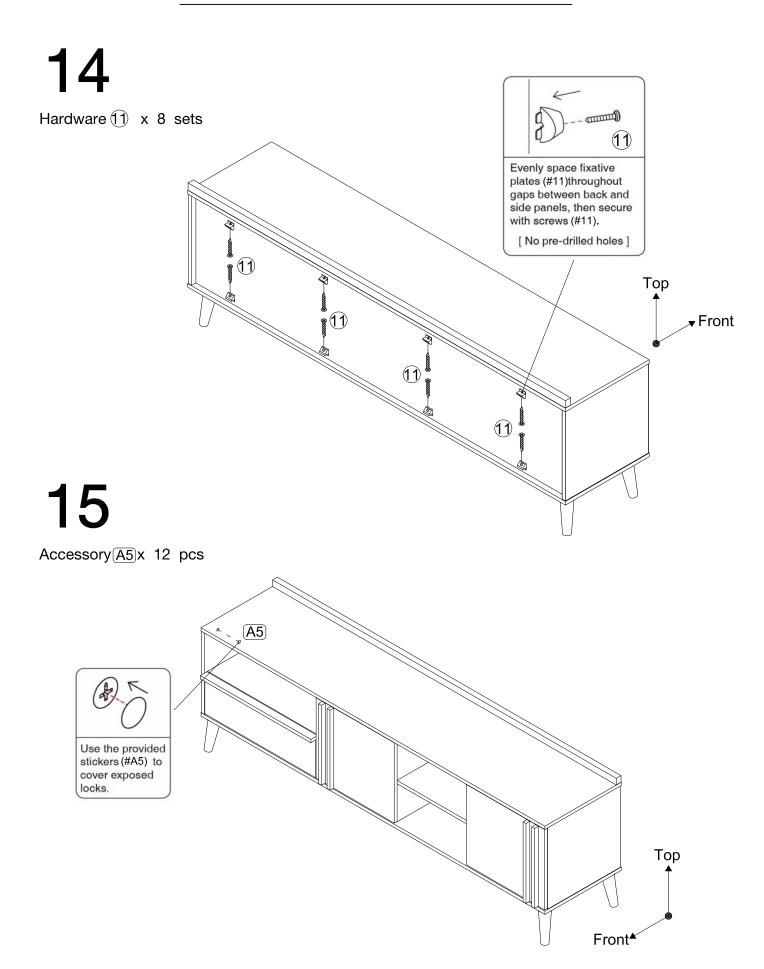

16

ASSEMBLY COMPLETED



Please ensure the furniture rests on an ever and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured

✓ Keep this handy!

Please retain this instruction manual and any order-related information for future reference.

