



# POLE SAWS

Adapters Allow Quick and Easy Replacement of Pruner Head or Pole Saw

## Attach Saw Blade to Pole Saw Head

**PS-3FP**  
With Mounting Pin

Wing Nut Bolt  
Mounting Pin

Wing Nut  
Lock Washer

Remove wing nut and lock washer. Place saw blade over bolt and mounting pin.

Replace lock washer and wing nut, tighten.

**PS-3F / PS-3**  
With Carriage Bolt

Wing Nut Bolt  
Carriage Bolt

Remove wing nut, lock washer and carriage bolt nut. Place saw blade over bolt and carriage bolt. Replace washer, wing nut and carriage bolt nut.

Snap pole saw into pole's ferrule.

<b>PS-3FP</b> Center Blade Mount with Mounting Pin Fits Saw Blades: SB-1C, SB-2, SB-1T, SB-13TE, SB-16TE, SB-16TE-W, SB-13TE-H	<b>PS-3F</b> Center Blade Mount with Carriage Bolt Fits Saw Blades: SB-1C, SB-13TE, SB-16TE, SB-16TE-W, SB-13TE-H	<b>PS-3</b> Offset Blade Mount with Carriage Bolt Fits: SB-2 and SB-4 Blades



Extension Pole



Base Pole

### **⚠ DANGER**

Work with pole held to the side, NOT pointed into the body.  
Wear head, eye and face protection that meets ANSI standards to avoid injury.  
Wear sturdy, protective safety shoes or boots with non-skid soles.  
**DO NOT USE NEAR ELECTRICAL LINES.**



### Care For Saw Blades

Wipe down after use to remove moisture and tree sap.  
Lubricate to repel moisture and prevent rust.