

SK602

WIRELESS DRIVEWAY ALERT SYSTEM

FEATURES

- Sensor & receiver
- Wireless transmission up to 400 Feet
- Sensor detects motion and triggers receiver to chime
- Sensor detection range up to 8 meters
- Sensor detection angle up to 30 degree
- Volume HI/LOW switch
- Alarm/Chime/Off select switch
- Sensor 9V battery (included)
- Receiver 3 C size batteries (included)
- Battery low indicator for sensor and receiver
- Wireless, easy installation
- Water resistant sensor for outdoor use

OPERATION

1. Remove the battery cover screws from the sensor and receiver units, open the battery door and install 9V battery for PIR sensor and “C-size” batteries for the receiver.
2. Place the sensor unit at least three feet high above the ground. Position the sensor at the entrance of your driveway (on a mailbox, a tree or on a ground stake). You may also place the sensor on your garage, near the front entrance or rear door. Can be used to protect your yard from unauthorized trespassing. May help notify you if your children or pet leave the yard. Any movement nearby will transmit a signal to the receiver. (Fig.1)

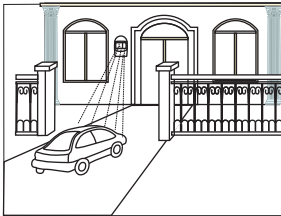


Fig.1

3. Alarm/Chime/Off switch on receiver. Turn the switch to Alarm position, the unit is in standby Alarm mode. When sensor is triggered, alarm will sound for 25 seconds and LED will flash. Turn the switch to “OFF” position to stop. In Chime position, the unit will be in standby Chime mode. When sensor is triggered door chime will sound and the led will light up. You can turn Hi/Low switch to select door chime sound volume.
4. To test the sensor unit detection area. After selecting a location for installation of the unit, turn the switch to Chime and wait 30 seconds for signal to find receiver. Walk in front of the unit. When the unit detects motion, the chime will sound. There will be no chime sound if you walk beyond the detection range. By testing the detection range, you can adjust the location of sensor angle for best coverage.

Battery low indicator: LED will light up on unit requiring new batteries.

WARNING

Changes or modifications to this unit not expressly approved by the party responsible for compliance will void the user's authority to operate the equipment. Any change to the equipment will void FCC grant.

This equipment has been tested and found to comply with the limits for a Class C digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

size: 85x105mm
P/N: 612-615xx-000R
white paper print black words