

# Clarke®

## *CarpetMaster*®

112, 115, 212, 215, 218

GU 12 SMU, GU 15 SMU

GU 12 DMU, GU 15 DMU,

GU 18 DMU



INSTRUCTIONS FOR USE  
MODE D'EMPLOI  
INSTRUCCIONES DE USO



**READ THIS BOOK**  
**LEA ESTE LIBRO**  
**LISEZ CE MANUEL**

**EN** English  
**ES** Español  
**FR** Français

This book has important information for the use and safe operation of this machine. Failure to read this book prior to operating or attempting any service or maintenance procedure to your Clarke machine could result in injury to you or to other personnel; damage to the machine or to other property could occur as well. You must have training in the operation of this machine before using it. If your operator(s) cannot read this manual, have it explained fully before attempting to operate this machine.

For new books write to: Clarke®, 2100 Highway 265, Springdale, Arkansas 72764.