

Wood Screen Door Tips & Information

FEATURE

Mortise & Tenon Construction

Our doors are manufactured using a technique similar to the way cabinetry is made. Mortise and Tenon constructions prevents sagging and withstands daily use.

TIP

Paint & Seal

Painting or sealing is required for your wood door. Choose your favorite finish or color and protect your door for years to come.

FEATURE

Removable Screen

Removable screen makes painting or repairing your screen door hassle-free. Simply unscrew the screen frames then prying them off the door using a flathead screwdriver.



TIP

Install a Catch

A catch is a piece of hardware that engages door as it approaches closed position and holds it firmly closed.

FEATURE

Winterization

Your door is compatible with our Winterview vinyl film to keep cold air out.

TIP

Add a Turnbuckle

Install a turnbuckle at the bottom of your door to add strength, dimensional stability and to extend the life of your door.

TIP

Buy Replacement Parts Online

If you need to replace any part of your door, simply visit [ScreenTight.com/Hardware](https://www.screentight.com/hardware) or contact us.

**1 YEAR
WARRANTY**

Free of charge, with proof of purchase, during the first year of ownership, Screen Tight at its discretion will supply parts for repair or replace any door determined to have a manufacturing defect. This warranty does not cover screen, hardware, misapplication of product, damages or any labor.

To activate your warranty, register your purchase at [ScreenTight.com/Register](https://www.screentight.com/register)