
ivation

ELECTRIC CHARCOAL STARTER

USER GUIDE

IVACCT20

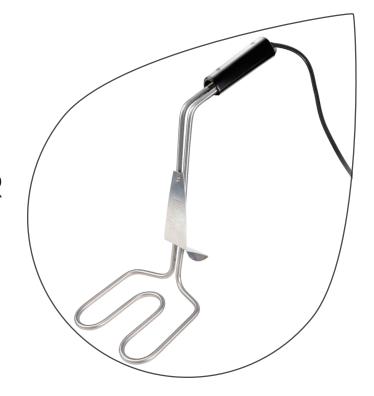

Thank you for purchasing the Ivation Electric Charcoal Starter. This User Guide is intended to provide you with guidelines to ensure that operation of this product is safe and does not pose risk to the user. Any use that does not conform to the guidelines described in this User Guide may void the limited warranty.

Please read all directions before using the product and retain this guide for reference. This product is intended for household use only.

This product is covered by a limited one-year warranty. Coverage is subject to limits and exclusions. See warranty for details.

Safety Precautions

- Do not leave the unit in charcoal for more than eight (8) minutes, as the sheath may rupture if allowed to approach its melting point. If the unit remains plugged into an outlet while under the coals for longer than eight (8) minutes, the unit may explode.
- Never leave the charcoal starter unattended while plugged into an electrical outlet.
- Never submerge the product in water.
- Always plug the unit into an electrical outlet with a voltage that matches the unit (120V). Failing to do so may result in electric shock.

- If using a detachable power supply or extension cord, the marked electrical rating of extension cord should be equal to the electrical rating of the appliance.
- If using an extension cord, make sure it does not drape over tables, and is not in a place where it can be pulled on by children, or tripped over accidentally.
- Keep this unit out of the reach of children and pets.
- The charcoal starter is not intended for use with gas grills. Do not use lighter fluid(s) or other combustibles with this product.
- Do not operate the charcoal starter longer than eight (8) minutes, as this may cause serious damage to the element.
- Allow the charcoal starter to thoroughly cool before touching or cleaning any of the metal parts.
- Do not touch any of the metal parts while the unit is in use or before they have thoroughly cooled, as this may result in serious burns.
- Before storing the charcoal starter, disconnect it from the outlet and let it cool in an open space, away from flammable objects.

Operation

- 1. Spread a layer of charcoal or briquettes on the charcoal grate of the grill, or on a bed of sand or gravel.
- 2. Lay the electric charcoal starter on top of the charcoal/briquettes with the handle well outside of the fire area. Pile more charcoal in a pyramid on top of the heating element.
- **3.** Plug the unit into a grounded outlet. After approximately 8 minutes, disconnect and remove unit from the fire.
- **4.** Spread the coals evenly to form a bed and start grilling.

Specifications

Rated Voltage: 120V

• Rated Power: 500W/60Hz

Questions or problems? Contact us!

info@myivation.com 1-866-849-3049

Distributed by C&A Marketing, Inc. 114 Tived Lane East Edison, NJ 08837 USA

Europe: C&A Europe 167 Hermitage Road Crusader Industrial Estate London N4 1LZ United Kingdom

Made in China

IVATION is a trademark of C&A IP Holdings, LLC in the U.S. ©2018. All Rights Reserved.

All other products, brand names, company names, and logos are trademarks of their respective owners, used merely to identify their respective products, and are not meant to connote any sponsorship, endorsement or approval.