



OMS THD SKU # 1001 766 486

Model #TY515-1614-3K

ASSEMBLY INSTRUCTIONS

Set of 3 LED Wisemen

USE AND CARE GUIDE

PLANNING ASSEMBLY

Carefully remove all the parts from the box and place them on a flat surface. Please note that many of the parts are connected by the lighting string that runs throughout the item. Remove the parts with care not to damage the lighting string or parts. Read the entire manual prior to assembly and identify all the parts included in the package against the parts list. If any parts are missing or damaged do not attempt assembly. Contact our customer service center or return the item to place of purchase with purchase receipt. Assembly of this product may require more than one person.

Pre-Operation

CAUTION: Grasp the plug to insert or remove from the power source. Do not unplug by pulling on cord.

CAUTION: The lighting string on this product is rated at 4.8 Watts (0.04Amps) per each. Do not overload. Do not connect to another lighting string, decorative outfit or other electrical products. Before you use or re-use this product, inspect it carefully. Discard or return to place of purchase with purchase receipt if the product has cuts, damage, frayed wire insulation on cords, cracks in the socket enclosures, loose connections or exposed copper wire.

Care and Cleaning

- Carefully remove the product from wherever it is placed. This helps to avoid any undue strain or stress on the product connections and wires. If the product is placed somewhere other than the ground it should be well secured and stable.
- Wipe the unit with a damp cloth and allow the unit to dry before storing.
- Store the product neatly in a cool, dry location protected from sunlight.

Guarantee

What is Covered

The product is intended for residential seasonal use for 90 days per year. This product is covered by a 90 days limited guarantee due to defects in material and workmanship. Return the product with purchase receipts to the location of purchase for refund within 90 days of purchase.

What is Not Covered

This warranty does not cover commercial use, normal wear and tear, products not used in accordance with directions provided on or with the product, burn out of bulbs or LEDs, batteries, products that have been subjected to unauthorized repair and/or modification and damage caused by shipping and improper handling, alterations, misuse or accidents. Questions, problems, missing parts? Before returning to the store, call Home Accents Holiday Customer Service 8 a.m.-6 p.m., EST, Monday-Friday




Thank you!

We appreciate the trust and confidence you have placed in Home Accents through the purchase of this Set of 3 LED Wisemen. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home decoration needs. Thank you for choosing Home Accents!

1-877-527-0313

HOMEACCENTSHOLIDAY.COM

 
Diagram of Parts

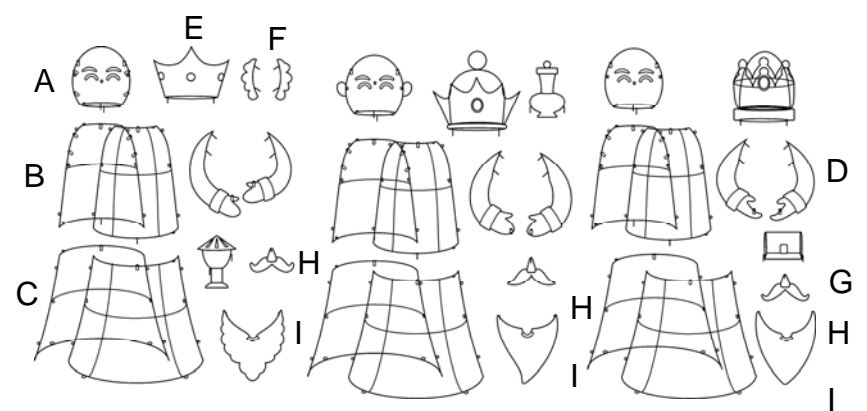

Parts List		
Locater	Name	Qty.
A	Head	3
B	Halves of Upper Body	6
C	Halves of Lower Body	6
D	Arms	6
E	Crown	3
F	Sideburns	2
G	Bottle & Box	3
H	Mustache	3
I	Beard	3

Hardware List		
Locater	Name	Qty.
J	Ground Stakes	12
K	Plastic Tie	30
L	Spare Fuse	6
M	Spare Bulb	6

 
Hardware

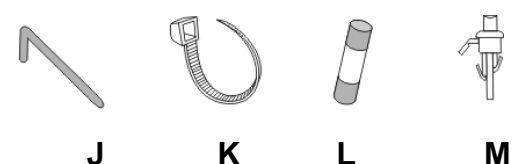

ASSEMBLY


1. Assembling the Body Section (Note: For all 3 Wiseman)

 Align the two Halves of Lower Body (C) with each other then insert the connecting rods on one half into the connecting holes on the other half and fasten them together at the connecting loops with Plastic Tie (K). Align the two Halves of Upper Body (B) with each other then insert the connecting rods on one half into the connecting holes on the other half and fasten them together at the connecting loops with Plastic Tie (K). Stand the Lower Body section in an upright position. Insert the connecting rods on the bottom of the Upper Body into the connecting holes on the top of the Lower Body then fasten together at the connecting loops with the Plastic Ties (K). Insert the connecting rods on the bottom of the Heads (A) into the connecting holes at the top of Bodies then fasten them together with Plastic Ties (K).

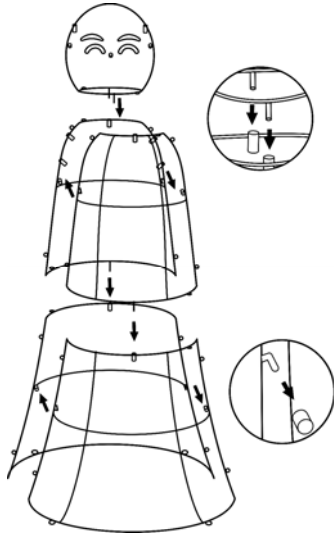

2. Assembling the Arms and Crowns

 Insert the connecting rods on each of the Arms (D) into the connecting holes on both sides of the Bodies (B). Insert the connecting rods on the bottom of the Crowns (E) into the connecting holes on the top of the Heads (A) and fasten all with Plastic Ties (K). Attach the connecting rods on the Sideburns (F) to the Wisemans face with the green jacket.

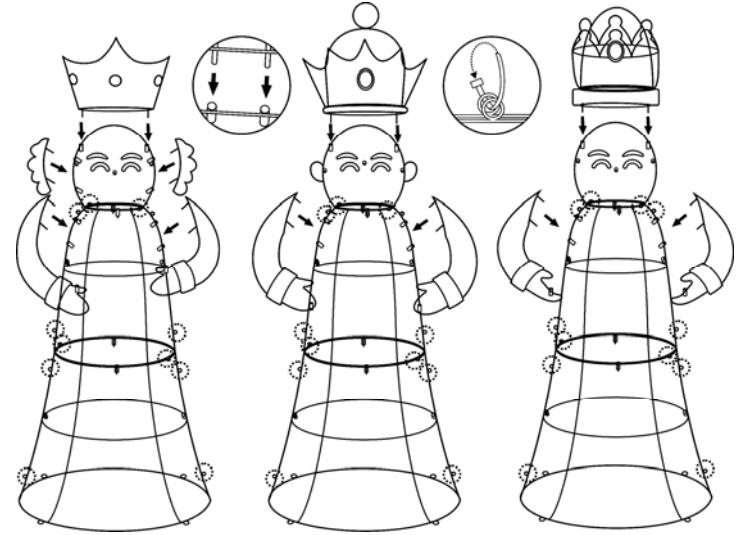

3. Assembling the Bottles and Box to the Hands. Securing the Wisemen to the Ground

Attach the Beards (I) to the faces of each Wiseman with connecting rods and connecting holes attached. Insert the connecting rods on the Bottles and Box (G) into the connecting holes on the Hands. Secure the Wise Men to the ground with the Ground Stakes (J).

