

Cycle guide

The cycle guide below shows the options and recommended fabric types for each cycle. ● = Available option

CYCLE	FABRIC TYPE	DISPLAY TIME(MIN)	BASIC OPTION (*=DEFAULT)			ADDITIONAL OPTIONS					
			Wash Temp.	Spin Speed	Soil Level	Pre Wash	Extra Rinse	Steam	Cold Wash™	Turbo Wash™	Dry
Tub Clean	This cycle is designed to remove a mildewy	89						●			
Allergiene™	Cotton, underwear, pillow covers, bed sheets, baby wear	99 ~ 132		Extra High High* Medium Low No Spin			●	●		●	●
Sanitary	Heavily soiled underwear, work clothes, diapers, etc.	110~120	Extra Hot*	Extra High High* Medium Low No Spin	Heavy Normal* Light	●	●	●		●	●
Bright Whites™	White Fabrics	66~76	Hot* Warm Cold Tap Cold	Extra High High* Medium Low No Spin	Heavy Normal* Light	●	●	●		●	●
Bulky/ Large	Large items such as blankets and comforters	56	Hot Warm* Cold Tap Cold	Medium* Low No Spin	Heavy Normal* Light	●	●	●	●	●	
Cotton/ Normal	Cotton, linen, towels, shirts, sheets, jeans, mixed loads	26~53	Hot Warm* Cold Tap Cold	Extra High High* Medium Low No Spin	Heavy Normal* Light	●	●	●	●	●	●
Heavy Duty	Heavy soiled Cotton Fabrics	74~131	Hot Warm* Cold Tap Cold	Extra High* High Medium Low No Spin	Heavy* Normal Light	●	●	●	●	●	●
Perm. Press	Dress shirts/pants, wrinkle-free clothing, poly/cotton blend clothing, ablecloths	33~47	Hot Warm* Cold Tap Cold	High Medium* Low No Spin	Heavy Normal* Light	●	●		●	●	●
Delicates	Dress shirts/blouses, nylons, sheer or lacy garments	41	Warm Cold* Tap Cold	Medium* Low No Spin	Heavy Normal* Light	●	●		●		
Towels	Towels	55 ~ 65	Hot Warm* Cold Tap Cold	Extra High* High Medium Low No Spin	Heavy Normal* Light	●	●		●	●	●
Hand Wash/ Wool	Items labeled "hand-washable"	55	Warm* Cold Tap Cold	Low* No Spin	Normal* Light				●		
Speed Wash	Lightly soiled clothing and small loads	15	Hot* Warm Cold Tap Cold	Extra High* High Medium Low No Spin	Heavy Normal Light*		●		●	●	●
Small Load	Normally soiled and small loads.	45	Hot Warm* Cold Tap Cold	Extra High High* Medium Low No Spin	Heavy Normal* Light	●	●		●		●
Drain+Spin	Drain, Spin Only	11		Extra High High* Medium Low No Spin							●

- Cycle time depends on water pressure, type and amount of load and chosen additional options.
- To protect your garments, not every wash/rinse temperature, spin speed, soil level, or option is available with every cycle.
- If the Turbo Wash™ option is on, you cannot select "No Spin" as your Spin Speed.
(If the Turbo Wash™ option is off, you can select "No Spin" as your Spin Speed.)