


Installation Instructions, Column Caps  
 4x4 Column Cap (4X4-CAP-IW) 51778  
 6x6 Column Cap (6X6-CAP-IW) 51779  
 4x4 Column Cap (4X4-CAP-LS) 56778  
 6x6 Column Cap (6X6-CAP-LS) 56779

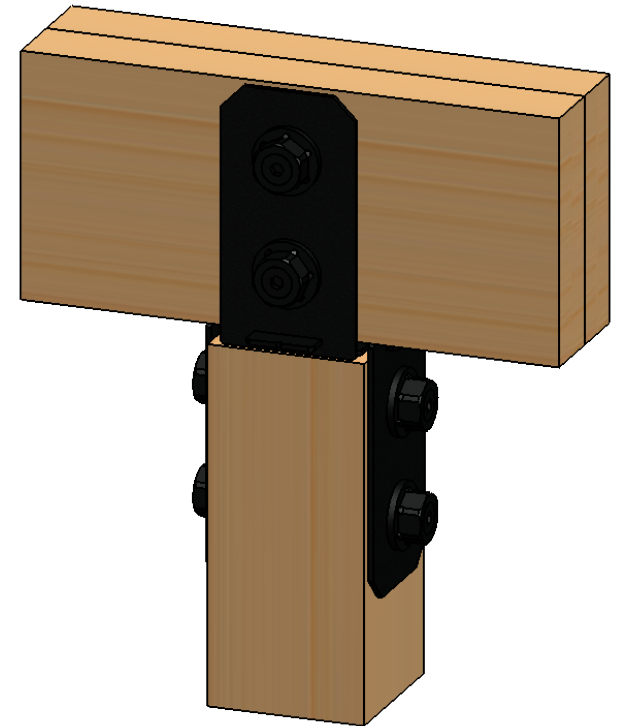


51778 shown with  
 4x4 post 2x6 beams









# Printing Documents from ISSUU

Unfortunately, there is currently no way to print content directly through issuu. To print a publication, you will need to download it and print it from your computer.

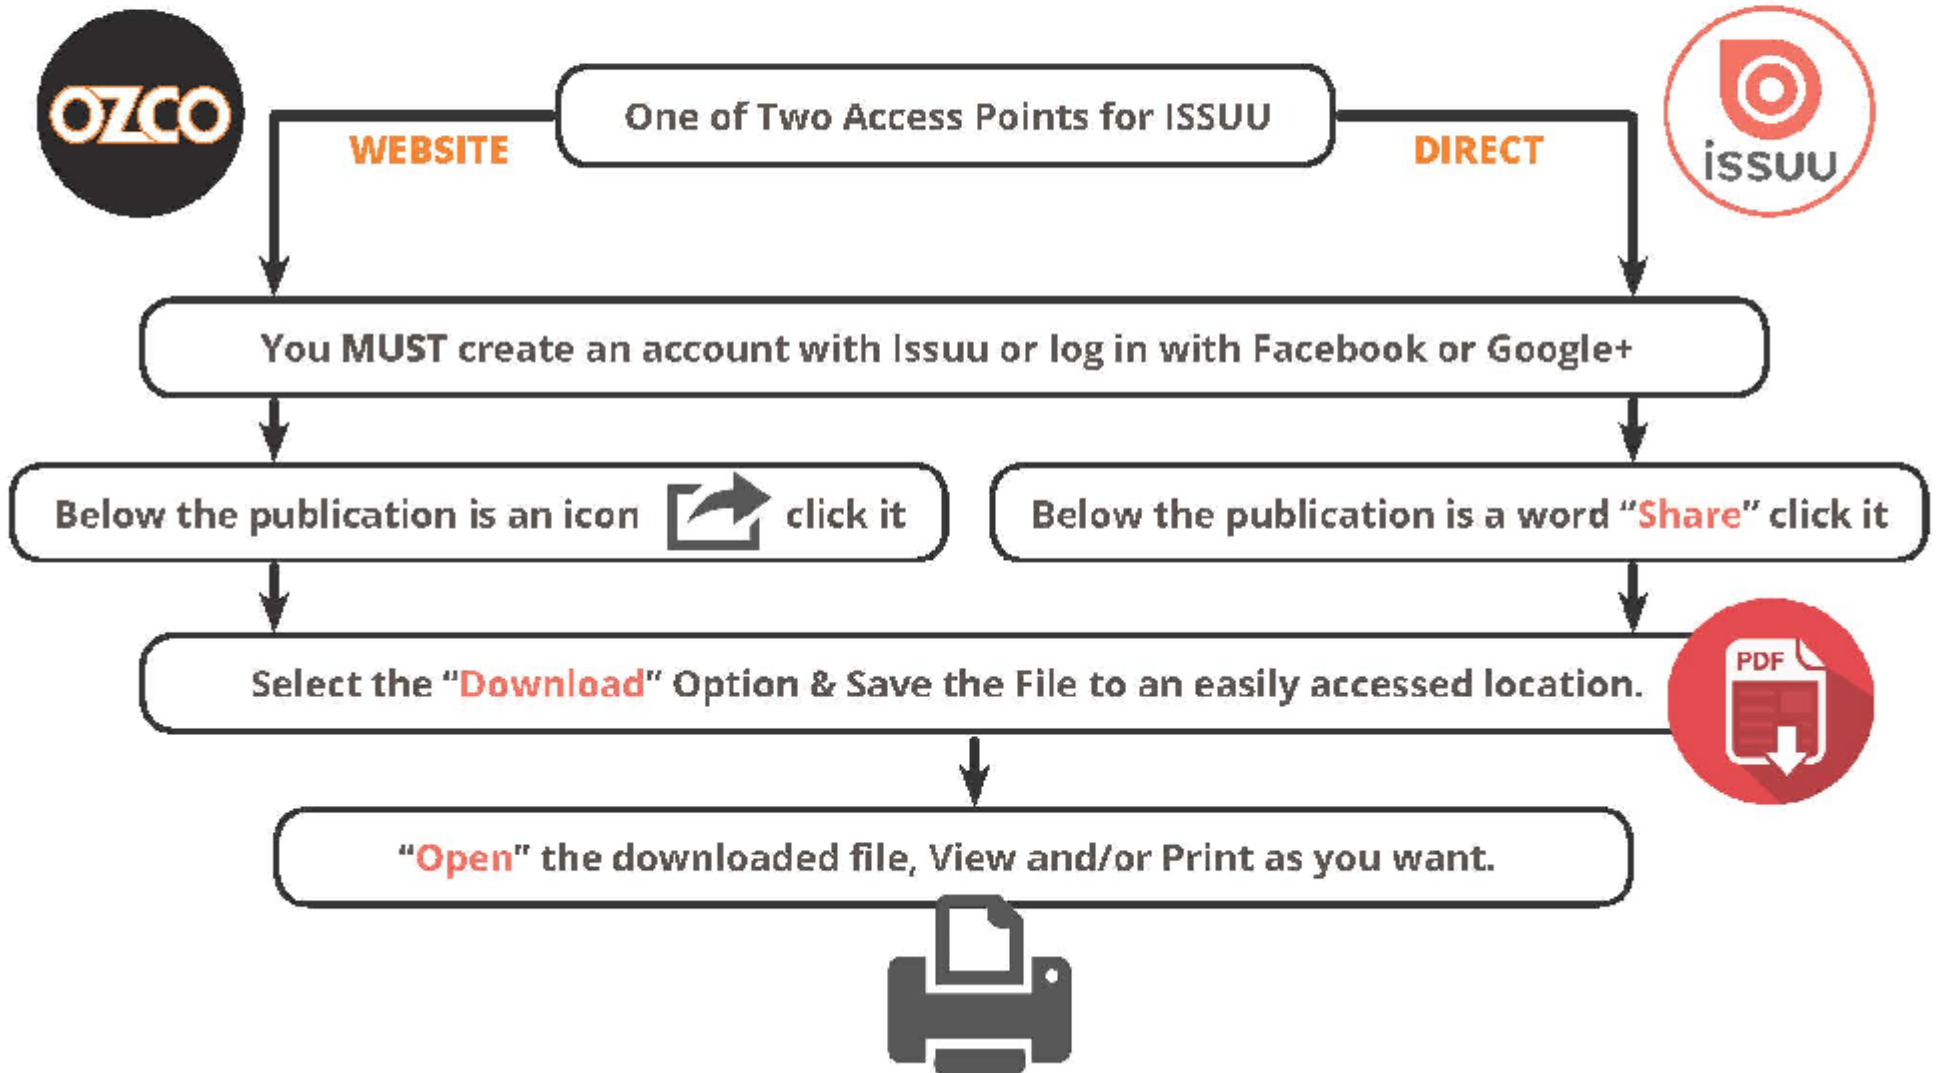

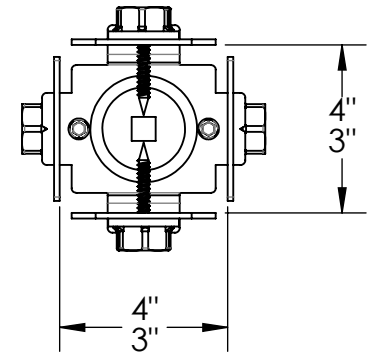
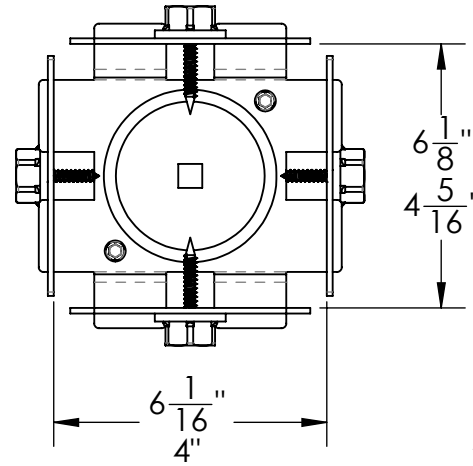
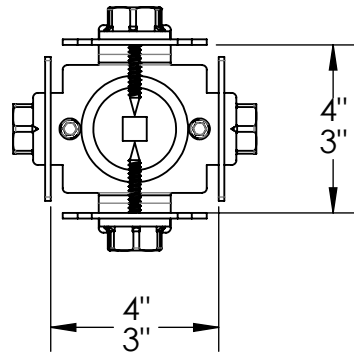
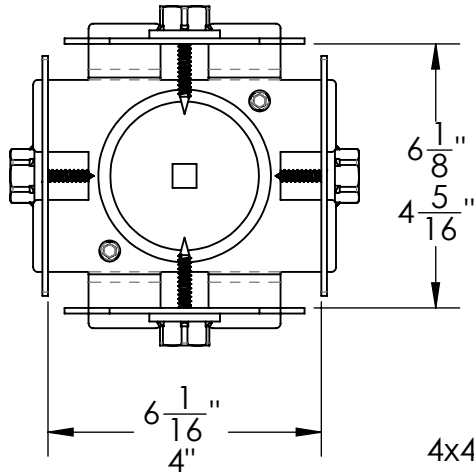


4x4 Column Cap (4X4-CAP-LS)  
56678

6x6 Column Cap (6X6-CAP-IW)  
51779

4x4 Column Cap (4X4-CAP-IW)  
51778

6x6 Column Cap (6X6-CAP-LS)  
56679

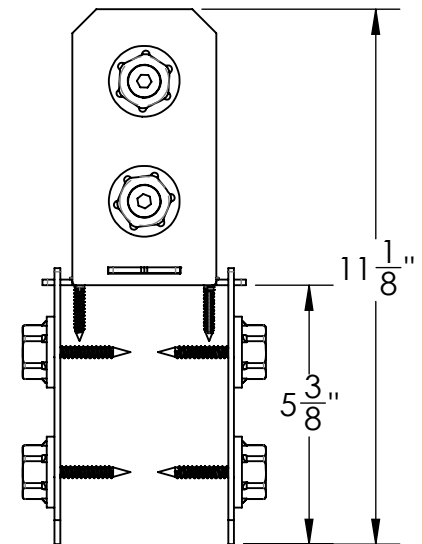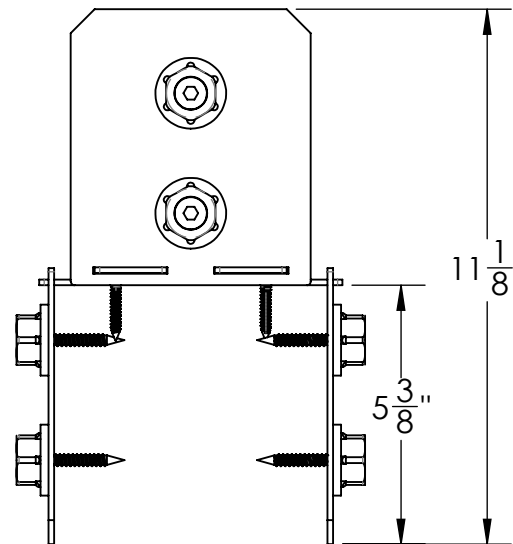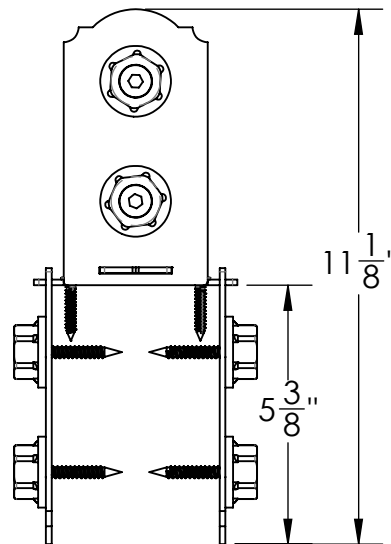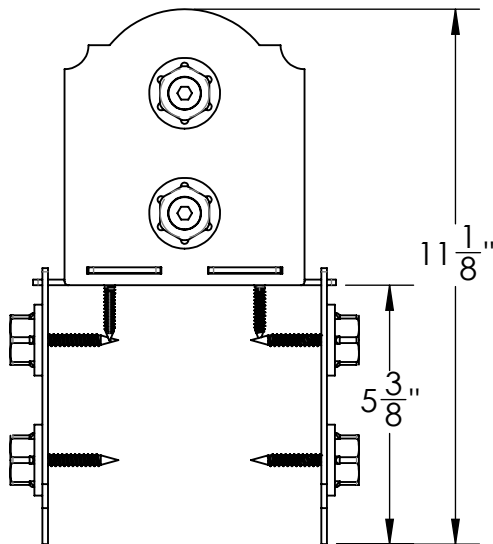

## Overview

### Installation Instructions, Column Caps


# Laredo Sunset & Ironwood



Laredo Sunset  
(566XX series)




2 great styles  
Same functionality  
choose your  
connection lifestyle

both styles available for  
most products

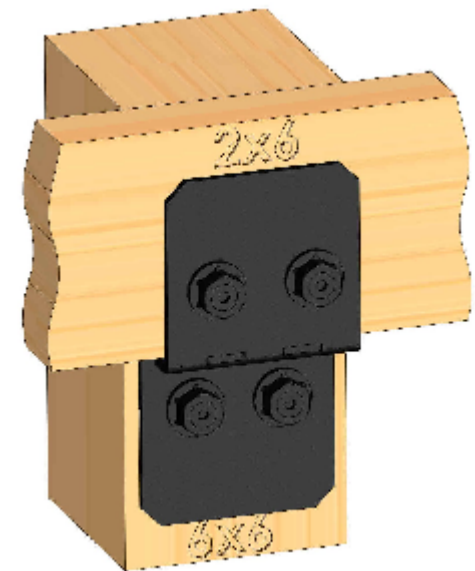



Ironwood  
(517XX series)



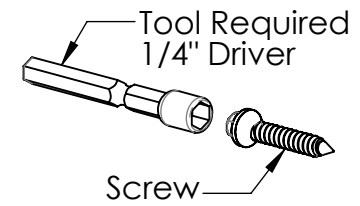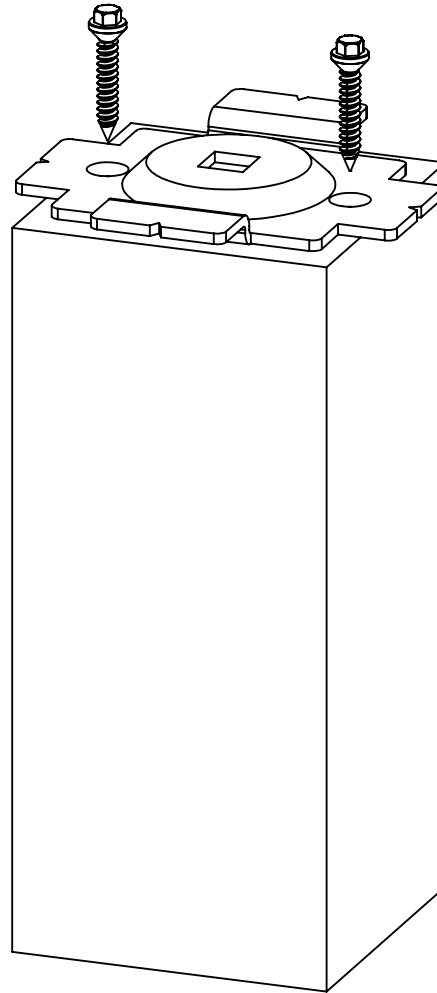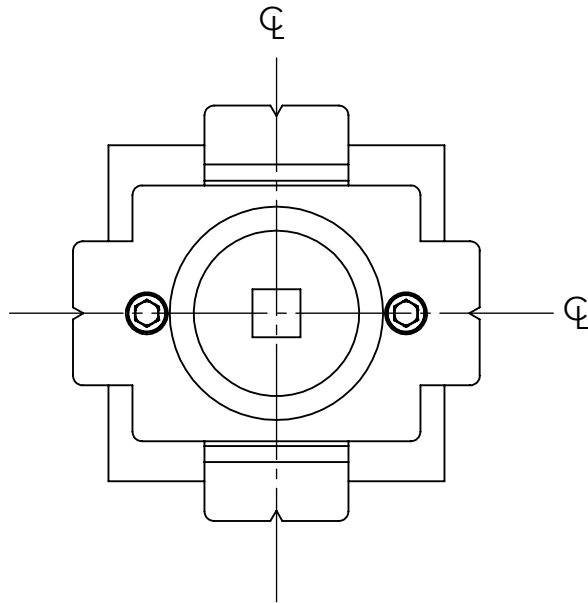




## Typical Installation step 1

Installation Instructions, Column Caps

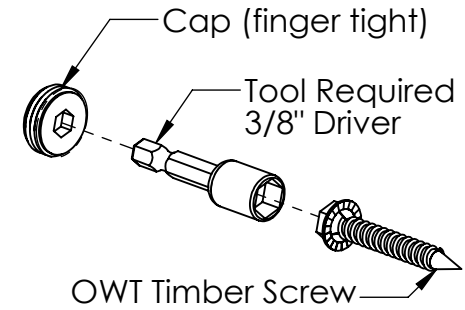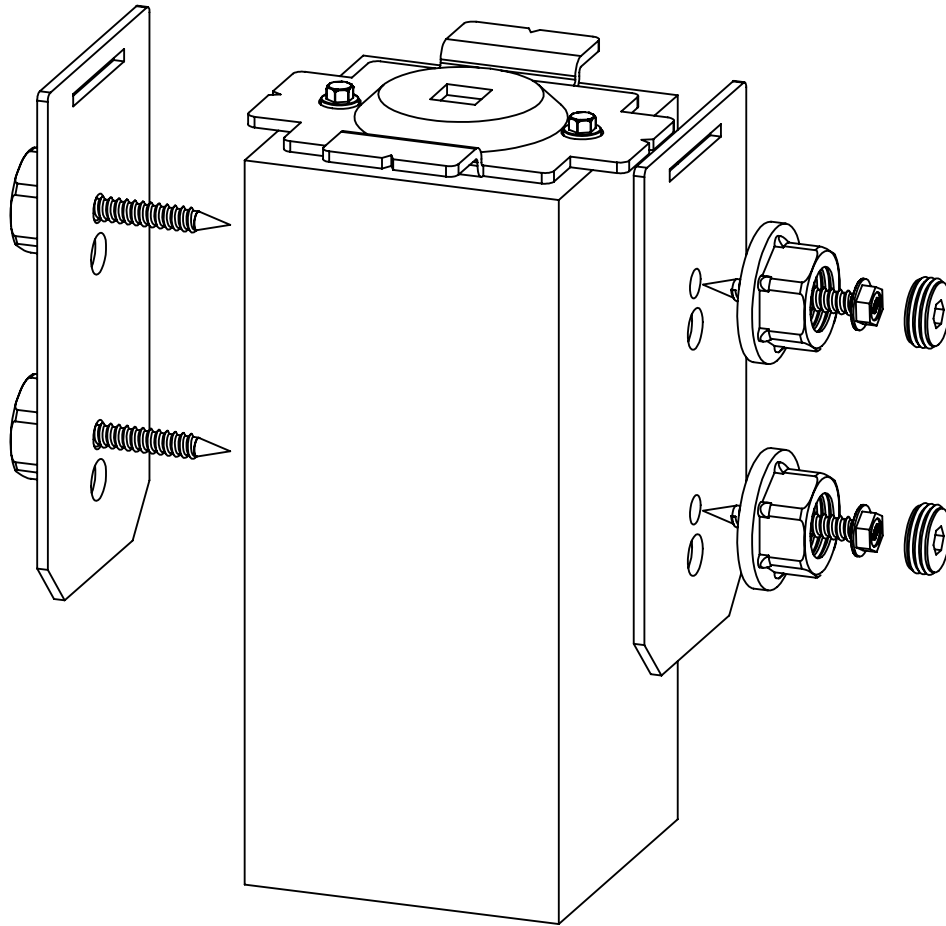


## Typical Installation step 2


Installation Instructions, Column Caps

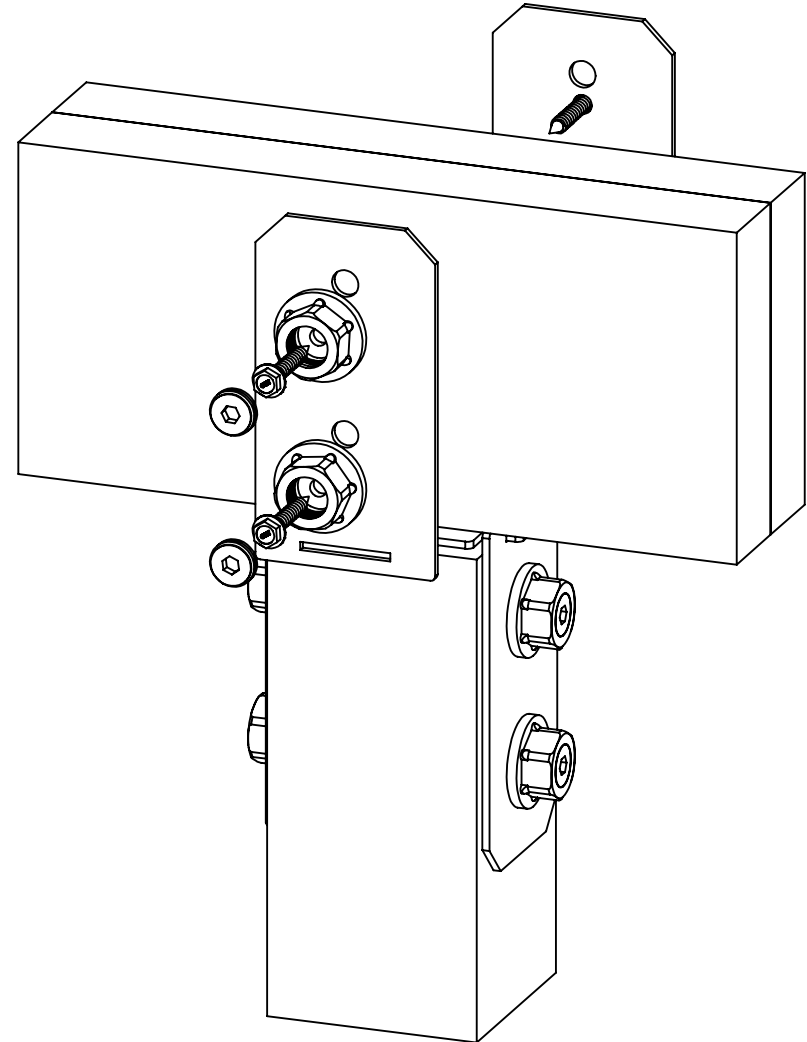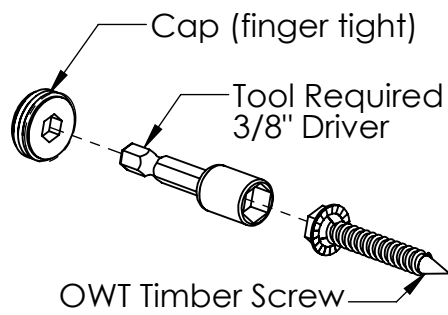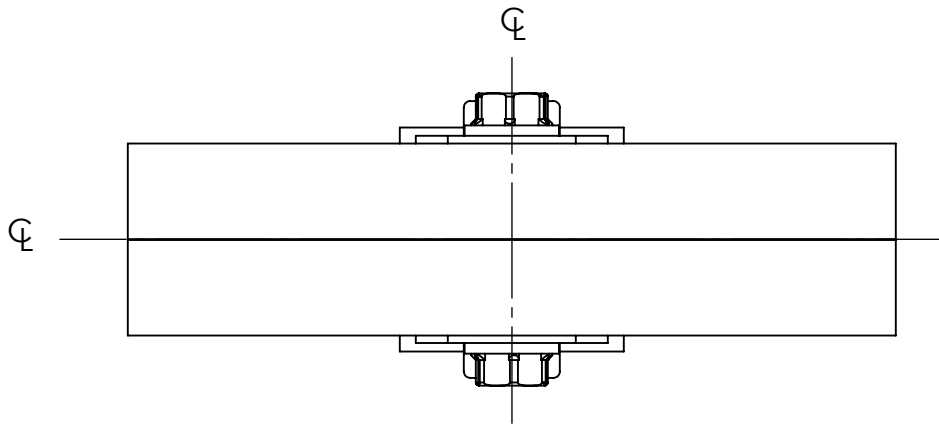

## Typical Installation step 3

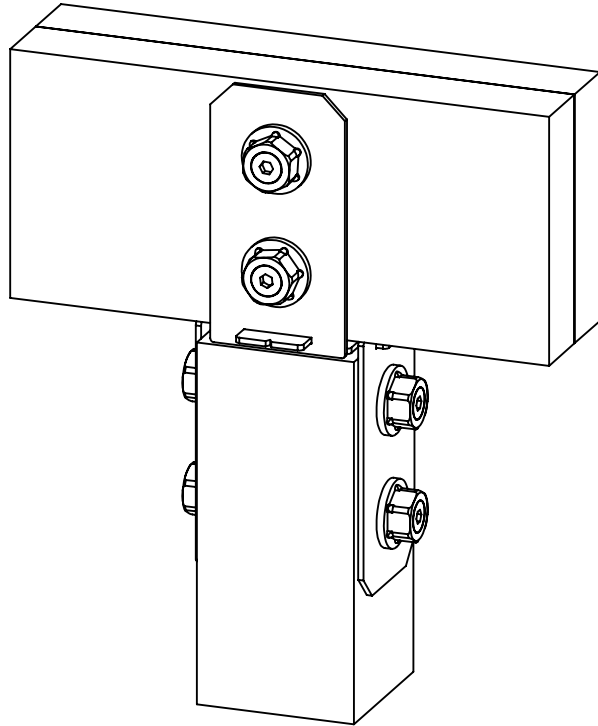


4x4 post 2x6 beams

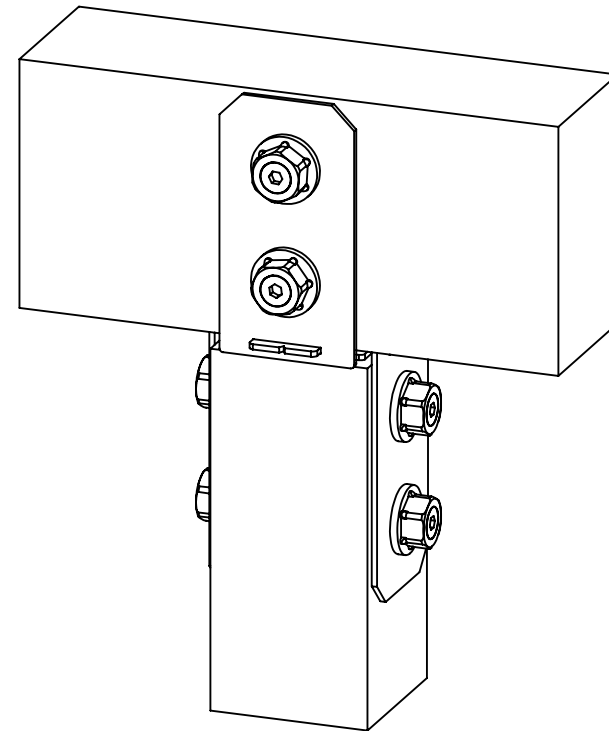


4x4 Post 4x6 Beam

## Applications: 51778 (shown) & 56678




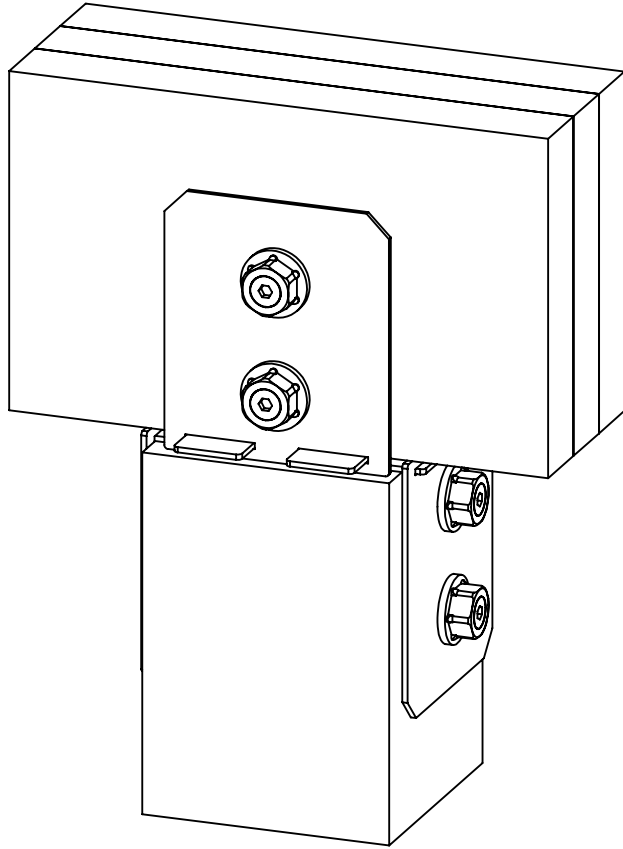

6x6 post 2x8 beams

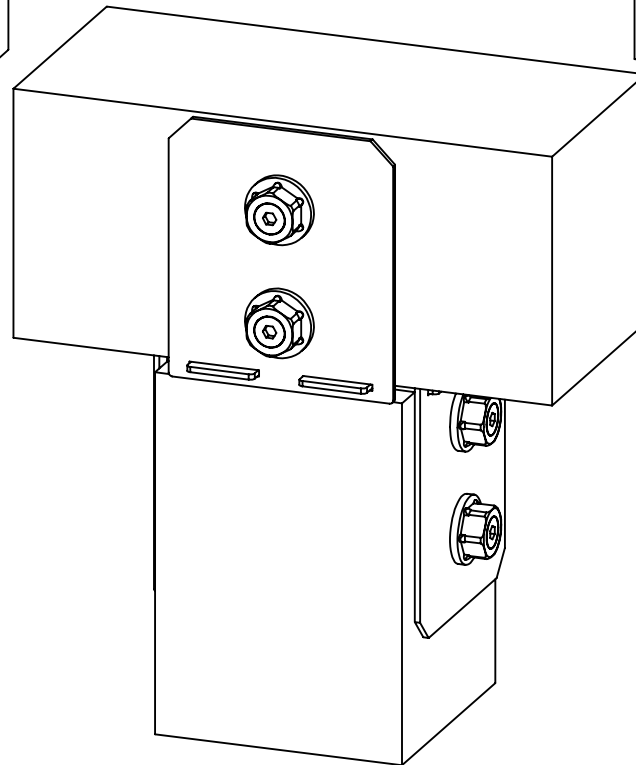

6x6 Post 6x6 Beam

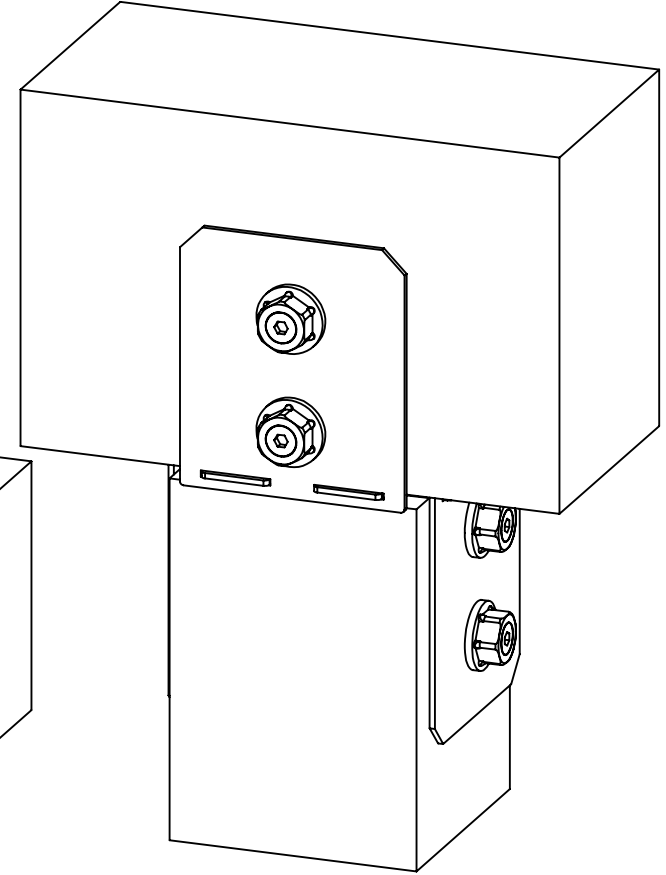

6x6 Post 6x8 Beam

## Applications: 51779 (shown) & 56679