


EVAPORATIVE COOLER
972-1004-W

USER MANUAL

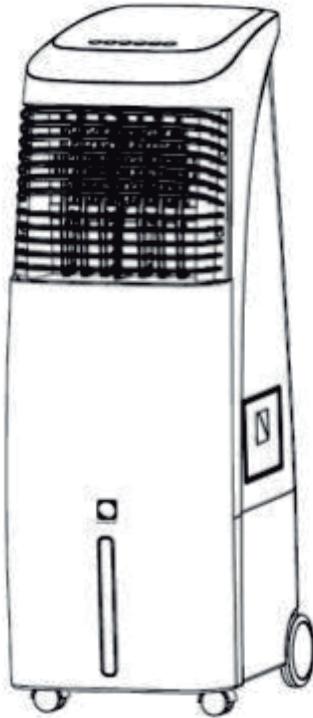

Thanks for your support and choice of our unique tower fan, in order to help you use the product more conveniently, please read this manual book before using the product.

Wish our product can bring comfort and pleasure in your daily life.

Contents

I. SAFETY.....	3
II. DESCRIPTION OF THE COOLER.....	6
III. CONTROL PANEL & DISPLAY WINDOW.....	7
IV. WATER FILLING INSTRUCTIONS.....	9
V. TECHNICAL PARACHNICAL.....	10
VI. WARRANTY.....	11

I. SAFETY

Read all instructions carefully before setting up and operating the cooler. Please keep this instruction manual for future reference. This manual is designed to provide you with important information needed to setup, operate, maintain, and troubleshoot your cooler. Failure to follow these instructions may damage and/or impair its operation and void the warranty.

NOTE: Air Cooler can be used right out of the box, with no assembly.

When using the Air Wave Cooler, basic safety precautions should always be followed:

This appliance is designed for indoor used only.

1. Your cooler runs on 120 Volt AC, 60 Hz current. Check the household voltage to ensure it matches the appliance's rate specification.
2. Before operating the product remove it from its packaging and check that it is in good condition.
3. DO NOT operate any product with a damaged cord or plug.
4. DO NOT run power cord under carpeting, or cover it with rugs or runners. Keep the cord away from areas where it may be tripped over.
5. Always unplug the product before refilling the water tank.
6. Always unplug the appliance from the power source before cleaning, servicing or relocating the unit.
7. Remove the power cord from the electrical receptacle by grasping and pulling on the power cord plug-end only, never pull the cord.
8. DO NOT attempt to repair or adjust any electrical or mechanical functions of the cooler, as this may void the warranty.
9. DO NOT cover the air inlet or outlet on the appliance as this may cause motor damage.
10. DO NOT insert or allow objects to enter any ventilation or exhaust opening as this may damage the product and could cause an electrical shock or fire.
11. DO NOT operate with the Honeycomb media removed as this will overload and damage the motor.

12. DO NOT leave the operating appliance unattended for any extended period of time.
13. DO NOT let children play with this appliance, packaging or plastic bags.
14. If the unit is damaged or if it malfunctions do not continue its use. Refer to the Troubleshooting Guide or contact us at 877.891-7333. Place the unit on a level floor.
15. Never locate the product where it may fall into a bathtub or other water container. Store in a dry area when not in use.
16. This appliance is not intended for use by persons (including children or elderly)
17. with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety
18. Always grip the back handle to move the cooler.
19. Don't use any extension cord, especially indoor extension cords outside. If do need, only suggest to look for extension cords specifically marked for outdoor use. Look for extension cords that have a GFCI (Ground Fault Circuit Interrupter) built in.
20. Make sure the amperage rating for the extension cord is higher than the amperage rating for the appliance. Check labels and owner's manuals on the appliance and the extension cord for amperage ratings.
21. Power cords have to be contained. If they must run along the ground, make sure every inch of them is secured so they will not be tripped over.
22. The wiring and connections must be waterproof. Be sure the connections (to the air cooler) never get wet. Your unit is waterproof, but everything attached to it must be waterproof, too.
23. Set up your unit so it cannot be tripped over or wobble loose. It must rest on a solid support.
24. Unplug from power when refilling.
25. Disassembly or modification without permission will affect the safety of the product and automatically void the warranty
26. The water level of the tank shouldn't exceed the maximum level, and shouldn't be lower than the minimum level when the cooling/humidification function is turned on.


27. It is recommended to change the water in the water tank every 24 hours.
28. It is also recommended to empty the tank and wipe it thoroughly with sanitizing wipes on a regular basis.
29. After water is filled, do not tilt or attempt to move the air cooler in order to prevent water splashing.
30. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

 WARNING:

To Reduce the Risk of Fire or Electric Shock, Do Not Use This Fan with Any Solid-State Speed Control Device.

READ AND SAVE THESE INSTRUCTIONS


II. DESCRIPTION OF THE COOLER

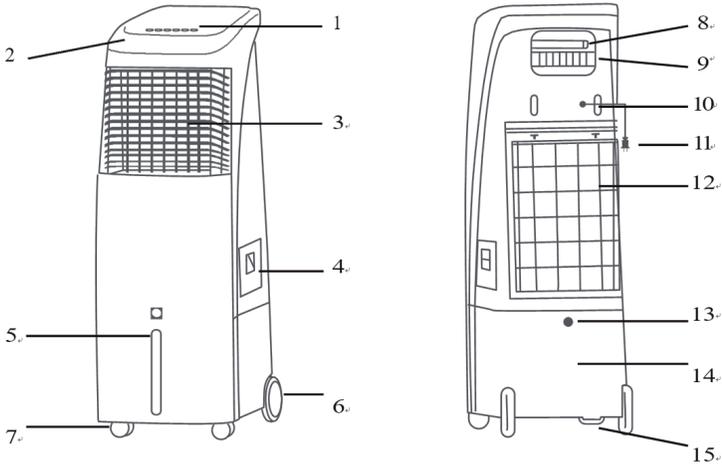


- | | |
|--------------------------------|------------------------------|
| 1. Operation Panel | 9. Handle |
| 2. Display Window | 10. Power Cord Winding Frame |
| 3. Air outlet | 11. Power Cord |
| 4. Water Filling Box | 12. Air Filter Screen |
| 5. Water level display window | 13. Automatic Filling Nozzle |
| 6. Rear Wheels | 14. Water Tank |
| 7. Front Locking Casters | 15. Water Plug |
| 8. Remote control storage area | |

NOTE: Press the “Cooler / Air Washer” button to start the evaporative cooling.

NOTE: Every 200 hours, the “Clean Filter” indicator will blink to notify the user to clean the air filter. Once you have cleaned the filter, press the “Cooler/Air Washer” button for 3 sec to reset the “Clean Filter” warning

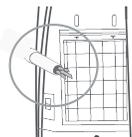


III. CONTROL PANEL & DISPLAY WINDOW

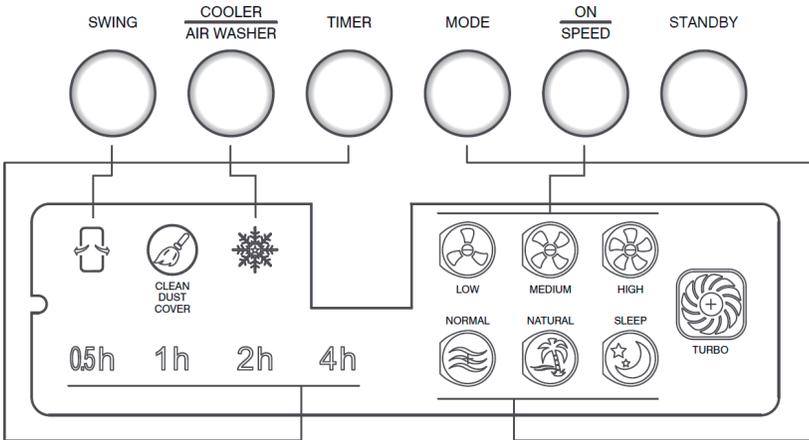


GENERAL USE

1. When unit is initially plugged in, there will be two beeps after which the cooler enters a stand-by mode. However, the cooler will not be powered on, so none of the buttons on the control panel will function except for the “ON/ Speed” button.
2. Press the “ON / Speed” button to power the unit on.

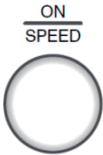

3. The cooler will at first function at medium speed, but will change to low speed automatically after 3 seconds. In the black Display Window the corresponding icon will turn on. While the unit is running, you can press the “On / Speed” button to change the fan speed. There are four fan speed settings: low, medium, high, and turbo.

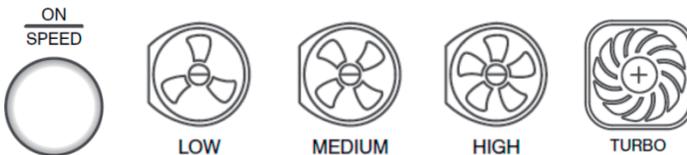

- Press the “Cooler / Air Washer” button to turn the water cooling function on or off. This will turn the water pump on to run water over the air washing media. NOTE: This is the evaporative cooling feature. This function also acts as a humidifier.

COOLER
AIR WASHER



- Press the “Swing” button to turn on and off vent oscillation.

SWING



- “Timer” button – Press this button to set the timer in half hour increments up to 7.5 hours. The “timer” display will change accordingly.

TIMER



0.5h

1h

2h

4h

- The “Mode” button allows you to choose pre-programmed fan cycles:

MODE



Normal = everyday use

Natural = an outdoor breeze

Sleep = relaxing environment;

NORMAL



NATURAL





SLEEP



NOTE: The “Mode” functionality is disabled when the fan speed is set at turbo. (Relevant Control Panel and Display Window Graphics)

IV. WATER FILLING INSTRUCTIONS

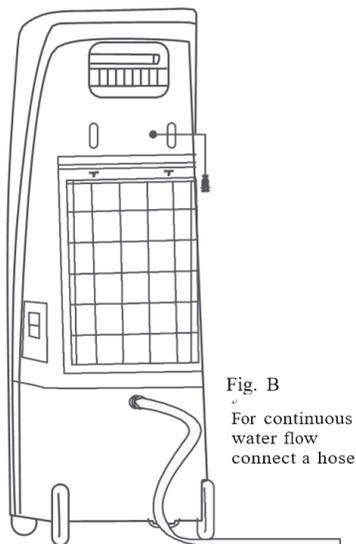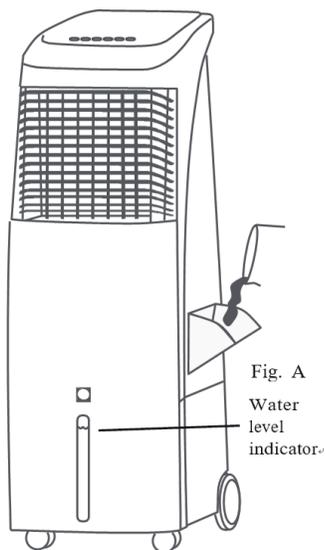

NOTE: It is normal for the air cooler to have a slight odor or for the water stored in the water tank to have a slight discoloration during first use.


In order to enjoy maximum cooling you will need to ensure there is water in the water tank.

This product features a low water protection. If the water level is low, the unit will beep continuously for five seconds and turn off the water cooling function.

When filling the water tank, please note the level indicator in the front of the air cooler (Fig. A)

1. Do not fill the water beyond the maximum water level (Fig. A)
2. For best results, use filtered or distilled water.

In order to provide a continuous flow of water to the water tank connect a water line to the nozzle on the back of the cooler (Fig. B). The cooler will regulate water flow from the hose. We recommended a separate shut off valve on the water line.

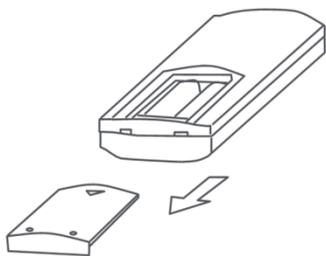

Using the remote control:

1. Open the battery cover of the remote control, and insert two 1.5VAAA batteries.
2. Please point to the receiver when using the remote control.
3. If the battery voltage is low, please open the battery cover as shown in the figure and replace with new batteries. Please note the positive pole and the negative pole of the battery. Replace battery cover.

V. Technical Parameters

Product model	972-1004-W
Rated voltage	120 V
Rated frequency	60 Hz
Rated power	200 W
Noise (strong mode)	≤ 71 dB
Rated wind output	411.8ft ³ /min
Rated evaporation	5.92 pints/h
Net weight	23.5 lbs

One-Year Limited Warranty

For a period of one year from the original purchase date, the manufacturer will either repair or replace defective components in accordance with this Limited Warranty. This warranty is between manufacturer and the original purchaser and is valid only when accompanied by the original purchaser's sales receipt showing original date of purchase and location of purchase. Replacements under this warranty revert back to the date of original purchase for future warranty.

NORMAL RESPONSIBILITIES OF THE CONSUMER

This warranty applies only to products in ordinary household use. The consumer is responsible for the following:

1. Proper use of the appliance in accordance with the instructions provided with the product
2. Proper installation by an authorized service professional in accordance with instructions provided with the appliance and in accordance with all local plumbing, electrical and/or gas codes.
3. Proper connection to a grounded power supply of sufficient voltage, replacement of blown fuses, repair of loose connections or defects in house wiring.

This warranty does not cover the following:

1. Failure caused by damage to the unit while in your possession (other than damage caused by defect or malfunction), by improper installation, or by unreasonable use of the unit, including but not limited to failure to provide reasonable and necessary maintenance or to follow the written installation and operating instructions.
2. Damages caused by services performed by persons other than authorized servicers, use of parts other than approved replacement parts, or external causes such as abuse, misuse, or inadequate power supply.
3. If the unit is put to commercial, business, rental or other use other than for consumer use.
4. Products without original serial numbers or products that have serial numbers which have been altered or cannot be readily determined.

Note: *Some states do not allow the exclusion or limitation of incidental or consequential damages. So this limitation or exclusion may not apply to you.*

IF YOU NEED SERVICE

Keep your bill of sale, delivery slip, or some other appropriate payment record. The date on the bill of sale establishes the warranty period should service be required. Keep all receipts for any services performed to this appliance.

Contact Warranty Service at: **855-591-7451**

This written warranty gives you specific legal rights. You may also have other rights that vary from state to state.

THIS IS THE ENTIRE EXCLUSIVE EXPRESS LIMITED LIABILITY. THE MANUFACTURER NEITHER MAKES NOR IS RESPONSIBLE FOR ANY OTHER WARRANTIES, EITHER EXPRESS OR IMPLIED, INCLUDING THOSE OF RETAILING DEALERS. THIS EXCLUSIVE REMEDY IS LIMITED TO RECEIPT OF A CREDIT IN CONNECTION WITH THE REPAIR OR REPLACEMENT OF ANY PRODUCT OR COMPONENT DEEMED TO BE DEFECTIVE UNDER THE TERMS AND CONDITIONS AS STATED IN THIS WARRANTY. NEITHER XLS PRODUCTS, INC., THE PRODUCT MANUFACTURER NOR ITS AGENTS SHALL BE LIABLE IN ANY CASE FOR INCIDENTAL, INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY OR NEGLIGENCE EVEN IF IT HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. EXCEPT AS OTHERWISE MAY BE REQUIRED BY LAW, THERE ARE NO OTHER EXPRESS OR IMPLIED WARRANTIES OTHER THAN THE WARRANTY DESCRIBED HEREIN, AND ALL OTHER WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY DISCLAIMED.