

Golf Practice Net




INCLUDED

- GOLF NET
- CORNER BASE TUBE (X2)
- MIDDLE BASE TUBE (X3)
- TENT POLES (X2)
- CARRY CASE
- CLIP ON TARGET
- METAL STAKES


Thank you for purchasing a GoSports® Golf Practice Net. We hope that this is exactly what you were looking for and our product met or exceeded your expectations. If you have enjoyed our product, we encourage you to leave us a product review so others can learn about our fun products.

Customer Service: If you have any questions or concerns regarding your GoSports® Golf Practice Net please reach out to us at info@pandpimports.com and we will get back to you right away. We 100% stand behind our products and want to make sure you get the full enjoyment that you paid for. Enjoy!


Golf Practice Net

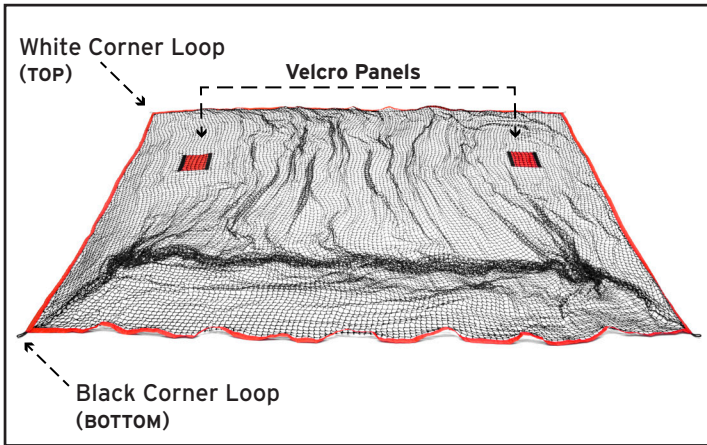


1. Lay net out flat on ground with the Velcro panels on the underside of the net

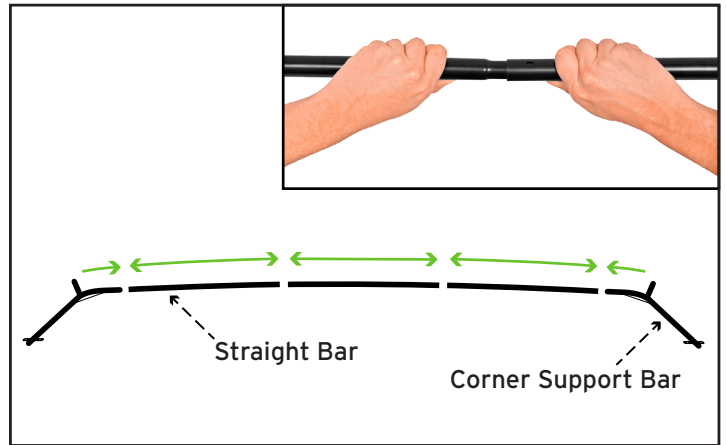


2. Assemble the metal base by connecting 3 straight bars to each corner support bar. Make sure the pins lock together.

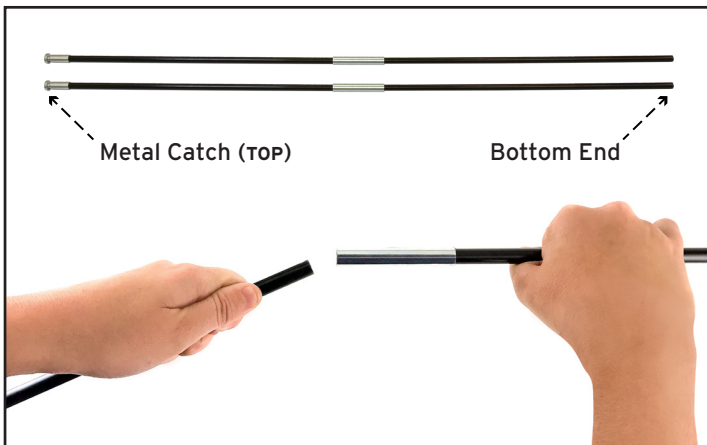


3. Connect each pair of tent poles to create 2 longer tent poles. The top end has a metal catch for the white corner loop. The bottom end slides into the metal base.

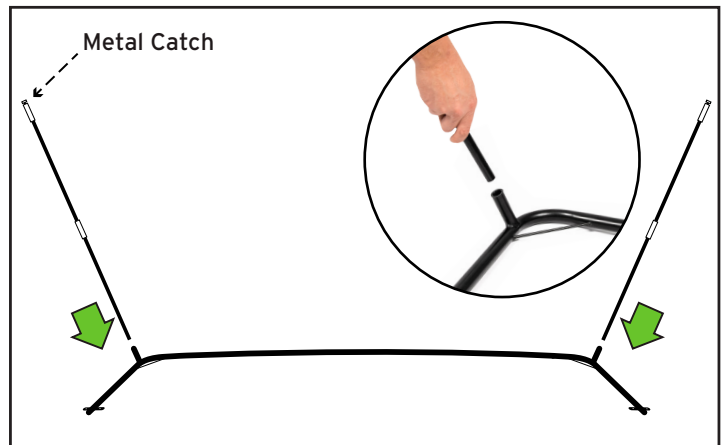

4. Insert the **Bottom Ends** of the tent poles into the metal base. Use your foot to stabilize the base as needed.

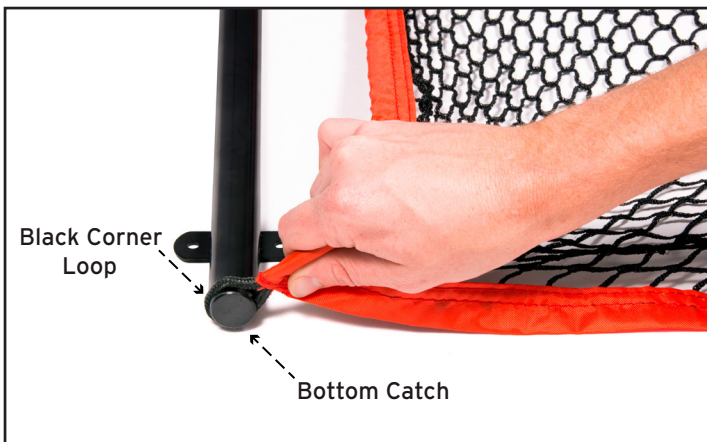

5. Attach the **Black Corner Loops** to the **Bottom Catch** at the two ends of the metal base. Make sure the loop is completely secured to the bottom catch.

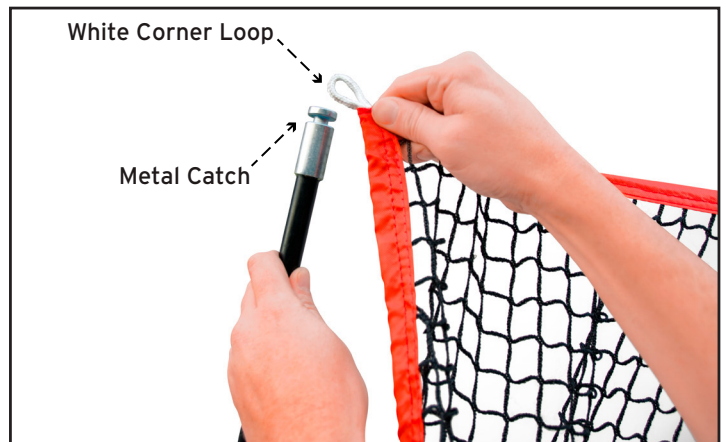

6. Attach **White Corner Loops** to the **Metal Catch** at the top of the tent poles. Make sure the loop is completely secured to the tent pole as it will be under tension.

Golf Practice Net



7. Wrap Velcro Panels around tent pole and secure tightly.
Repeat on other side.



8. Optional stakes for securing to the ground.

Clip-On Target

For chipping target practice, attach the clip-on target to any area on the net.



CAUTION-ASSEMBLY: THE GOSPORTS GOLF PRACTICE NET SHOULD ONLY BE ASSEMBLED AND DISASSEMBLED BY ADULTS. TENT POLES HOLD TENSION TO SUPPORT THE NET WHEN FULLY ASSEMBLED. CAUTION SHOULD BE EXERCISED WHEN ASSEMBLING AND DISASSEMBLING THE NET TO ENSURE POLES DO NOT SNAP OUT CAUSING INJURY.

CAUTION-USE: IMMEDIATELY STOP USING THE PRODUCT IF ANY PARTS BREAK OR THE NET DEVELOPS ANY HOLES AND CONTACT GOSPORTS AT INFO@PANDPIMPORTS.COM FOR REPLACEMENT PARTS. ONLY TO BE USED BY 1 PERSON AT A TIME AND ENSURE THE HITTER IS CLEAR OF PEOPLE OR OBSTACLES BEFORE SWINGING A CLUB. DO NOT STAND TOO CLOSE TO THE TARGET WHERE YOUR CLUB MAY HIT THE NET OR FRAME, BUT BE AWARE OF ERRANT SHOTS THAT MAY MISS THE TARGET (ABOVE OR TO THE SIDES). GOSPORTS IS NOT RESPONSIBLE FOR ANY DAMAGE OR INJURIES ARISING FROM ERRANT SHOTS THAT MISS THE TARGET. FOR USE WITH GOLF BALLS ONLY.