

 


# Instruction Manual

SKU # 1003146128  
Model: CHZH1761887TH4

## WARNING - Risk of Fire and Electric Shock:


1. Read all instructions and warning tags included with this tree.
2. For Indoor and Covered Entry Use. Do not place in uncovered area where there is prolonged exposure to sunlight or where rain/snow accumulates in the pot or on the tree.
3. Do not place near gas or electric heaters, radiators, fireplaces, candles, barbecues or other similar sources of heat.
4. Place on a level, hard, flat surface against the wall; do not place where tree is likely to wobble due to uneven floors or thick carpeting.
5. Do not use candles on tree.
6. After assembling the tree and adding decorations, make sure the tree is stable. If the is not stable, shift the weight of the decorations, and use support wires to walls and/or window frames (make sure they are secure also).
7. Do not overload extension cords or power strips, see ratings on those devices and check the rating labels on the tree for compatibility.
8. Do not install near fountains, bathtubs, sinks, pools or other areas of standing water.
9. Only use this product with extension cords rated for indoor and covered entry use.
10. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
12. Children should be supervised to ensure that they do not play with the appliance.
13. The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.
14. Unplug the product when leaving the house, when retiring for the night, or if left unattended.

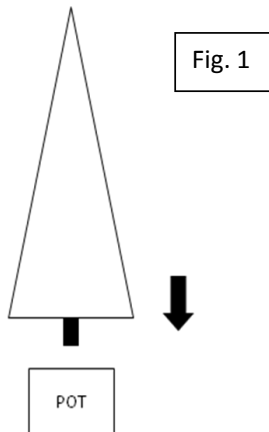

## Assembly Instructions

Make sure to place the pot on a level, hard, flat surface against the wall before assembling the tree.

 1. Insert tree into the pot as shown in (Fig. 1).
2. Manually pull down each branch on the tree from the tree trunk.
3. Shape the branches. Shift branches to fill any gaps, lightly upswEEP all branch tips for a uniform look. Straighten the branches of the flowers, berries, baubles on the tree so that they are visible.
4. Plug the cord into wall outlet.

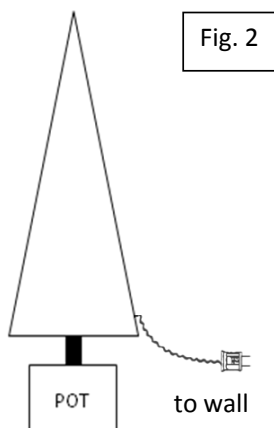

SAVE THESE INSTRUCTIONS

P. 1

MADE IN CHINA

## STORAGE :

(1) Unplug cord from the wall outlet.

(2) Gently lift off the tree from the pot and carefully place the tree and the pot in its box and tape it shut.

DO NOT STORE TREE IN A DAMP AREA OR IN AN AREA WHERE THE TEMPERATURE EXCEEDS 100° F

## TROUBLE SHOOTING INSTRUCTIONS

 
### If Lights Do Not Work:

1. Be sure there is power to the outlet.
2. Check whether all bulbs are tightly fixed inside the lamp holder.
3. If a bulb is blown, replace the faulty bulb following the below diagram.

There are spare bulbs included for easy replacement.



4. If none of the lights are working, check the fuse in light string. If the fuse is blown, replace the blown fuse following the below diagram. There are spare fuses included for easy replacement.

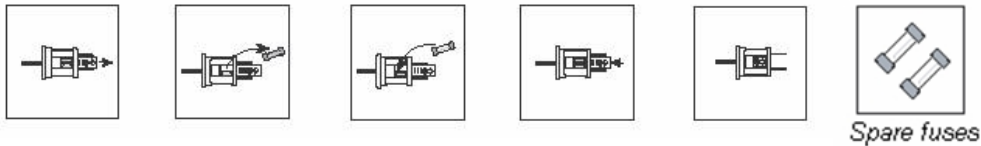

**Note: For festive use only, not intended for consecutive use over 90 days each season.**

Please read assembly instructions. The parts for this product have been carefully inspected and packed. If you have any questions or problems regarding this product, please call our toll-free helpdesk at **1-800-919-6564**, available 7 days a week, 24 hours a day.

SAVE THESE INSTRUCTIONS

P. 2

MADE IN CHINA