

SIZE:210X140MM

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed including the following:

a. **READ AND FOLLOW ALL SAFETY INSTRUCTIONS.**

- b. Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting [GFCI] outlet. If one is not provided, contact a qualified electrician for proper installation.
- c. This seasonal use product is not intended for permanent installation or use.
- d. Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
- e. Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- f. Do not let lamps rest on the supply cord or on any wire.
- g. Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- h. This is an electric product-not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
- i. Do not use this product for other than its intended use.
- j. Do not hang ornaments or other objects from cord, wire, or light string.
- k. Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
- l. Do not cover the product with cloth, paper or any material not part of the product when in use.
- m. This product is equipped with push-in type lamps. Do not twist lamps.
- n. Read and follow all instructions that are on the product or provided with the product.

o. **SAVE THESE INSTRUCTIONS.**

## Use and Care Instructions

 
- a. Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the lampholders or enclosures, loose connections, or exposed copper wire.
- b. When storing the product, carefully remove the product from wherever it is placed, including tree branches or bushes, to avoid any undue strain or stress on the product conductors, connections, and wires.
- c. When not in use, store neatly in a cool, dry location protected from sunlight.

## USER SERVICING INSTRUCTIONS


### Lamp Replacement:

**Step 1:** Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.

**Step 2:** Lift up to unsnap locking tab, then pull lamp and plastic base straight out of lampholder.




**Step 3:** Replace lamp with only 3.6 Volt, 0.072 Watt or 2.4 Volt, 0.048 Watt LED type lamps provided with this product.

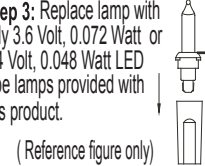

(Reference figure only)

If the new lamp base does not fit in lampholder, follow the steps below before step 3.

- a. Remove the base of burned out lamp by straightening lamp leads and gently pull lamp out .
- b. Thread leads of new lamp through holes in old base with one lead in each hole.
- c. After lamp is fully inserted into base, bend each lead up like other lamps in the light set so that the leads will touch the contacts inside the lampholder.

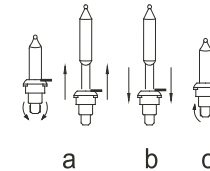

## CAUTION:

- 1. Risk of fire. This product does not contain lamp shunts, which allow the product to operate if one lamp burns out. Replace lamps only with the spare lamps provided with this product.

MODEL #: TG76M3P08D05

MADE IN CHINA