88 5523 89 **Bar Stool**

IMPORTANT NOTE


Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occurring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

Part List





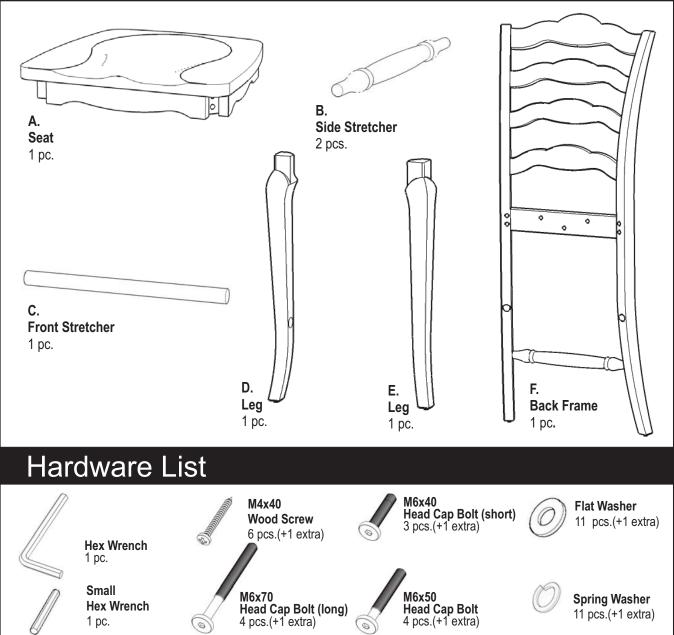


Tools required for assembly: Phillips screwdriver

Home Styles Consumer Assistance : www.homestyles-furniture.com, servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

Assembly Instructions 2/2

IMPORTANT

- * Do not tighten up all the screws until each part is properly assembled.
- * You should keep the Hex Wrench in a safe place as you may need to tighten up the Head Cap Bolts in the future.

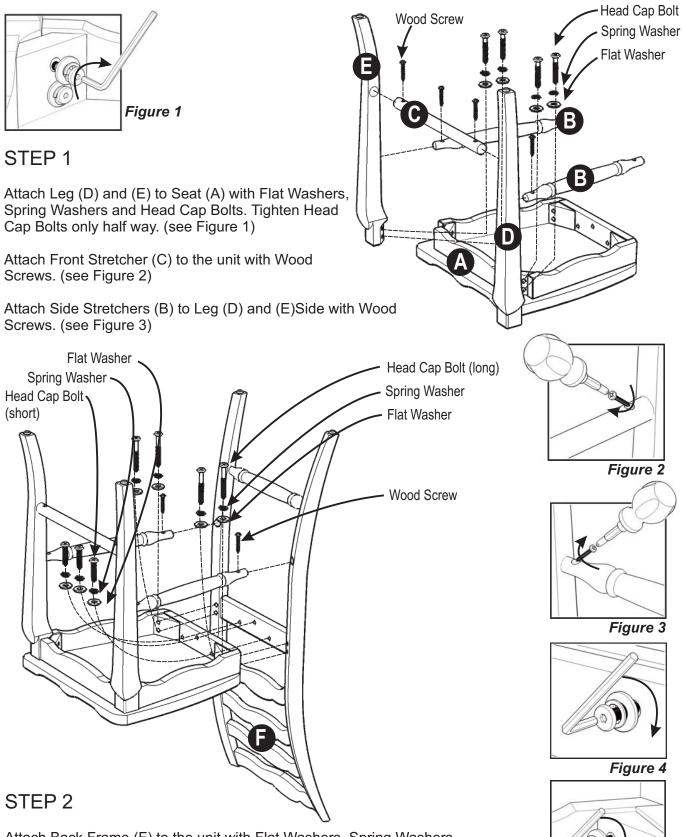

Attach Back Frame (F) to the unit with Flat Washers, Spring Washers, Head Cap Bolts (short), Head Cap Bolts (long) and Wood Screws. (See Figure 4), (See Figure 5)

Figure 5

Tighten up all Head Cap Bolts.

88 5523 943 Kitchen Island


IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occurring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.



Part List

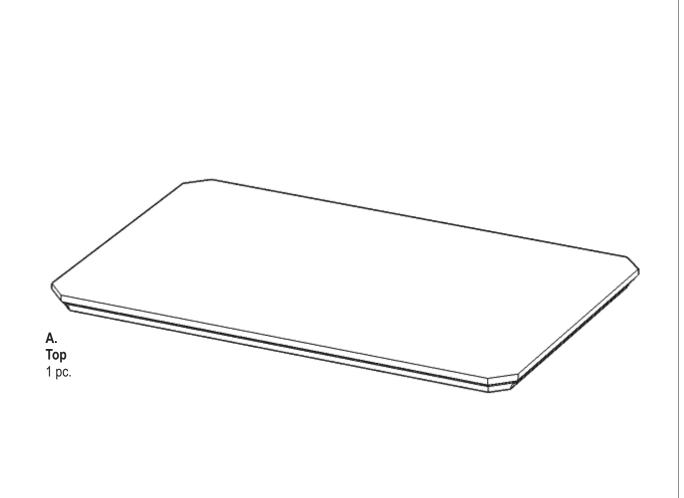

For assembly see instructions in carton 88 5523 942

Home Styles Consumer Assistance Line 888-680-7460 and 877-831-0319 servicedesk@homestyles-furniture.com

88 5523 941 **Kitchen Island**


IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occurring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.



Part List

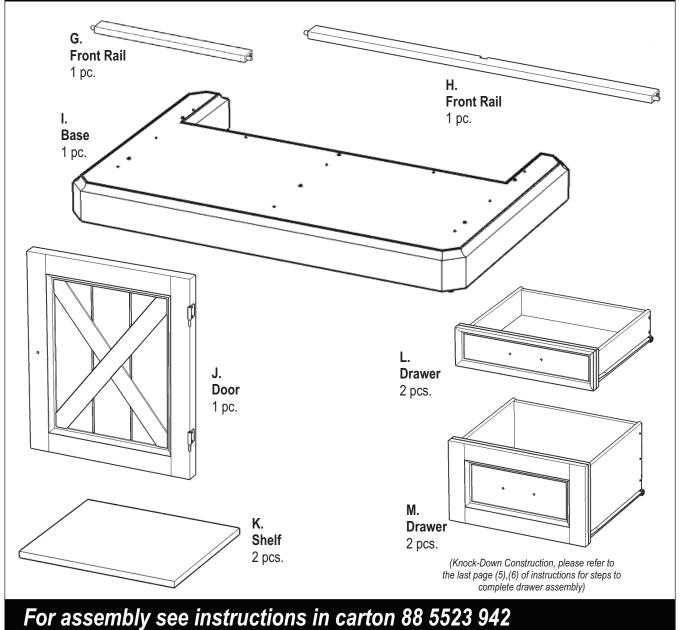

Home Styles Consumer Assistance Line 888-680-7460 and 877-831-0319 servicedesk@homestyles-furniture.com

88 5523 942 Kitchen Island


IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occurring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.



Part List

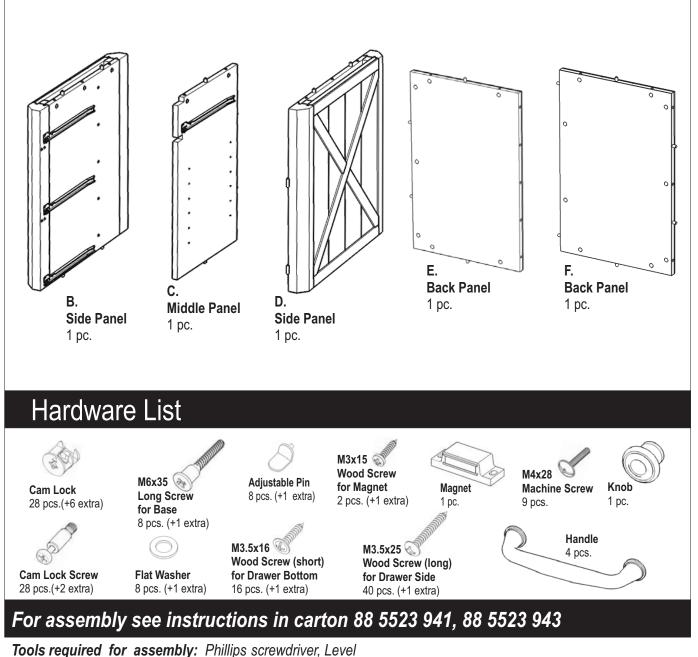


Home Styles Consumer Assistance Line 888-680-7460 and 877-831-0319 servicedesk@homestyles-furniture.com

Assembly Instructions 2/6


IMPORTANT

- * Do not tighten up all the screws until each part is properly assembled.
- * Use a soft cloth between these parts and the floor.

* After assembly, item must be level to work properly. Use the included adjustable levelers to level.

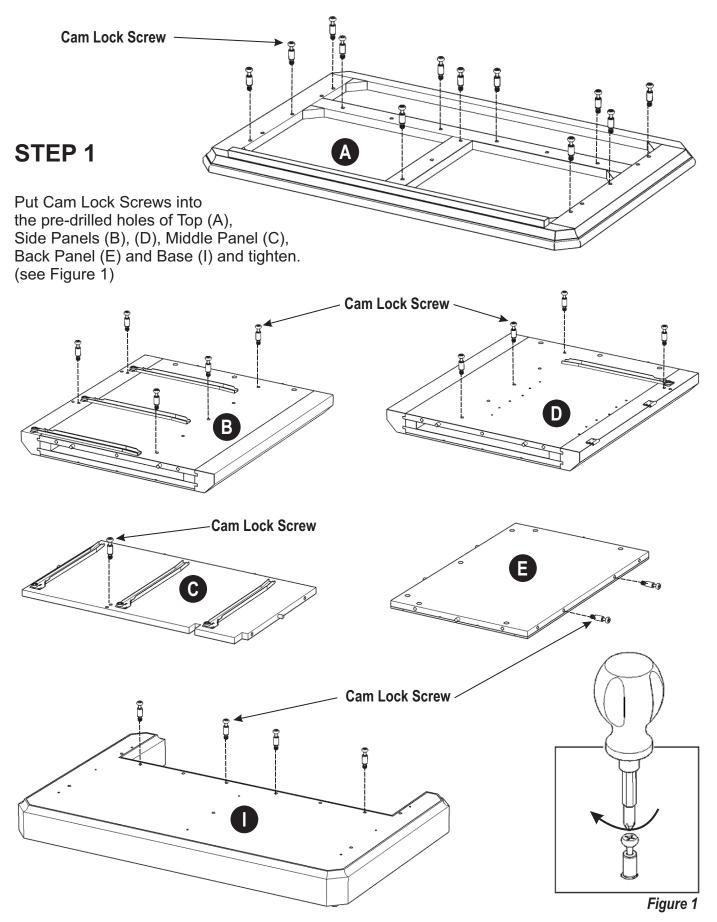


Assembly Instructions 3/6

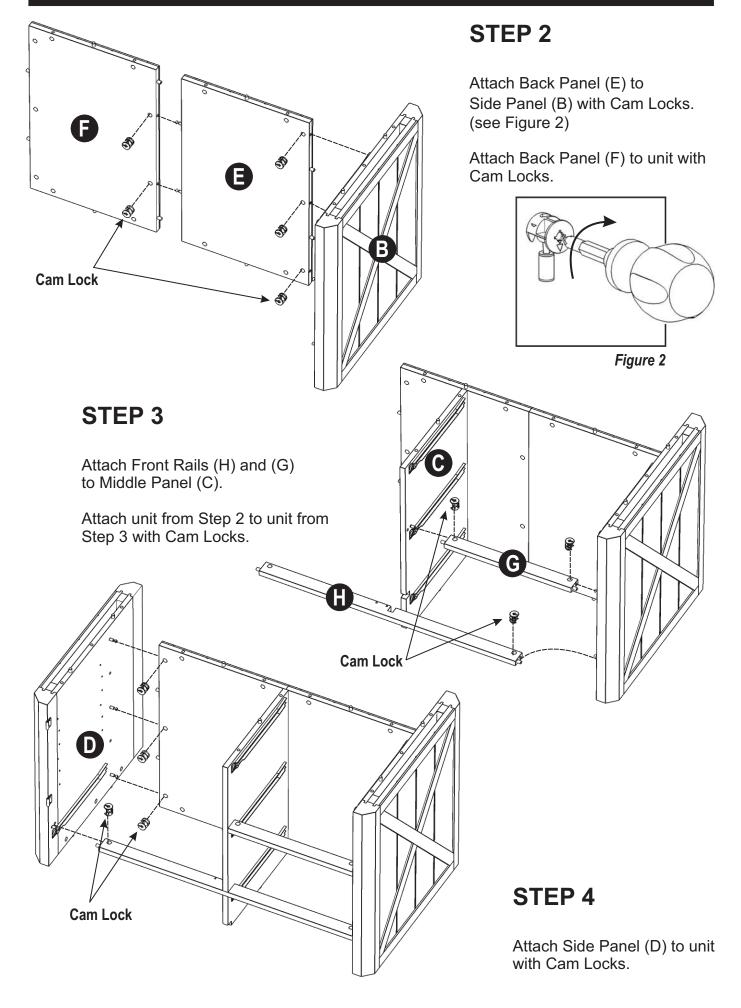

Assembly Instructions 4/6

STEP 5

Long Screw Flat Washer Attach Base (I) to unit with Washers, Long Screws and Cam Locks. (see Figure 3) Attach Magnet to unit with Wood Cam Lock Screws for Magnet. (see Figure 4) Wood Screw Magnet for Magnet Figure 4 Figure 3 ¢ Figure 5 Figure 6 Figure 7 **STEP 6**

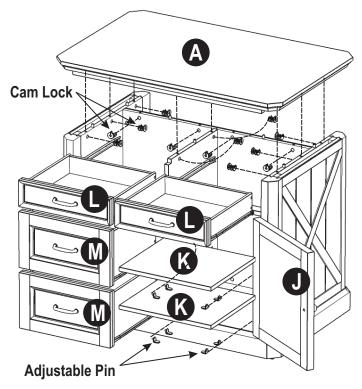

Turn the unit upright position, attach Top (A) to unit with Cam Locks.

Slide Drawers (L) and (M) into position.


Insert Adjustable Pins into side panel and middle panel at desired level, then place Shelves (K) into position.

Attach Door (J) by sliding the door lift hinges into the side panels lift hinges. (see Figure 5)

Assemble Knob to Door (J) with Machine Screws. (see Figure 6)

To level the unit, adjust the adjustable levelers on the bottom of unit. (see Figure 7)

Note: Unit must be level to work properly.

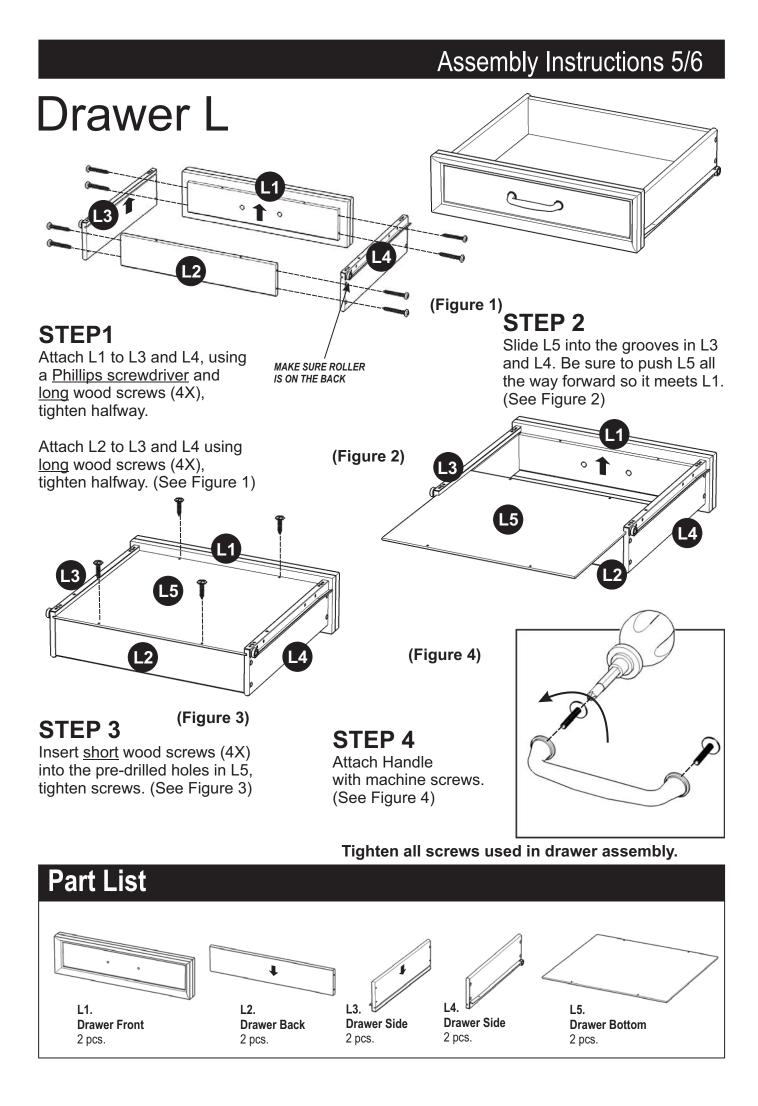

Assembly Instructions 6/6

